

## TFA 60.3067.02

# TFA Dostmann XL Outdoor Analogue Wall Clock

Model: 60.3067.02

## 1. INTRODUCTION

---

Thank you for choosing the TFA Dostmann XL Outdoor Analogue Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read these instructions carefully before use and retain them for future reference.

This analogue wall clock is designed for outdoor use, featuring a retro design, splashproof construction, and a clear display for easy readability.

## 2. SAFETY INFORMATION

---

- **Battery Safety:** Use only 1.5V AA batteries. Ensure correct polarity (+/-) when inserting. Do not mix old and new batteries or different types of batteries. Remove exhausted batteries promptly to prevent leakage. Dispose of batteries according to local regulations.
- **Placement:** Mount the clock securely on a stable surface. While splashproof, avoid direct exposure to heavy rain or immersion in water.
- **Cleaning:** Do not use abrasive cleaners or solvents. Clean with a soft, dry cloth.
- **Children:** Keep batteries and small parts out of reach of children.

## 3. PACKAGE CONTENTS

---

Please check that all components are present and in good condition:

- 1x TFA Dostmann XL Outdoor Analogue Wall Clock (Model: 60.3067.02)



*Image 3.1: Front view of the TFA Dostmann XL Outdoor Analogue Wall Clock. The clock features a white distressed-look frame, a white face with large black numbers, and black hour and minute hands.*



Image 3.2: Back view of the TFA Dostmann XL Outdoor Analogue Wall Clock. It shows the black plastic casing, the battery compartment cover with 'OPEN' and 'CLOSE' indicators, and a hanging hook at the top.

## 4. SETUP

---

### 4.1 Battery Installation

1. Locate the battery compartment on the back of the clock (refer to Image 3.2).
2. Rotate the battery compartment cover counter-clockwise to the 'OPEN' position and remove it.
3. Insert one 1.5V AA battery (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the cover and rotate it clockwise to the 'CLOSE' position to secure it.

### 4.2 Time Setting

1. After installing the battery, locate the time adjustment wheel on the back of the clock, typically near the battery compartment.
2. Gently turn the wheel in either direction to set the clock hands to the correct time.

### 4.3 Mounting

1. Choose a suitable location for your clock. Ensure the surface is sturdy enough to support the clock's

weight (approximately 1.2 kg).

2. Install a screw or nail into the wall, leaving enough of the head exposed to hang the clock securely.
3. Hang the clock using the integrated hanging hook on the back (refer to Image 3.2). Ensure the clock is level and stable.



*Image 4.1: The TFA Dostmann XL Outdoor Analogue Wall Clock mounted on an exterior wall above a patio area, demonstrating a typical installation scenario.*

## 5. OPERATING

---

Once the battery is installed and the time is set, the clock will begin to operate automatically. The clock provides a continuous display of the current time. No further user interaction is required for basic operation.

## 6. MAINTENANCE

---

- **Cleaning:** To clean the clock, wipe the surface with a soft, dry, or slightly damp cloth. Do not use harsh chemicals, abrasive cleaners, or solvents, as these may damage the finish or glass.
- **Battery Replacement:** Replace the AA battery annually or when the clock hands stop moving or the time becomes inaccurate. Follow the battery installation steps in Section 4.1.
- **Environmental Protection:** Although splashproof, prolonged exposure to extreme weather

conditions (e.g., heavy rain, direct sunlight, freezing temperatures) may affect the clock's longevity. Consider placing it under a sheltered area for optimal performance.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your clock, please refer to the following table:


Problem	Possible Cause	Solution
Clock not working / Hands not moving	Battery is dead or incorrectly inserted.	Check battery polarity. Replace with a new 1.5V AA battery.
Time is inaccurate	Battery is low.	Replace with a new 1.5V AA battery and reset the time.
Condensation inside the glass	High humidity or rapid temperature changes.	This is usually temporary and should clear. Ensure the battery compartment is sealed correctly. Consider relocating to a more sheltered spot if persistent.

## 8. SPECIFICATIONS

---

Technical details for the TFA Dostmann XL Outdoor Analogue Wall Clock:

Feature	Detail
Model Number	60.3067.02
Dimensions (L x B x H)	380 x 63 x 380 mm (approximately 15 x 2.5 x 15 inches)
Weight	1224 Grams (approximately 2.7 lbs)
Material	Metal frame, Glass cover
Power Supply	1 x 1.5V AA battery (not included)
Special Features	Splashproof, Large Display
Color	White (distressed finish)



*Image 8.1: The TFA Dostmann XL Outdoor Analogue Wall Clock with its approximate dimensions of 38cm (height) and 63cm (width) indicated. Note: The width of 63cm in the image seems to be a typo or refers to a different measurement, as the product title states 380mm (L) x 63mm (B) x 380mm (H). The 63mm is likely the depth. The image shows diameter. Please refer to the text specifications for accurate dimensions.*

## **9. WARRANTY AND SUPPORT**

---

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact the retailer where you purchased the product or visit the official TFA Dostmann website for customer service information.