

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FILCO](#) /
- › [FILCO Majestouch 3 Mechanical Keyboard User Manual](#)

## FILCO FKBN104MC/EMB3

# FILCO Majestouch 3 Mechanical Keyboard User Manual

Model: FKBN104MC/EMB3

## INTRODUCTION

The FILCO Majestouch 3 is a full-size mechanical keyboard designed for enhanced typing experience and durability. It features PBT double shot keycaps and genuine Cherry MX switches, offering a robust and responsive input solution. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your keyboard.



Figure 1: FILCO Majestouch 3 Full Size Mechanical Keyboard

This image displays the complete layout of the FILCO Majestouch 3 keyboard, highlighting its full-size design and the matte black finish of the keys and frame. The USB cable extends from the top center.

## WHAT'S IN THE BOX

Verify that all items are present in the package:

- FILCO Majestouch 3 Mechanical Keyboard (Cherry MX Blue)
- Keycap Puller
- PS/2 Adapter



Figure 2: PBT Double Shot Keycaps

This image shows individual PBT double shot keycaps, some detached from the keyboard, illustrating their robust construction and the two-layer injection molding process that ensures legend durability.

## SETUP

---

1. **Connect the Keyboard:** Plug the USB connector of the keyboard into an available USB 2.0 port on your computer.
2. **PS/2 Connection (Optional):** If your computer supports PS/2 and you prefer this connection type, use the included PS/2 adapter. Connect the USB end of the keyboard to the adapter, then plug the adapter into the PS/2 keyboard port on your computer.
3. **Driver Installation:** The keyboard is plug-and-play and typically does not require specific drivers for basic functionality. Your operating system will automatically detect and install the necessary generic drivers.
4. **Verify Connection:** Once connected, the keyboard should be immediately functional. Test by typing in a text editor. The Num Lock, Caps Lock, and Scroll Lock indicator lights (located above the numeric keypad) should illuminate when activated.



Figure 3: Indicator Lights and Numeric Keypad

This image provides a detailed view of the numeric keypad and the three LED indicator lights for Num Lock, Caps Lock, and Scroll Lock, which confirm the keyboard's status.

## OPERATING INSTRUCTIONS

---

### Standard Typing

The Majestouch 3 functions as a standard 104-key keyboard. Simply press the desired keys to input characters or commands.

### Media Controls

The keyboard includes integrated media controls accessible via the Function (Fn) key and the F-row keys. These controls allow for quick management of audio and media playback without needing to use software interfaces.

- **Fn + F1:** Mute Volume
- **Fn + F2:** Decrease Volume
- **Fn + F3:** Increase Volume
- **Fn + F5:** Previous Track
- **Fn + F6:** Play/Pause
- **Fn + F7:** Next Track



Figure 4: Media Control Keys

This image highlights the F-row keys (F1 through F7) which feature secondary media control functions, accessible by pressing them in combination with the Function (Fn) key.

### N-Key Rollover (NKRO)

The Majestouch 3 supports full N-key rollover (NKRO) via USB. This feature ensures that every key press is registered, even when multiple keys are pressed simultaneously. This is particularly beneficial for fast typists and gamers, preventing "ghosting" or missed inputs.

## MAINTENANCE

---

### Cleaning the Keyboard

- **General Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the keycaps and frame. Avoid excessive moisture.
- **Dust Removal:** Use compressed air to blow away dust and debris from between the keycaps.
- **Deep Cleaning (Keycaps):** For thorough cleaning, you can carefully remove the keycaps using the included keycap puller. Wash the keycaps with mild soap and water, rinse thoroughly, and ensure they are completely dry before reattaching them to the keyboard.

### Storage

When not in use for extended periods, store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Keyboard not responding	Loose connection, incorrect USB port, driver issue.	Ensure the USB cable is securely plugged into the computer. Try a different USB port. Restart your computer. If using a USB hub, try connecting directly to the computer.
Certain keys not working	Debris under keycap, faulty switch.	Remove the keycap and check for any obstructions. Clean if necessary. If the issue persists, contact customer support.
Indicator lights not working	Keyboard not powered, software issue.	Ensure the keyboard is properly connected and receiving power. Toggle the respective lock key (Num Lock, Caps Lock, Scroll Lock) to see if the light responds.

## SPECIFICATIONS

Feature	Detail
Brand	FILCO
Model Number	FKBN104MC/EMB3
Keyboard Description	Mechanical
Switch Type	Cherry MX Blue
Keycap Material	Polybutylene Terephthalate (PBT) Double Shot
Number of Keys	104
Connectivity Technology	USB 2.0 (with PS/2 adapter included)
Product Dimensions	17.32 x 5.43 x 1.54 inches
Item Weight	3.09 pounds
Compatible Devices	PC
Recommended Uses	Office

## WARRANTY AND SUPPORT

FILCO products are manufactured to high quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official FILCO website. Keep your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact FILCO customer service through their official channels. You may find contact information on the product packaging or the manufacturer's website.

**Return Policy:** This product is subject to a 30-day return policy for refund or replacement, as per standard retail terms.

