

[Manuals.plus](#) /

› [4moms](#) /

› 4moms MamaRoo Multi-Motion Baby Swing User Manual

4moms B0BBVF5551



4moms MamaRoo Multi-Motion Baby Swing

USER MANUAL

1. Introduction

The 4moms MamaRoo Multi-Motion Baby Swing is designed to provide comfort and entertainment for your baby with its unique motions and features. This manual provides essential information for the safe and proper use, assembly, and maintenance of your MamaRoo swing.

This bundle includes one MamaRoo Multi-Motion Baby Swing and one Mesh Infant Insert.

2. Safety Information

Always read and follow all instructions before using the MamaRoo Multi-Motion Baby Swing. Failure to do so could result in serious injury or death.

- Never leave your child unattended in the swing.
- Discontinue use of the product when the baby begins to push up on hands and knees, or has reached 25 lbs (11.3 kg), whichever comes first.
- Ensure all components are securely assembled before placing a child in the swing.
- Do not use the swing if it is damaged or broken.
- Keep cords and small parts away from children.

3. What's Included

Your 4moms MamaRoo Multi-Motion Baby Swing package should contain the following components:

- MamaRoo Multi-Motion Baby Swing unit
- Mesh Infant Insert (Yellow)
- Power adapter
- Interactive removable toy balls







Image: The 4moms MamaRoo Multi-Motion Baby Swing in Classic Black, featuring the yellow mesh infant insert and overhead toy bar with three interactive balls.



Image: A close-up view of the yellow mesh infant insert, designed to provide additional comfort and support for newborns in the MamaRoo swing.

4. Setup

Assembly of the MamaRoo Multi-Motion Baby Swing is required. Please follow the instructions provided in the separate assembly guide for detailed steps. Ensure all connections click into place and the swing is stable before use.

- Unpack all components and verify against the "What's Included" list.
- Assemble the base and seat frame according to the visual instructions.
- Attach the seat fabric and infant insert.
- Connect the power adapter to the swing and a wall outlet.



Image: A diagram highlighting key features of the MamaRoo swing, including interactive removable toys, supportive seat with machine-washable fabric, 3-to-5 point convertible harness, adjustable recline, and controls for 5 motions, 5 speeds, and 4 sounds.

5. Operating Instructions

The MamaRoo Multi-Motion Baby Swing offers various features to soothe and entertain your baby:

- **Motions & Speeds:** Choose from 5 parent-inspired motions (e.g., car ride, kangaroo, tree swing, rock-a-bye, wave) and 5 speeds. Adjust these using the controls on the base or via the 4moms app.
- **Sounds:** The swing includes 4 built-in sounds. You can also stream your baby's favorite music or sounds via Bluetooth from your phone.
- **Bluetooth Functionality:** Control the swing's features (motion, speed, sound) directly from your smartphone using the 4moms app.
- **Wi-Fi Smart Home Integration:** For added convenience, the MamaRoo can be controlled with voice commands through Amazon Alexa and Google Home (currently in Beta phase).
- **Adjustable Recline:** The seat recline can be adjusted to find the most comfortable position for your baby.
- **Interactive Toys:** The overhead toy bar includes three reversible, interactive toy balls to engage your baby.

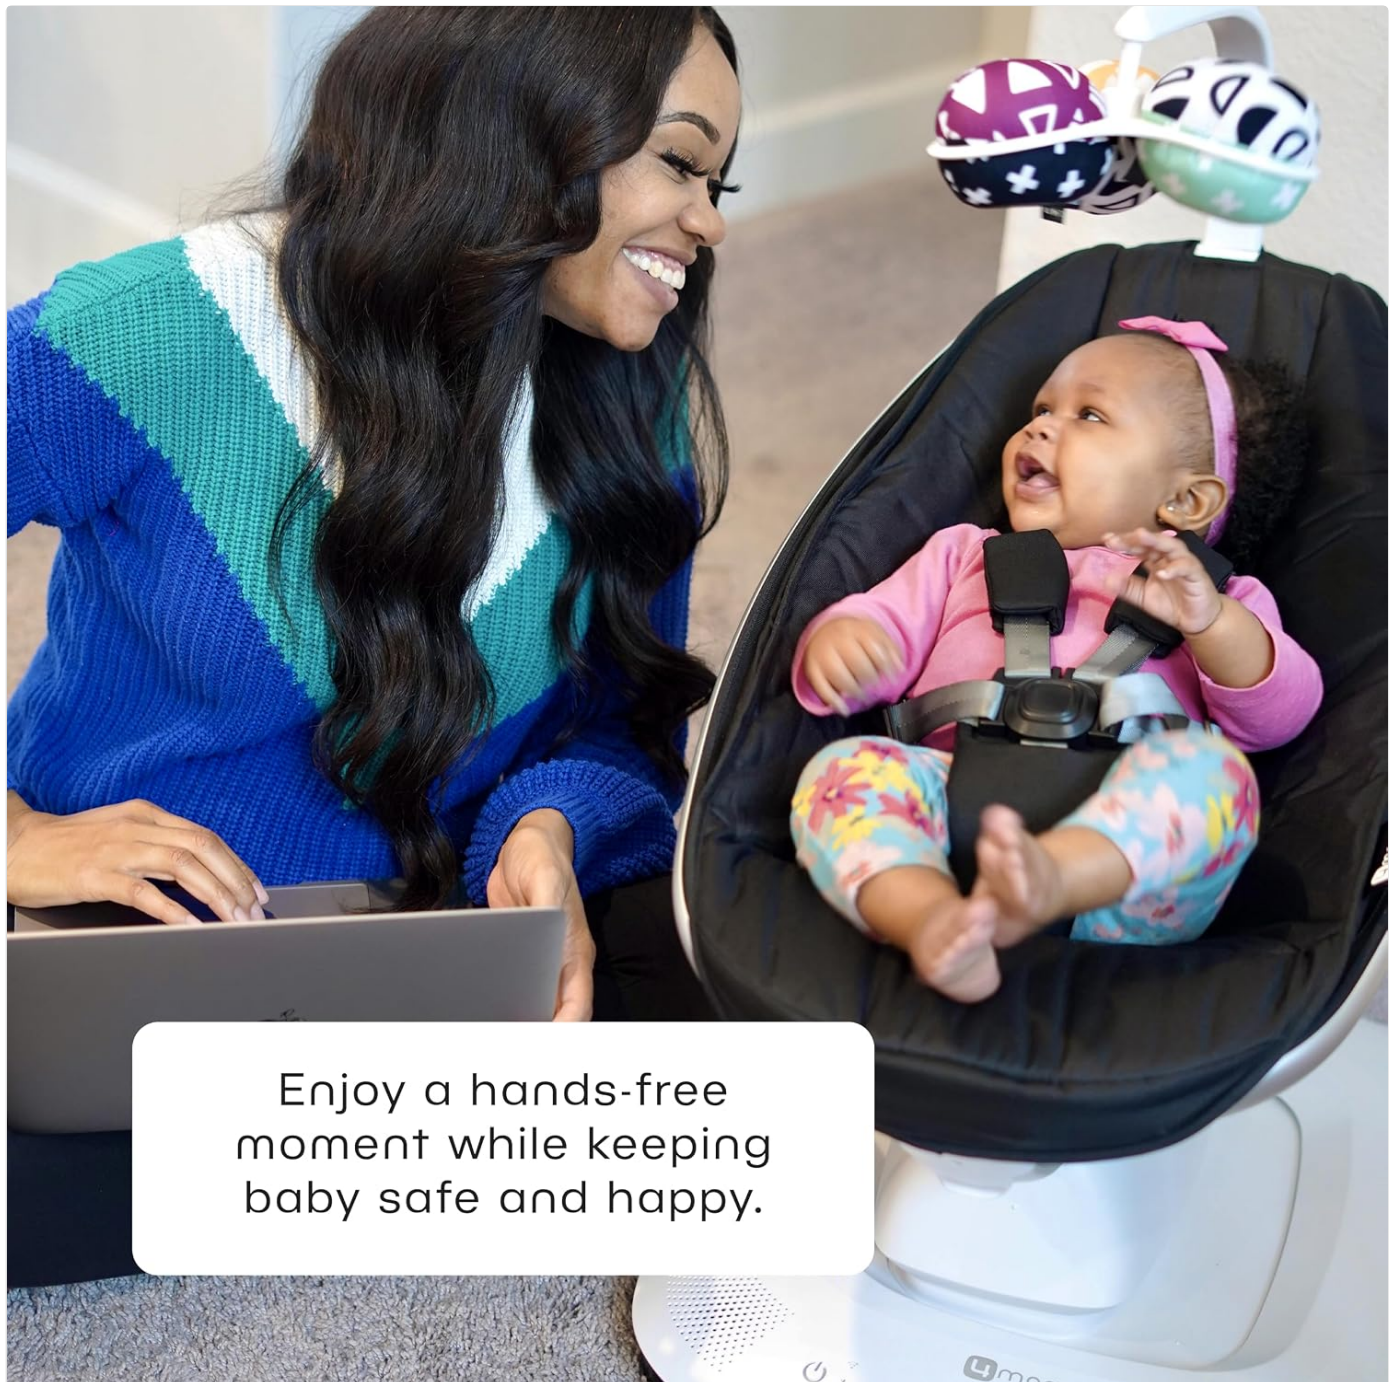


Image: A woman standing next to a MamaRoo swing, looking at her phone which displays the 4moms app interface for selecting motions. The text "FIND YOUR ROO" is visible, indicating the app's feature to tailor motion and speed combos.

BLUETOOTH COMPATIBLE

Easily adjust motion,
speed, or sound with
the 4moms app.

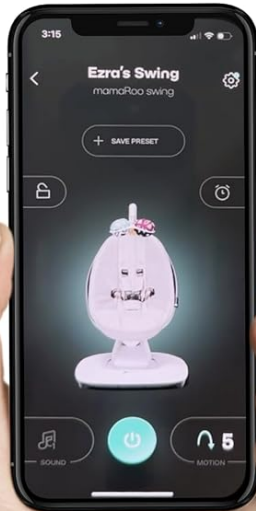


Image: A baby happily sitting in the MamaRoo swing while a woman works on a laptop nearby, illustrating the benefit of hands-free moments for parents.

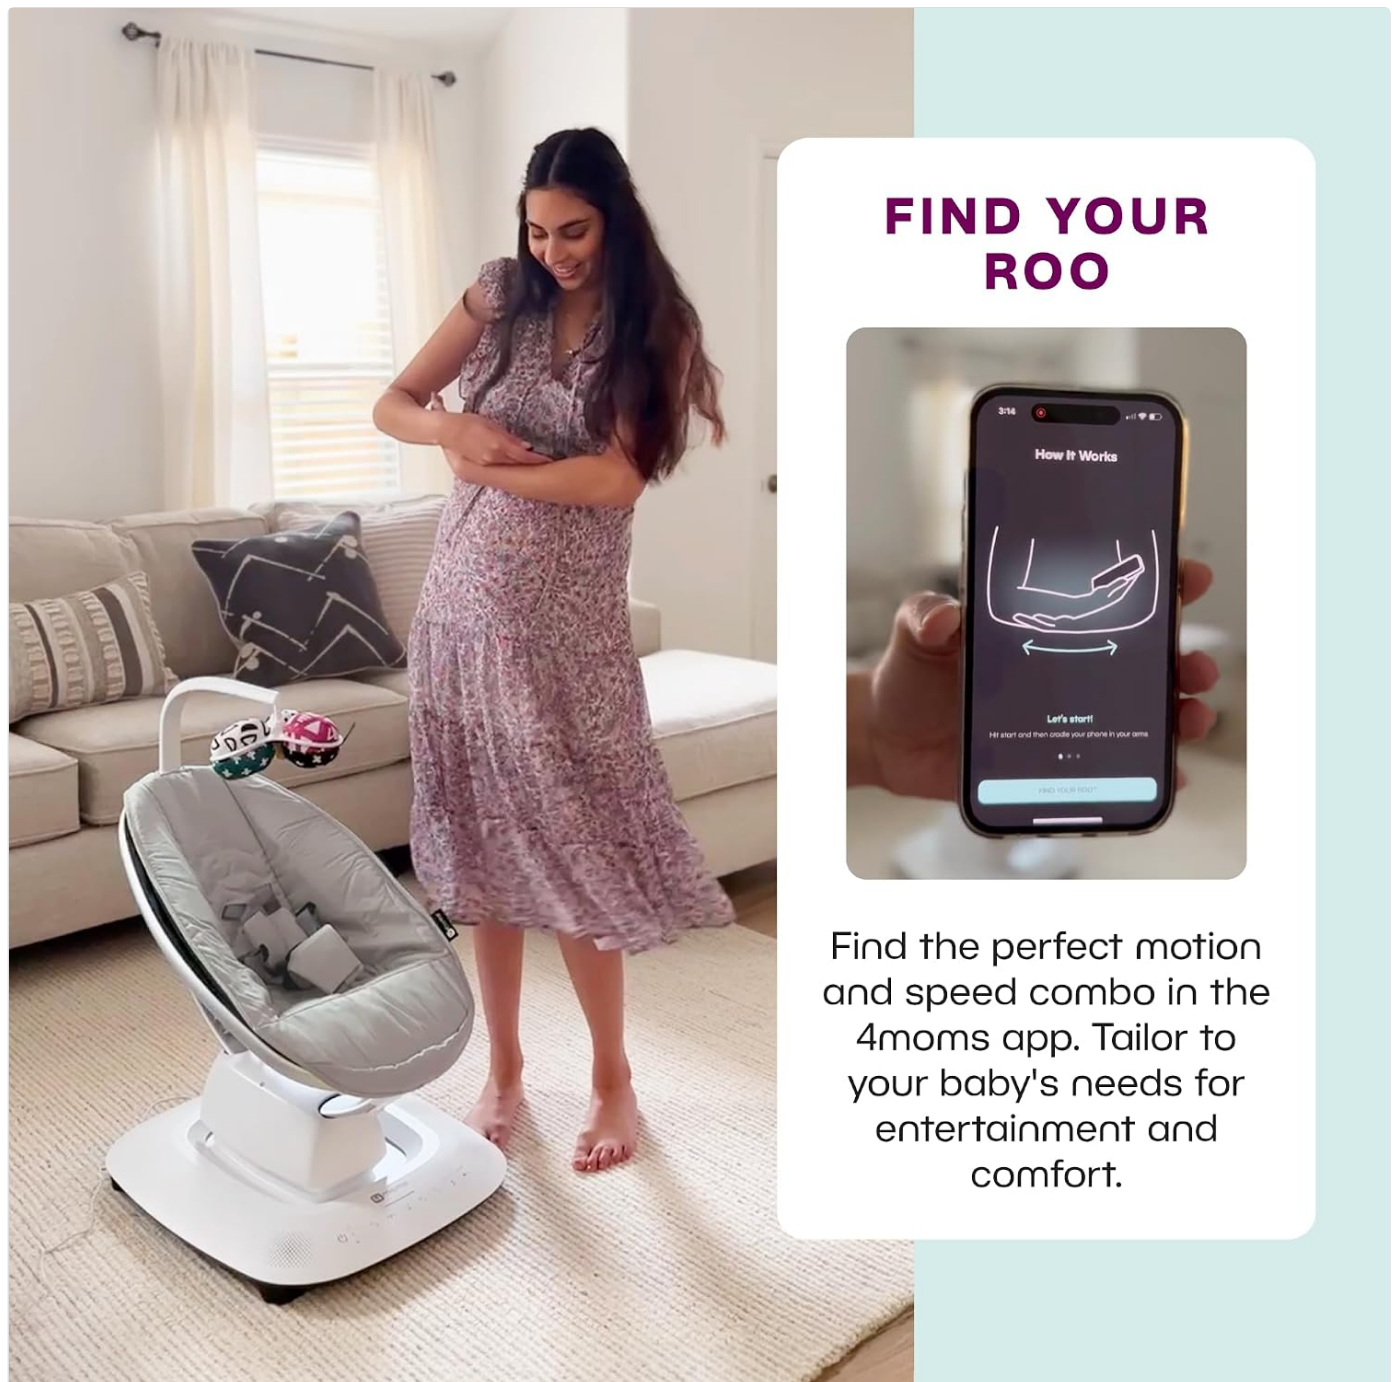


Image: A hand holding a smartphone displaying the 4moms app, demonstrating the Bluetooth compatibility for easily adjusting motion, speed, or sound settings of the swing.

6. Maintenance and Care

Proper care ensures the longevity and hygiene of your MamaRoo Multi-Motion Baby Swing:

- **Cleaning the Fabric:** The MamaRoo baby swing seat fabric and the infant insert are machine washable. Refer to the care tag for specific washing instructions.
- **Frame Cleaning:** Wipe down the plastic and metal parts of the swing frame with a damp cloth and mild soap. Do not immerse the base in water.
- **Storage:** When not in use, store the swing in a clean, dry place away from direct sunlight.

7. Troubleshooting

If you encounter issues with your MamaRoo Multi-Motion Baby Swing, refer to the following common solutions:

Problem	Possible Cause / Solution
Swing is not turning on.	Ensure the power adapter is securely plugged into both the swing and a working wall outlet. Check for power outages.
Swing is shaky or not smooth.	Verify that all assembly connections are secure and tightened. Ensure the swing is placed on a flat, stable surface. If the issue persists, contact 4moms customer support.
Bluetooth connection issues.	Ensure Bluetooth is enabled on your device and the 4moms app is updated. Try restarting both the swing and your device.
Swing stops unexpectedly.	Check if the baby has exceeded the weight limit (25 lbs / 11.3 kg). Ensure there are no obstructions preventing movement.

8. Specifications

- **Brand:** 4moms
- **Model:** MamaRoo Multi-Motion Baby Swing
- **ASIN:** B0BBVF5551
- **Color:** Yellow (with Classic Black swing)
- **Material:** Mesh (infant insert)
- **Age Range (Description):** Baby
- **Maximum Weight Capacity:** 25 lbs (11.3 kg)
- **Assembly Required:** Yes
- **Care Instructions:** Machine Wash (fabric and insert)
- **Portable:** No

9. Warranty and Support

For warranty information, product registration, or technical support, please visit the official 4moms website or contact their customer service. Keep your proof of purchase for warranty claims.

4moms Official Website: www.4moms.com

