

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Replacement Remote Control Instruction Manual for Sony Blu-ray Players

## ALLIMITY RMT-VB201U, RMT-VB100U, RMT-VB201D

# ALLIMITY Replacement Remote Control Instruction Manual

Models: RMT-VB201U, RMT-VB100U, RMT-VB201D

## INTRODUCTION

---

This manual provides essential information for the proper use and maintenance of your ALLIMITY replacement remote control. This remote is designed to function as a direct replacement for various Sony Blu-ray Player models, requiring no programming or pairing. Please read this manual thoroughly before use.



Image: The ALLIMITY replacement remote control, highlighting its key features and compatibility with a television setup.

## SETUP

### Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process.

## Initial Use

This ALLIMITY replacement remote control is designed for immediate use with compatible Sony Blu-ray Players. No programming, pairing, or setup is required. Simply insert the batteries, and the remote is ready to operate your device.

## OPERATING INSTRUCTIONS

---

The remote control utilizes infrared (IR) technology for communication with your Blu-ray player. Ensure a clear line

of sight between the remote's IR emitter and your player's IR receiver for optimal performance.

## Button Functions

The remote features soft, responsive buttons for comfortable and precise control. Refer to the image below for a general layout and common button functions:



Image: Front view of the remote control, emphasizing sensitive buttons and ergonomic design.

- **Power Button** ( ): Turns the Blu-ray player on or off.
- **TV Power Button** ( ): Controls the power of a connected TV (if compatible).
- **Directional Pad (Up, Down, Left, Right, Enter)**: Navigates menus and selects options.
- **HOME Button**: Accesses the main menu of the Blu-ray player.
- **TOP MENU / POP UP/MENU**: Accesses disc menus.
- **RETURN / OPTIONS**: Navigates back or opens context-sensitive options.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip)**: Controls media playback.
- **SUBTITLE / AUDIO / DISPLAY**: Controls subtitle, audio track, and display information settings.
- **Volume (+/-) / Mute**: Controls TV volume (if compatible).

## Compatible Models

This remote control is compatible with a wide range of Sony Blu-ray Player models, including but not limited to:

- BDP-6500, BDP-S1500, BDP-S1500B, BDP-S3500, BDP-S3500B, BDP-S4500, BDP-S5500, BDP-S5500B, BDP-S6500, BDP-S6500B
- BDP-S1700, BDP-S185, BDP-S6700B, BDP-S3700, BDP-S6700, BDP-BX370, BDP-S1700ES
- UBP-X800, UBP-X700, UBP-X700/M, UBP-UX70

## MAINTENANCE

---

### Cleaning

To maintain the remote control's appearance and functionality, clean it regularly:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

### Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not working	Dead or incorrectly installed batteries.	Check battery orientation. Replace with fresh AAA batteries.
Remote has short range or intermittent response	Obstruction between remote and player; weak batteries; interference.	Ensure clear line of sight. Replace batteries. Move away from strong light sources or other IR devices.
Certain buttons do not function	Remote not fully compatible with specific player function; button malfunction.	Verify your player model is listed as compatible. If other buttons work, contact support.
Remote does not control TV functions	TV not compatible with remote's TV control codes.	This remote is primarily for Blu-ray players. TV control functionality may vary or not be supported by all TVs.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please contact customer support for further assistance.

## SPECIFICATIONS

---

- **Brand:** ALLIMITY

- **Connectivity Technology:** Infrared (IR)
- **Special Feature:** No Programming Required
- **Compatible Devices:** Sony Blu-ray Players (various models)
- **Maximum Range:** Approximately 10 meters (33 feet)
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** ABS
- **Item Weight:** Approximately 2.5 Ounces

## SUPPORT

---

ALLIMITY is committed to providing exceptional after-sales service. If your device model is not explicitly listed as compatible, or if you experience any issues with the remote control, please contact our customer support team.

We will assist you in finding the correct solution.

For support inquiries, please refer to the contact information provided with your purchase or on the ALLIMITY official website.