

[Manuals.plus](#) /

> [4moms](#) /

> 4moms MamaRoo Multi-Motion Baby Swing Instruction Manual

4moms Model 1046

4moms MamaRoo Multi-Motion Baby Swing Instruction Manual

Model: MamaRoo Multi-Motion Baby Swing (Model 1046)

INTRODUCTION

The 4moms MamaRoo Multi-Motion Baby Swing is designed to provide a comforting and engaging environment for your baby, mimicking natural parent movements. This manual provides essential information for the safe and proper setup, operation, and maintenance of your MamaRoo Multi-Motion Baby Swing and the included Plush Infant Insert.





Image: The 4moms MamaRoo Multi-Motion Baby Swing in Classic Black, featuring the main unit with a dark grey plush infant insert and hanging toy balls.

IMPORTANT SAFETY INFORMATION

WARNING:

- This product is **not intended, designed, or marketed for sleep or unsupervised use**
- If your baby falls asleep in the MamaRoo, move the baby as soon as possible to a firm, flat sleep surface such as a crib or bassinet.
- Always use the restraint system. Ensure the harness is properly adjusted and securely fastened.
- Do not use this product if your baby can sit up unaided or attempts to climb out.
- The maximum recommended load for this product is **25 pounds (11.3 kg)**.
- Never leave your child unattended in the MamaRoo.
- Keep all packaging materials away from children.

SETUP AND ASSEMBLY

Assembly is required for the 4moms MamaRoo Multi-Motion Baby Swing. Please follow the instructions carefully to ensure proper and safe setup.

Components Included:

- MamaRoo Multi-Motion Baby Swing Base and Seat Frame
- Plush Infant Insert (Dark Grey)
- Toy Bar with Interactive Removable Toys
- Power Adapter

Assembly Steps:

1. Unpack all components and ensure all parts are present.
2. Assemble the swing base and seat frame according to the detailed instructions provided in the separate assembly guide (not included in this manual, refer to product packaging).
3. Install the Plush Infant Insert:

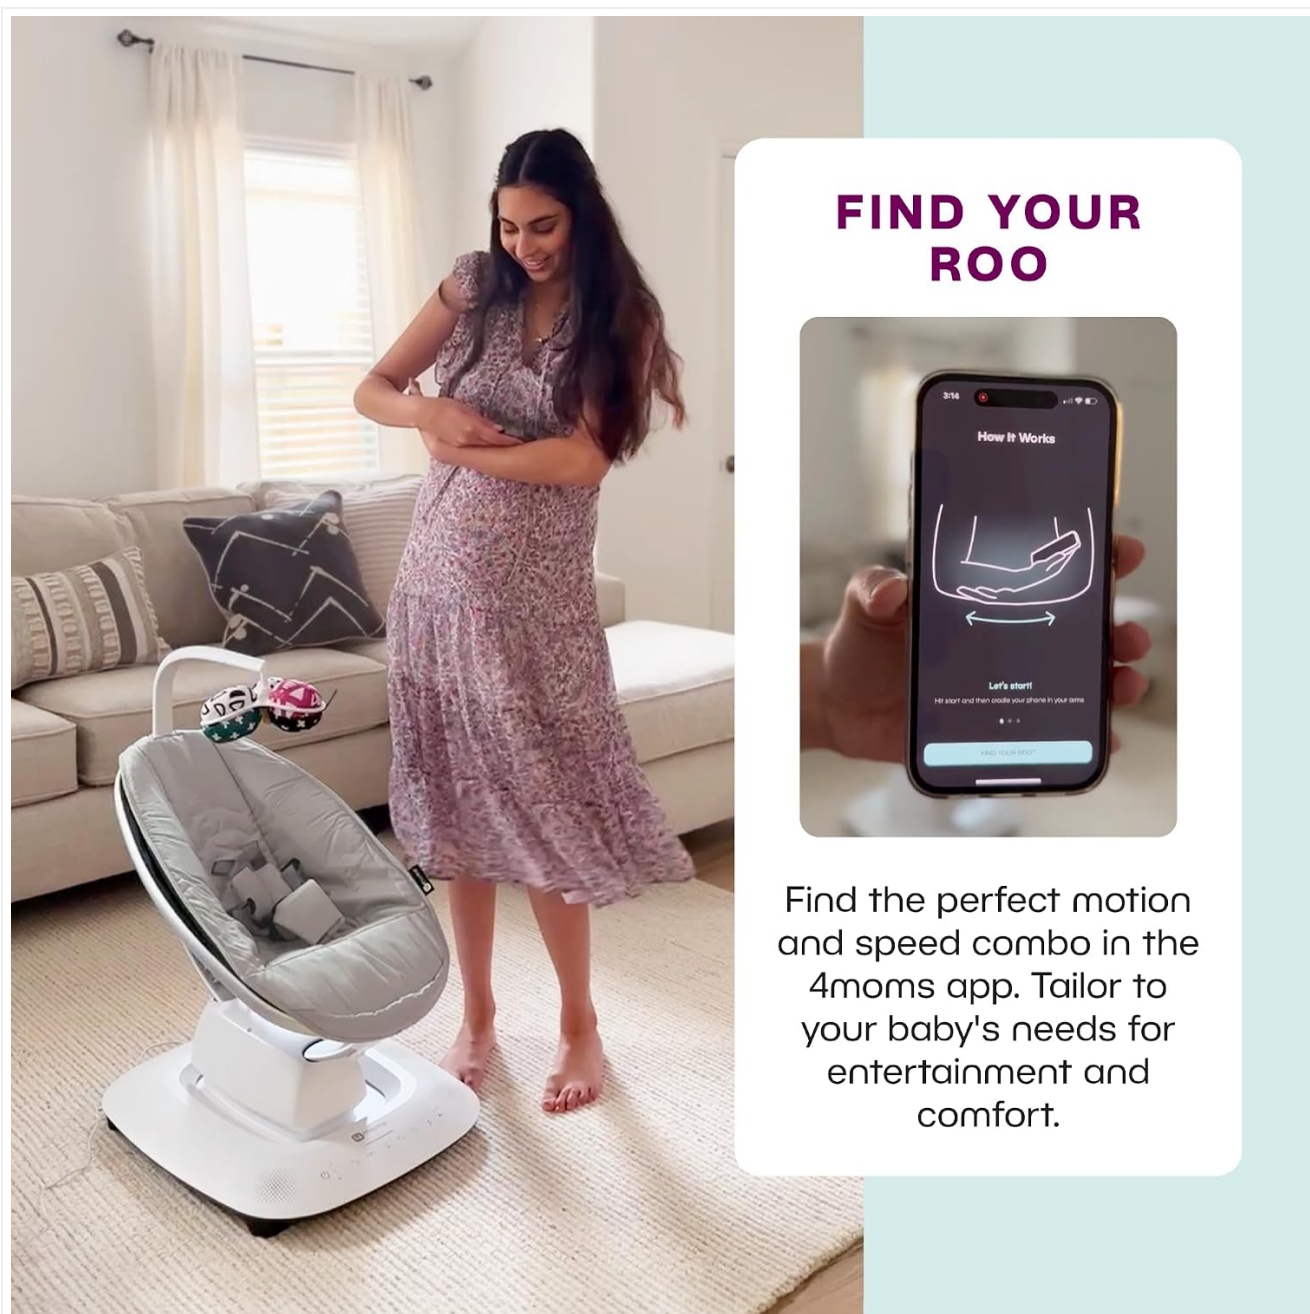


Image: The reversible dark grey plush infant insert with a white pattern, designed to cradle newborns.

The reversible plush infant insert provides added comfort and support for newborns. Position the insert in the swing seat, ensuring the harness straps pass through the designated slots in the insert. The insert is compatible with the convertible 5-point harness system.

4. Attach the toy bar to the swing seat. Ensure it clicks securely into place.
5. Connect the power adapter to the swing and plug it into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The MamaRoo Multi-Motion Baby Swing offers various features to soothe and entertain your baby.

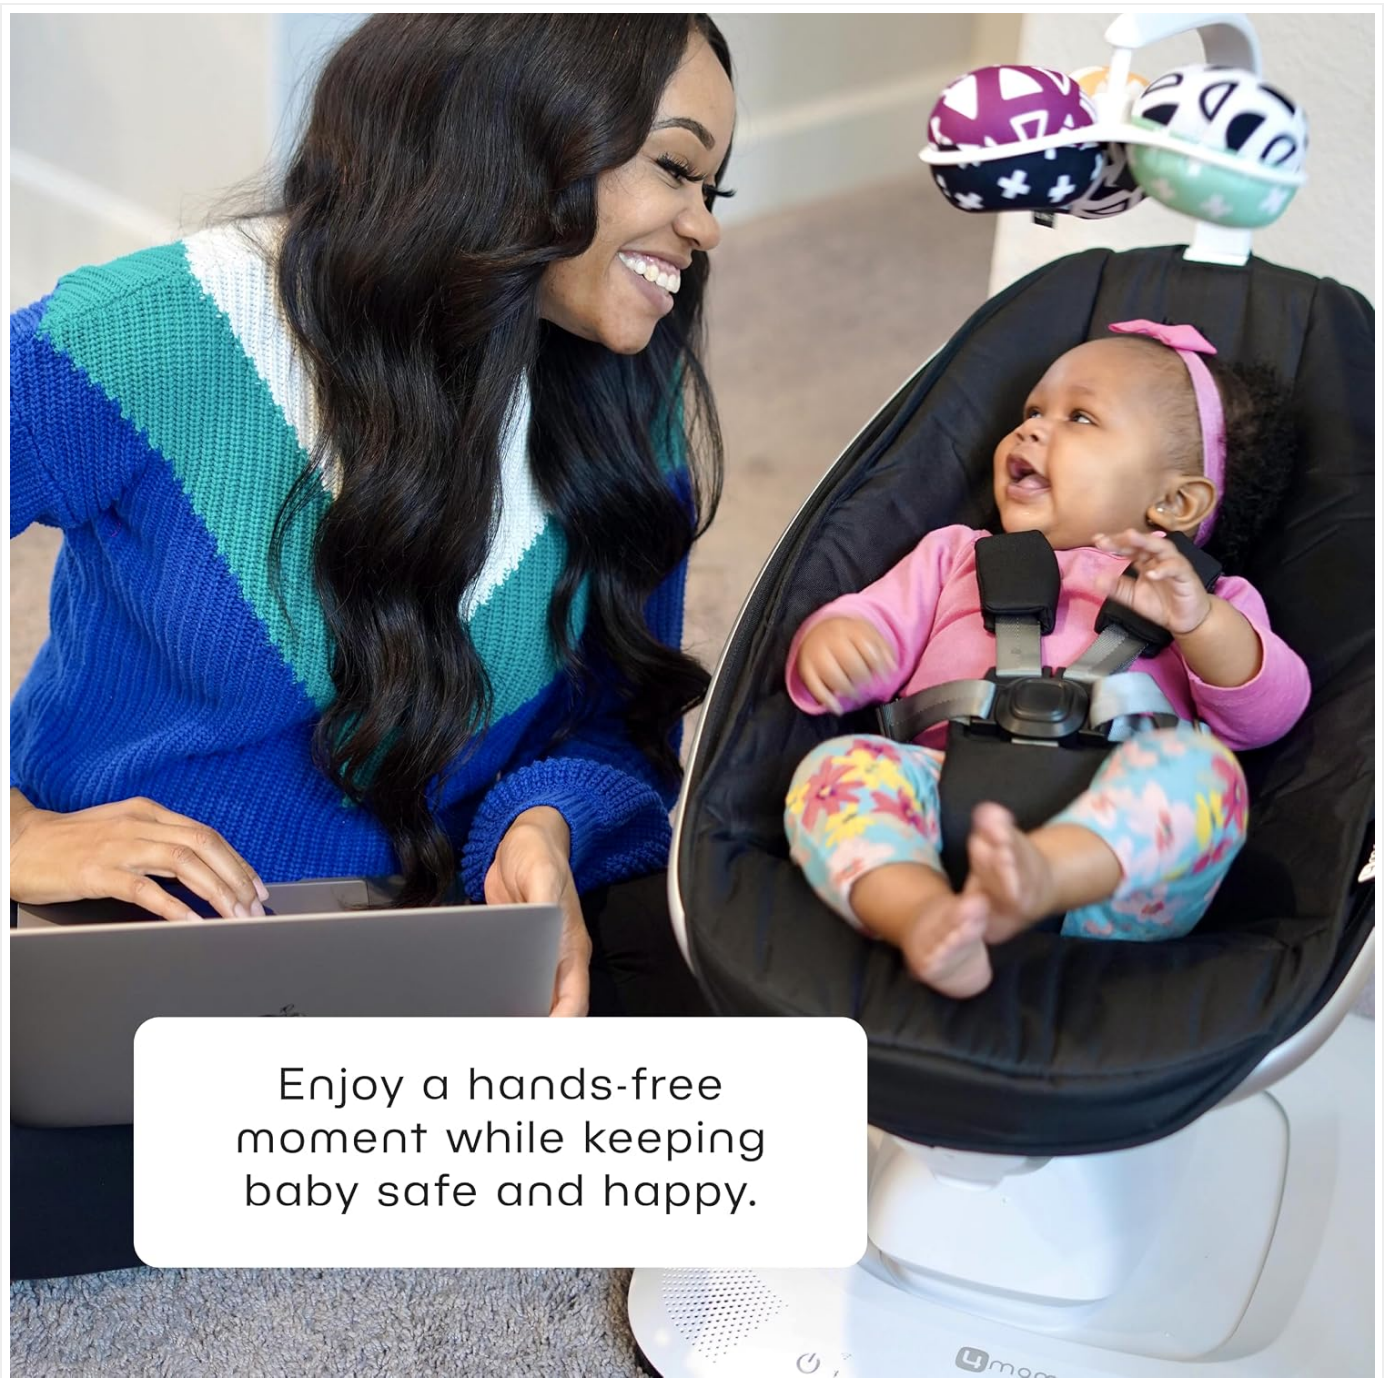


Image: A side view of the MamaRoo swing with labels pointing to its key features: interactive removable toys, supportive seat with machine-washable fabric, 3-to-5 point convertible harness, adjustable recline, and controls for 5 motions, 5 speeds, and 4 sounds.

Motions, Speeds, and Sounds:

- The MamaRoo features **5 unique parent-inspired motions**, **5 speed settings**, and **4 built-in sounds**.

- Use the control panel on the base of the swing to select your desired motion, speed, and sound.
- The motions are designed to mimic natural movements, such as car ride, kangaroo, tree swing, rock-a-bye, and wave.



Image: A graphic illustrating the five distinct motions of the MamaRoo swing: car ride, kangaroo, tree swing, rock-a-bye, and wave.

Adjustable Recline:

The swing seat offers an adjustable recline feature, allowing you to position your baby for optimal comfort and engagement. Refer to the assembly guide for specific instructions on adjusting the recline.

Smart-Home Integration (Bluetooth & Wi-Fi):

- **Bluetooth Functionality:** Control the MamaRoo's features directly from your smartphone using the 4moms app. You can also stream your baby's favorite music through the swing's speakers.

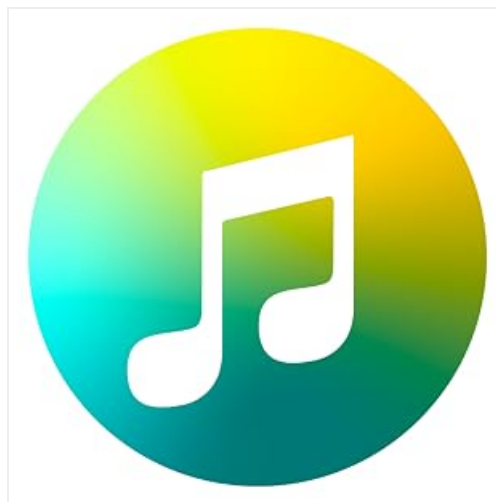 


Image: A smartphone screen displaying the 4moms app interface for controlling the MamaRoo swing via Bluetooth, showing motion, speed, and sound settings.

- **Wi-Fi Smart Home Integration:** The MamaRoo can be integrated with Amazon Alexa and Google Home for voice control (currently in Beta phase). Refer to the 4moms app or website for detailed setup instructions for voice control.

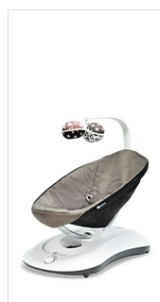 


Image: A circular graphic with a white Wi-Fi symbol on a colorful gradient background, indicating Wi-Fi connectivity.

Find Your Roo Feature:

The 4moms app includes a "Find Your Roo" feature that helps you discover the motion and speed combination most similar to your own natural movements, facilitating a smoother transition for your baby from your arms to the swing.



Image: A woman holding a baby while standing next to the MamaRoo swing, with an inset image of a smartphone displaying the "Find Your Roo" feature in the 4moms app.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and hygiene of your MamaRoo Multi-Motion Baby Swing.

- **Cleaning the Fabric:** The MamaRoo baby swing seat fabric and the infant insert are machine washable. Remove the fabric cover and infant insert from the swing frame. Wash on a gentle cycle with cold water. Do not bleach. Tumble dry on low heat or air dry.
- **Cleaning the Base:** Wipe the swing base and frame with a damp cloth and mild soap. Do not immerse the base in water.
- **Storage:** When not in use, store the MamaRoo in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your MamaRoo Multi-Motion Baby Swing, refer to the following common solutions:

- **Swing Not Turning On:**
 - Ensure the power adapter is securely plugged into both the swing and a working electrical outlet.
 - Check if the outlet is functional by plugging in another device.
- **No Motion or Sound:**
 - Verify that the swing is powered on.
 - Check the selected motion, speed, and sound settings on the control panel or via the 4moms app.
- **Bluetooth Connectivity Issues:**
 - Ensure Bluetooth is enabled on your mobile device.
 - Make sure the 4moms app is updated to the latest version.
 - Try restarting both the MamaRoo swing (by unplugging and re-plugging) and your mobile device.
- **Unusual Noises:**

- Ensure the swing is on a flat, stable surface.
- Check for any obstructions around the moving parts of the swing.

For further assistance, please contact 4moms customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	26.25"D x 23.5"W x 35.5"H (66.7 cm D x 59.7 cm W x 90.2 cm H)
Item Weight	15.4 pounds (7 kg)
Maximum Recommended Load	25 Pounds (11.3 kg)
Material	Polyester
Color	Dark Grey (Classic Black frame)
Assembly Required	Yes
Motions	5 unique motions (Car Ride, Kangaroo, Tree Swing, Rock-a-Bye, Wave)
Speeds	5 speed settings
Sounds	4 built-in sounds
Connectivity	Bluetooth, Wi-Fi (Amazon Alexa & Google Home Beta)

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and customer support, please visit the official 4moms website or contact their customer service department. Keep your proof of purchase for warranty claims.

4moms Official Website: www.4moms.com

© 2024 4moms. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question