

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Replacement Remote Control User Manual for Hitachi LCD LED HD Smart TVs

ALLIMITY CLE-957

ALLIMITY Replacement Remote Control User Manual

For Hitachi LCD LED HD Smart TVs

Compatible Models: CLE-967, CLU-49101S, CLE-998, CLU-4997S, CLU-4591AV, CLE-957, CLE-984, CLE-966A, P50A202, P42A202, P42T501, P50A402, P42H401, P50H401A

1. SETUP AND BATTERY INSTALLATION

This ALLIMITY replacement remote control is designed for immediate use with compatible Hitachi LCD LED HD Smart TVs. No programming or pairing is required. Simply install the batteries, and the remote will be ready to operate your television.

Battery Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



CLE-967
P42H401
No need any
programming

Image showing the ALLIMITY replacement remote control alongside text confirming compatibility with models like CLE-967 and P42H401, and stating that no programming is required for operation.

2. OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Hitachi TV's infrared (IR) receiver. The remote provides access to all standard functions of your television.

Key Functions Overview:

- **Power Button (I/O):** Turns the TV on or off.
- **Input:** Selects video input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **CH +/-:** Changes channels sequentially.
- **VOL +/-:** Adjusts volume level.
- **Mute:** Silences the TV audio.
- **Menu:** Accesses the TV's main menu.
- **SMART / APP*:** Accesses smart TV features or applications.
- **GUIDE:** Displays the electronic program guide.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates through menus and confirms selections.
- **LAST CH:** Returns to the previously viewed channel.
- **INFO:** Displays information about the current program.
- **EXIT:** Exits current menu or function.
- **Colored Function Buttons (Red, Green, Yellow, Blue):** Perform specific functions depending on the TV mode or application.
- **Playback Controls:** Play, Pause, Stop, Rewind, Fast Forward, Skip.

- **HDMI1, HDMI2, HDMI3, AV1, AV2, AV3, AV4, RGB:** Direct selection of specific input sources.





Front view of the ALLIMITY replacement remote control, displaying all buttons including power, input, number pad, channel, volume, navigation, and dedicated function keys.

3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote.
- **Storage:** Store the remote in a dry place, away from direct sunlight, high temperatures, and excessive humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote or subjecting it to strong impacts, which can damage internal components.

4. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with fresh AAA batteries.
 - Verify there is a clear line of sight between the remote control and the TV's infrared (IR) receiver. Obstructions can block the signal.
 - Confirm that the TV is powered on.
- **Limited Functionality:**
 - This remote is a direct replacement and does not require programming. If certain functions do not work, ensure your TV model is listed among the compatible models.
 - Some advanced smart TV features or specific app controls might require the original remote or a universal remote with learning capabilities, depending on the TV model. This remote is designed for primary TV functions.

5. SPECIFICATIONS

Product Dimensions	6.5 x 1.38 x 0.72 inches
Item Weight	2 ounces
Item Model Number	CLE-957

Batteries	AAA batteries required (not included)
Special Feature	No Programming Required
Color	Black
Max Number of Supported Devices	18 (Refers to the range of compatible Hitachi TV models this remote can operate)
Compatible Devices	Television (Specifically Hitachi LCD LED HD Smart TVs)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0BBVK7S69>

More documents and user manuals: <https://manuals.plus/>