

VINGLI VL-G57000330-333

VINGLI Wooden Porch Swing with A-Frame Stand

Model: VL-G57000330-333 | Brand: VINGLI

INTRODUCTION

Thank you for choosing the VINGLI Wooden Porch Swing with A-Frame Stand. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new outdoor swing. Please read all instructions carefully before beginning assembly or use to ensure a long-lasting and enjoyable experience.

SAFETY INFORMATION

- **Maximum Weight Capacity:** This porch swing is designed to support a maximum weight of 880 lbs (approximately 400 kg). Do not exceed this weight limit.
- **Assembly:** Ensure all parts are correctly assembled and all fasteners are securely tightened before use. Regularly check all connections for tightness.
- **Placement:** Place the swing on a level, stable surface. Avoid placing it on uneven ground or slopes.
- **Clearance:** Ensure adequate clearance around the swing to prevent collisions with walls, fences, or other objects.
- **Children:** Supervise children at all times when they are using the swing.
- **Weather Conditions:** While designed for outdoor use, extreme weather conditions (e.g., strong winds, heavy snow) may require additional precautions or temporary storage.

PACKAGE CONTENTS

Your VINGLI Porch Swing with A-Frame Stand is shipped in two separate packages to ensure product security and safe delivery. Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, contact customer service.

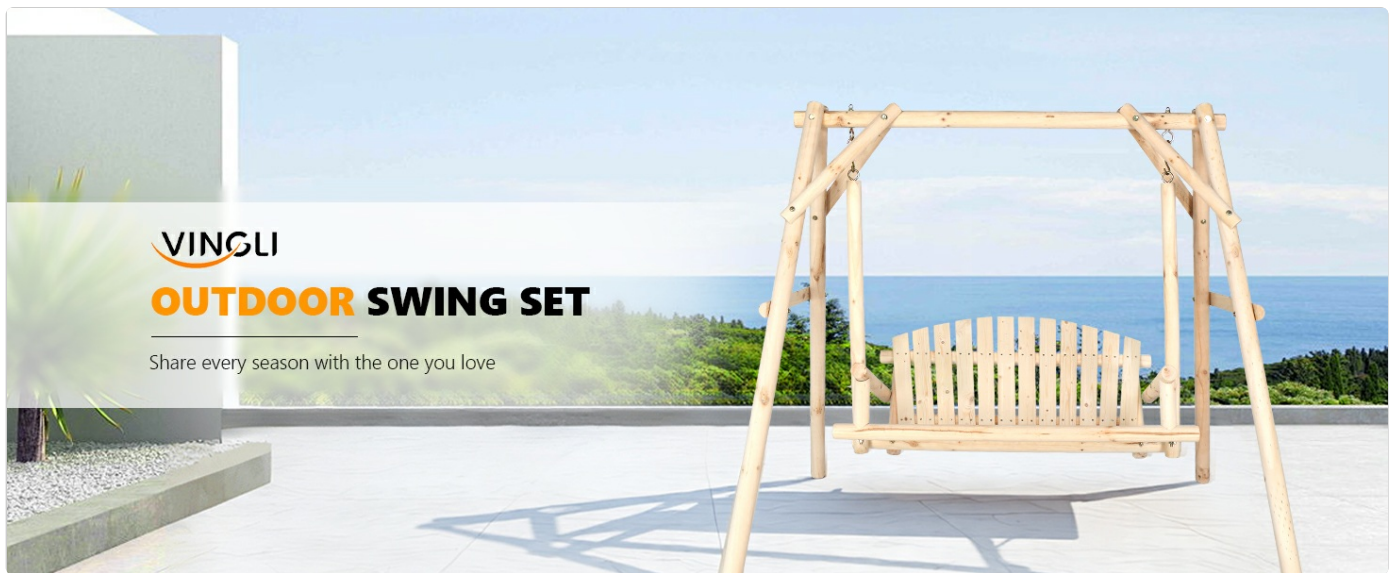 


Image: The VINGLI Porch Swing is delivered in two separate boxes for secure transport.

Typical Components:

- Wooden Swing Bench
- A-Frame Stand Components (legs, crossbeams)
- Hanging Chains/Ropes
- Hardware Pack (bolts, nuts, washers, S-type hooks)
- Assembly Tools (basic wrenches/hex keys may be included)
- Instruction Manual

ASSEMBLY (SETUP)

Assembly of the VINGLI Porch Swing is designed to be straightforward. All pieces are typically numbered or lettered for easy identification. It is recommended to have at least two adults for assembly.

Before You Begin:

- Clear a spacious, flat area for assembly.
- Unpack both boxes and lay out all components. Verify against the parts list in your specific manual.
- Ensure all pre-drilled holes are clear and align correctly. If any holes appear missing or misaligned, double-check the orientation of the parts.
- Keep children and pets away from the assembly area.

General Assembly Steps:


1. **Assemble the A-Frame Stand:** Connect the leg pieces and crossbeams according to the numbered/lettered instructions. Secure all connections with the provided hardware, but do not fully tighten until the frame is upright.
2. **Assemble the Swing Bench:** Attach the backrest to the seat and secure the armrests. Ensure all slats are firmly in place.
3. **Attach Hanging Hardware:** Secure the hanging chains or ropes to the swing bench and the top beam of the A-frame stand using the S-type hooks and other provided hardware.
4. **Final Tightening:** Once the entire structure is assembled and upright, carefully tighten all bolts and nuts. Do not overtighten, as this can damage the wood.
5. **Stability Check:** Gently rock the swing and stand to ensure stability. If any wobbling occurs, re-check all connections.

OPERATING INSTRUCTIONS (USAGE)

The VINGLI Porch Swing is designed for comfortable outdoor relaxation. Follow these guidelines for optimal use:

- **Seating:** The swing bench is approximately 41.7 inches wide and can comfortably accommodate two persons, up to the maximum weight capacity of 880 lbs.
- **Ergonomic Design:** The swing features a curved design in the knee and arm areas for enhanced comfort.
- **Gentle Swinging:** Use the swing with a gentle, controlled motion. Avoid excessive force or aggressive swinging, which could compromise stability or cause wear.
- **Even Weight Distribution:** Distribute weight evenly on the swing bench to maintain balance and prevent undue stress on the frame.

Product Dimension

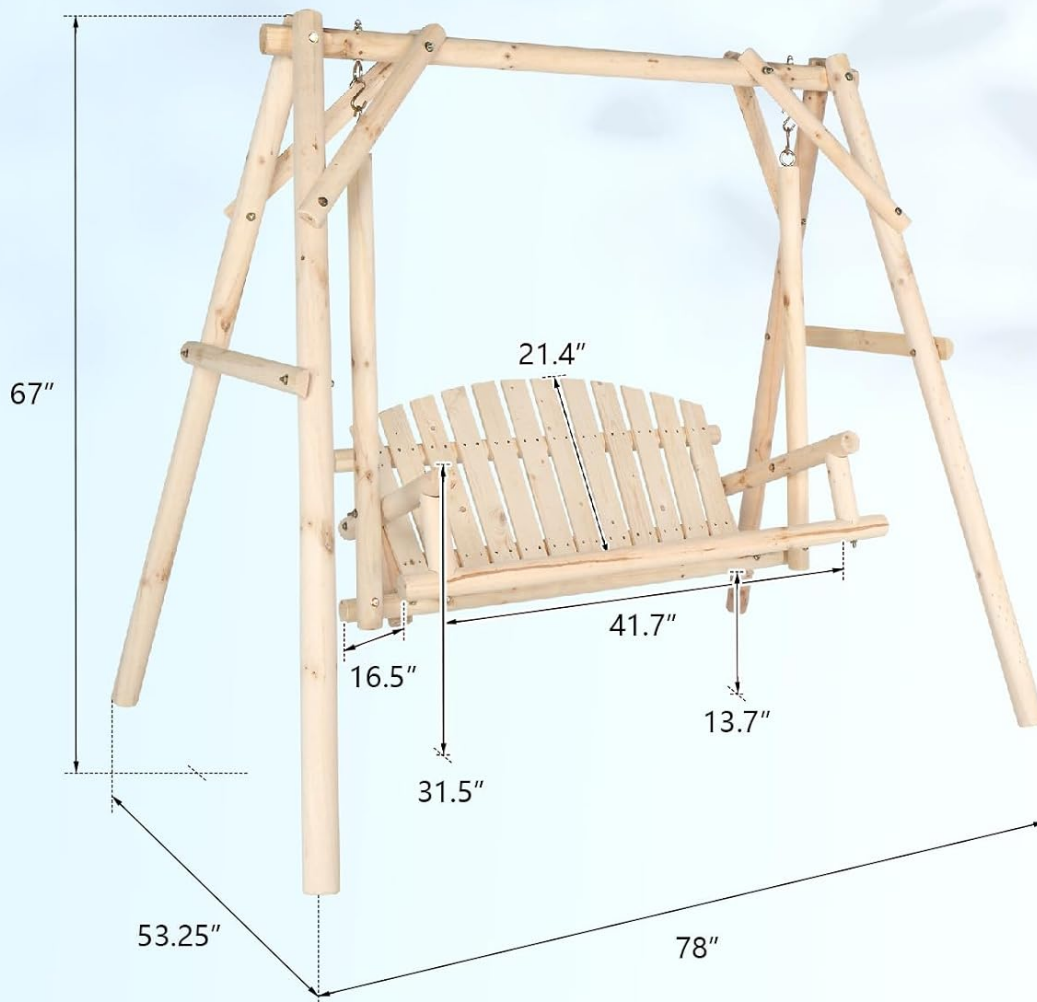

Support **660** LBS At Most

Image: The VINGLI porch swing provides a comfortable seating option for outdoor spaces.

MAINTENANCE

Proper maintenance will extend the life and appearance of your VINGLI Wooden Porch Swing.

- **Cleaning:** Clean the wooden surfaces regularly with a soft cloth and mild soap solution. Rinse thoroughly and dry immediately to prevent water damage.
- **Wood Treatment:** The swing is made from high-quality solid fir wood, designed to resist various weather conditions. For enhanced protection and longevity, especially in harsh climates, consider applying a wood sealant or water-repellent finish annually.
- **Hardware Check:** Periodically inspect all bolts, nuts, and hanging hardware for tightness. Tighten any loose connections to ensure safety and structural integrity.
- **Wood Checking:** It is normal for natural wood products to develop small cracks or 'checking' as the wood dries and ages. This is a natural characteristic of real wood and typically does not affect the structural strength or durability of the swing.
- **Winter Storage:** In areas with severe winter weather, consider storing the swing indoors or covering it with a protective outdoor furniture cover to prevent damage from snow and ice.

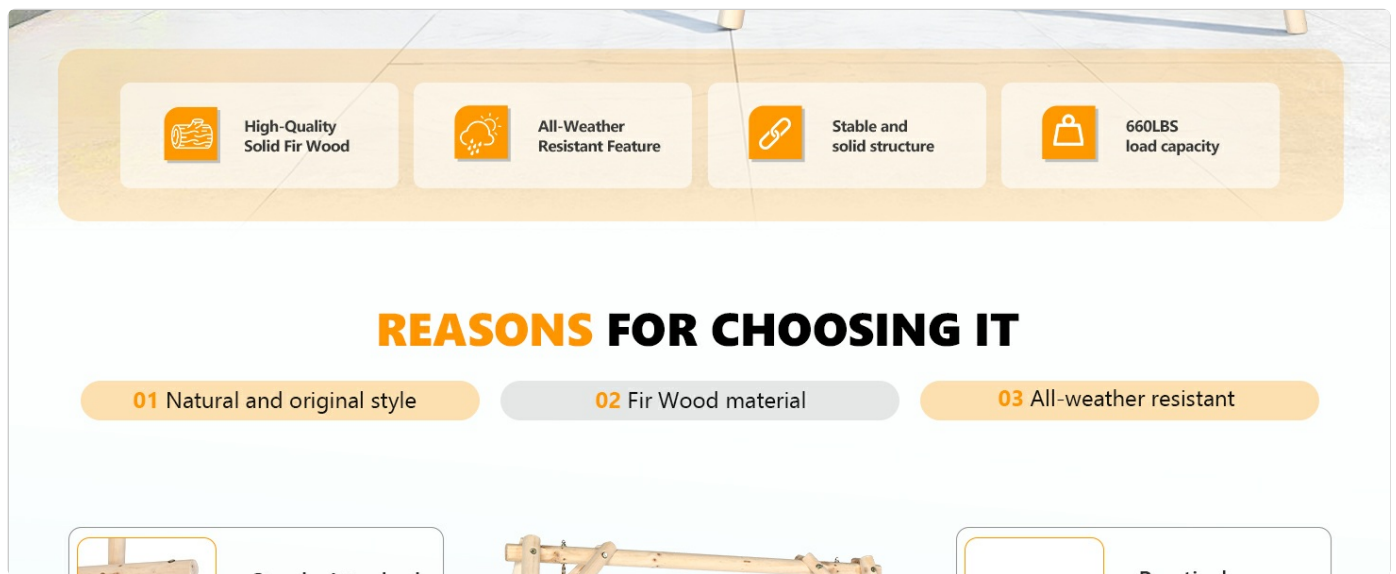 


Image: The solid fir wood construction provides weather resistance for outdoor use.

TROUBLESHOOTING

Common Issues and Solutions:

- **Swing is Wobbly:**
Solution: Ensure the A-frame stand is on a completely level surface. Re-check all bolts and nuts on both the stand and the swing bench for tightness. Adjust as necessary.
- **Parts Don't Align / Missing Holes:**
Solution: Carefully review the assembly instructions to ensure all parts are oriented correctly. Sometimes a part may appear to have a missing hole if it's rotated incorrectly. If a part is genuinely defective or missing a pre-drilled hole, contact VINGLI customer support for assistance. Do not attempt to drill new holes unless explicitly instructed, as this may compromise the product's integrity.
- **Squeaking Noise During Use:**
Solution: Apply a small amount of lubricant (e.g., silicone spray or grease) to the pivot points of the hanging chains/hooks. Ensure all connections are secure.

SPECIFICATIONS

Model Number	VL-G57000330-333
Brand	VINGLI
Material	Wood (Solid Fir Wood)
Color	Natural
Product Dimensions (D x W x H)	53.25" x 78" x 67" (135.25 cm x 198.12 cm x 170.18 cm)
Seat Depth	53.25 inches (135.25 cm)
Maximum Weight Capacity	880 lbs (400 kg)
Maximum Compatible Number of Seats	2
UPC	810158420748



Image: Detailed product dimensions for the VINGLI Porch Swing.

WARRANTY AND SUPPORT

For warranty information, product support, or to report missing/damaged parts, please contact VINGLI customer service directly. Refer to the contact details provided with your purchase documentation or visit the official VINGLI website for assistance. Please have your model number (VL-G57000330-333) and proof of purchase ready when contacting support.

© 2026 VINGLI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question