

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gorenje](#) /
- › [Gorenje WD10514S Washer Dryer Instruction Manual](#)

Gorenje WD10514S

Gorenje WD10514S Washer Dryer Instruction Manual

Model: WD10514S | Brand: Gorenje



Image: Front view of the Gorenje WD10514S Washer Dryer, showcasing its modern design and control panel.

1. SAFETY INFORMATION

Please read these safety instructions carefully before installing and using your Gorenje WD10514S washer dryer. Keep this manual for future reference.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the appliance.
- Never force the door open during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.

2. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washer dryer.

2.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport bolts from the rear of the appliance. Keep these bolts for future transport.

2.2 Positioning and Leveling

Place the washer dryer on a firm, level surface. Adjust the adjustable feet to ensure the appliance is perfectly level. This prevents vibrations and excessive noise during operation.



Image: Side view of the Gorenje WD10514S Washer Dryer, illustrating its compact design suitable for various spaces.

2.3 Water and Electrical Connection

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed.
- Plug the power cord into a grounded 220V electrical outlet. Do not use extension cords or adapters.



Image: Diagram showing the dimensions of the Gorenje WD10514S Washer Dryer (66cm width, 59.5cm depth, 84.5cm height).

3. OPERATING INSTRUCTIONS

This section guides you through the basic steps to operate your Gorenje WD10514S washer dryer.

3.1 Loading Laundry

- Open the door and load laundry into the drum. Do not overload the machine; refer to program specific load capacities (max 10 kg for wash, 6 kg for dry).
- Close the door firmly until it clicks.



Image: The Gorenje WD10514S Washer Dryer with its front-loading door open, revealing the spacious drum.

3.2 Adding Detergent and Softener

- Pull out the detergent drawer located on the top left of the control panel.
- Add the appropriate amount of detergent to the main wash compartment and softener to the designated compartment.
- Close the detergent drawer gently.



Image: Close-up view of the Gorenje WD10514S Washer Dryer with the detergent drawer pulled out, showing compartments for detergent and softener.

3.3 Selecting a Program and Options

- Turn the program selector knob to choose your desired wash or wash & dry program.
- Use the touch buttons on the LED display to adjust temperature, spin speed, or select additional options like Delay Start or extra rinse.
- The LED display will show the selected settings and the estimated cycle duration.



Image: Detailed view of the Gorenje WD10514S Washer Dryer's control panel, featuring the program selector knob and LED display with various function buttons.

3.4 Starting the Cycle

Press the 'Start/Pause' button to begin the selected program. The machine will automatically proceed through the wash and dry phases if a combined program is chosen.

4. WASH AND DRY PROGRAMS

The Gorenje WD10514S offers 15 versatile programs to cater to various fabric types and laundry needs. The integrated dryer efficiently condenses moisture, reducing humidity in your living space.

4.1 Available Programs

- **Cotton White:** For heavily soiled white cotton items.

- **Eco 40-60:** Energy-efficient program for normally soiled cotton items washable at 40°C or 60°C.
- **Color:** For colored cottons and mixed fabrics.
- **Mix:** For mixed loads of cotton and synthetic fabrics.
- **Wool:** Gentle wash for wool and delicate items.
- **Quick Wash 15':** A rapid 15-minute wash for lightly soiled items.
- **Rinse & Spin:** For rinsing and spinning hand-washed items.
- **Spin:** Drains water and spins laundry.
- **20°C:** Low-temperature wash for delicate items.
- **Drum Clean:** Program for cleaning the washer dryer drum.
- **Allergy Steam:** Uses steam to remove allergens from fabrics.
- **Steam Refresh:** Refreshes clothes with steam, reducing wrinkles and odors.
- **Wash and Dry:** Combines a full wash cycle with a drying cycle for a complete laundry solution.
- **Dry Synthetics:** Drying program specifically for synthetic fabrics.
- **Dry Cotton:** Drying program specifically for cotton fabrics.

4.2 Special Functions

- **Delay Start:** Allows you to program the start of the washing or drying process up to 24 hours in advance, useful for off-peak electricity rates.
- **LED Display:** Provides real-time information on the selected program, temperature, spin RPM, and remaining cycle duration.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

5.1 Cleaning the Detergent Drawer

- Pull out the detergent drawer completely.
- Rinse it under running water to remove any detergent residue.
- Clean the drawer housing with a brush.
- Reinsert the drawer.

5.2 Cleaning the Drum

Use the 'Drum Clean' program periodically to remove any residue and prevent odors. You can also wipe the drum interior with a damp cloth after each use.

5.3 Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages. Refer to the diagram in the full user manual for the exact location and procedure.

6. TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected.	Check power plug; Ensure door is latched; Select a program and press Start.
Water not filling	Water tap closed; Water inlet hose kinked.	Open water tap; Straighten hose.
Excessive vibration/noise	Appliance not level; Transport bolts not removed; Overloaded drum.	Adjust feet to level; Remove transport bolts; Reduce laundry load.
Clothes not drying properly	Overloaded dryer; Incorrect drying program selected.	Reduce load; Select appropriate drying program for fabric type.

7. TECHNICAL SPECIFICATIONS

Detailed specifications for the Gorenje WD10514S Washer Dryer.

Feature	Specification
Model Number	WD10514S
Brand	Gorenje
Wash Capacity	10 kg
Dry Capacity	6 kg
Maximum Spin Speed	1400 RPM
Dimensions (W x D x H)	66 cm x 59.5 cm x 84.5 cm
Item Weight	70 kg
Voltage	220 Volt
Power	1800 W
Type	Front Load Fully Automatic Washer Dryer

8. WARRANTY AND SUPPORT

Your Gorenje WD10514S Washer Dryer comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and faulty materials.

8.1 Warranty Claims

To make a warranty claim, please retain your proof of purchase and contact your retailer or the authorized Gorenje service center in your region. The warranty does not cover damage caused by improper installation, misuse, or normal wear and tear.

8.2 Customer Support

For technical assistance, spare parts, or general inquiries, please refer to the contact information provided with your purchase documentation or visit the official Gorenje website for your country's specific support details.

