

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LIGHTSHARE](#) /
- › [LIGHTSHARE 10-Inch 48-LED Light Ball Instruction Manual](#)

LIGHTSHARE 10IN 48LED Light Ball

LIGHTSHARE 10-Inch 48-LED Light Ball Instruction Manual

Model: 10IN 48LED Light Ball

INTRODUCTION

Thank you for choosing the LIGHTSHARE 10-Inch 48-LED Light Ball. This product is designed to provide decorative lighting for both indoor and outdoor environments. Its foldable metal frame and energy-efficient LED lights offer versatility for various display options. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- **Outdoor Use Only:** This product is intended for outdoor use.
- **Unplug During Inclement Weather:** Always unplug the light ball during storms, heavy rain, or when not in use for extended periods.
- **Children and Pets:** Do not allow children or pets to play on or near the display. Keep out of reach.
- **Flammable Materials:** Keep the light ball away from flammable materials such as dry leaves, fabrics, or other combustible items.
- **Secure Installation:** Always secure the product firmly when using ground stakes to prevent tripping hazards or the light ball from being dislodged by wind.
- **Careful Handling:** Exercise caution when handling the product during setup, relocation, and storage to avoid injury or damage to the wiring.
- **Power Source:** Ensure the power source matches the requirements specified on the product label.

PACKAGE CONTENTS


Please verify that all components are present before beginning assembly:

- Foldable Metal Frame with LED Lights (10-inch sphere)
- Power Adapter (Corded Electric)
- Ground Stake (H-shape)
- Hanging Hook


- Assembly Hardware (bolts, retaining plate, wrench)
- Instruction Sheet

INSTRUCTION

1. Take out product from package;

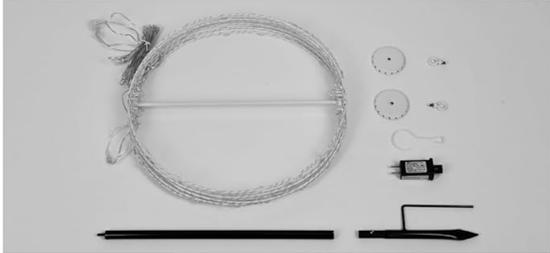

2. Assemble into a circle, press on the retaining plate.

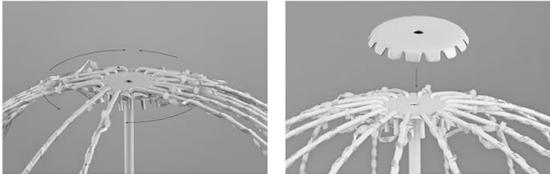

3. Tighten the screw, do the same on the other side.



DUAL PURPOSE OF THE BALL LIGHT:


Hang

Fit the hook into the ring, connect the cable with transformer and plug into the power outlet.




Stuck in the ground

Put the belt bolt into the ball light, and assemble the nail.

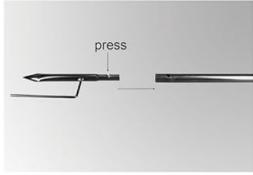Connect the cable with transformer and plug into the power outlet.

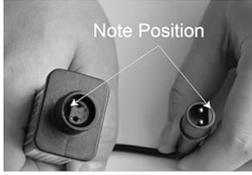

Note Position




10.6"

10.6"

2.4"

WEIGHT: 1.8 LB

Figure 1: Included components for the LIGHTSHARE 10-inch LED Light Ball.

SETUP AND ASSEMBLY

The LIGHTSHARE LED Light Ball offers two primary display options: hanging or ground-staked. Follow the steps below for assembly.

General Assembly Steps:

1. Carefully remove the light ball from its packaging. The metal frame is designed to fold flat for storage.
2. Gently expand the metal frame into a spherical shape.
3. Locate the central retaining plate and align it with the top of the sphere.
4. Secure the retaining plate by tightening the provided bolts using the included wrench. Ensure all cord bends are moved down towards the equator to make room for the hook before capping it.



Caution!

Please move all of the cord bends down toward the equator to make room for the hook before you cap it



Figure 2: Proper positioning of light cords during assembly to ensure the top cap fits correctly.

Option 1: Ground Stake Installation

1. Assemble the ground stake by connecting the pole sections.
2. Insert the bolt into the bottom of the assembled light ball and attach it to the top of the ground stake.
3. Carefully press the H-shape stake into the ground at your desired location. Ensure the stake is firmly planted to prevent tipping.
4. Connect the power adapter to the light ball and then plug it into a suitable outdoor power outlet.

Option 2: Hanging Installation

1. Attach the hanging hook to the top of the assembled light ball.
2. Hang the light ball from a secure fixture, such as a tree branch, pergola, or porch ceiling. Ensure the hanging point can support the weight of the light ball and is stable.
3. Connect the power adapter to the light ball and then plug it into a suitable outdoor power outlet.



Dual-use Display

*Hanging Or
Stuck in the ground*

Figure 3: The light ball can be hung or staked into the ground for versatile decoration.

Your browser does not support the video tag.

Video 1: A demonstration of the LIGHTSHARE light balls in various outdoor settings, showcasing their warm white glow and dual display options.

OPERATING INSTRUCTIONS

Once assembled and securely placed, operating the LIGHTSHARE LED Light Ball is straightforward:

1. Ensure the power adapter is correctly connected to the light ball and a suitable outdoor power outlet.
2. Plug the power adapter into the electrical outlet. The LED lights will illuminate.
3. To turn off the light ball, simply unplug the power adapter from the electrical outlet.



Figure 4: The LIGHTSHARE light ball illuminated, providing ambient lighting.

MAINTENANCE

To ensure the longevity and optimal performance of your LIGHTSHARE LED Light Ball, consider the following maintenance tips:

- **Cleaning:** Gently wipe the light ball with a soft, damp cloth to remove dust or dirt. Do not use harsh chemicals or abrasive cleaners.
- **Waterproof Design:** The light ball is designed to be waterproof for outdoor use. However, avoid submerging it in water.
- **Storage:** When not in use, especially during off-seasons or prolonged periods, unplug the light ball, clean it, and fold the metal frame flat for compact storage in a cool, dry place.
- **Inspection:** Periodically inspect the power cord, adapter, and light ball for any signs of damage, fraying, or loose connections. Discontinue use if any damage is found.



Figure 5: The light ball is designed to be waterproof for outdoor conditions.

TROUBLESHOOTING

If your LIGHTSHARE LED Light Ball is not functioning as expected, try the following:

- **Lights Not Turning On:**

- Ensure the power adapter is securely plugged into both the light ball and a working electrical outlet.
- Check the electrical outlet by plugging in another device to confirm it has power.
- Inspect the power cord and adapter for any visible damage.

- **Dim or Flickering Lights:**

- Verify that all connections are tight.
- Ensure the power source is stable and not overloaded.

- **Unstable Ground Installation:**

- Ensure the ground stake is fully inserted into firm soil.
- If the ground is soft, consider reinforcing the stake or relocating to a more stable area.

If these steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

| Feature | Detail |
|-------------------------|----------------------------|
| Light Color | Warm White |
| Number of Light Sources | 48 |
| Power Source | Corded Electric |
| Material | Iron, Metal |
| Frame Material | Metal |
| Item Weight | 1.78 pounds |
| Package Dimensions | 10.75 x 10.75 x 2.2 inches |

• Specifications •

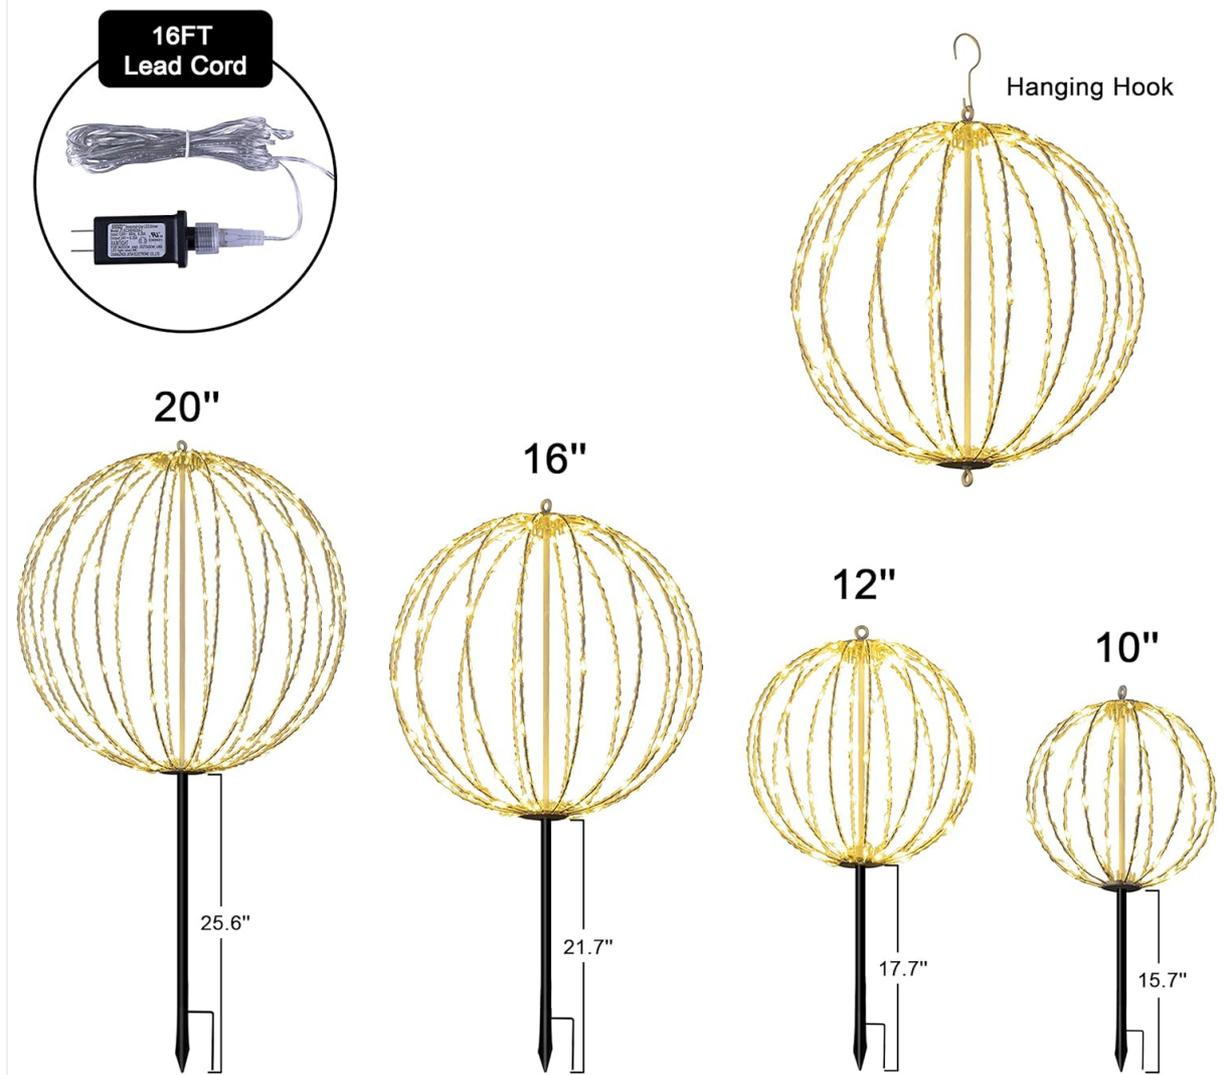


Figure 6: Product specifications and dimensions for various light ball sizes.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact LIGHTSHARE

customer service directly. Keep your purchase receipt for any warranty claims.

Manufacturer: E Home International Inc.