

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [UMIDIGI](#) /
- › UMIDIGI POWER 7 Unlocked Cell Phone User Manual

UMIDIGI POWER 7

UMIDIGI POWER 7 Unlocked Cell Phone User Manual

1. INTRODUCTION

Welcome to the UMIDIGI POWER 7 user manual. This guide provides essential information to help you set up, operate, and maintain your new smartphone. Please read this manual thoroughly to ensure proper usage and to maximize the device's capabilities.



Image 1: UMIDIGI Power 7 highlighting its main features.

2. WHAT'S IN THE BOX

Upon opening the package, verify that all items are present:

- UMIDIGI POWER 7 Smartphone
- User Manual
- USB Cable

- SIM Tray Ejector Tool

Your browser does not support the video tag.

Video 1: An unboxing and hands-on demonstration of the UMIDIGI Power 7 smartphone, showing the contents of the retail package.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your UMIDIGI POWER 7 smartphone.

3.1 Front View



Image 2: Front view of the UMIDIGI Power 7.

3.2 Rear View

Matrix Triple Camera Design



Image 3: Rear view of the UMIDIGI Power 7.

3.3 Side View and Ports

- **Power Button:** Located on the right side.
- **Volume Buttons:** Located on the right side, above the power button.
- **USB Type-C Port:** For charging and data transfer, located at the bottom.
- **SIM Card Tray:** Located on the left side.
- **Customizable Shortcut Key:** Located on the left side.

6150mAh High-capacity Battery



390 Hours
Standby



30 Hours
Calling



8 Hours
Videoplay back



12 Hours
Gaming

Image 4: Side view of the UMIDIGI Power 7.

IMEI 1: 352880630123825

IMEI 2: 352880630123817

4. SETUP

4.1 Inserting the SIM Card

1. Power off the device.
2. Locate the SIM card tray on the left side of the phone.
3. Insert the SIM tray ejector tool into the small hole next to the tray.
4. Gently pull out the SIM card tray.
5. Place your Nano-SIM card(s) and/or microSD card into the designated slots. Ensure correct orientation.
6. Carefully reinsert the tray into the phone.



Image 5: SIM card tray and insertion process.

4.2 Initial Power On and Setup

1. Press and hold the Power button until the UMIDIGI logo appears.
2. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and security settings.

5. OPERATING INSTRUCTIONS

5.1 Display

The UMIDIGI POWER 7 features a 6.7-inch HD+ full screen display, providing a large viewing area for various applications.



Image 6: The 6.7-inch HD+ display specifications.

5.2 Performance

The device is powered by an Octa-Core processor, ensuring smooth and reliable performance. It includes 4GB of RAM for quick application switching and 128GB of internal storage, expandable up to 256GB with a microSD card.



Image 7: Octa-Core Chipset details.

5.3 Camera

The UMIDIGI POWER 7 features a versatile camera system:

- **Main Camera:** 20MP sensor for detailed photos.
- **Ultra-wide Angle Camera:** 8MP sensor with a 120° field of view for expansive shots.
- **Macro Camera:** 5MP sensor for close-up photography (2.5cm macro distance).
- **Front Camera:** 8MP sensor for selfies and video calls.



Image 8: Matrix Triple Camera Design.

5.4 Battery Management

The device is equipped with a large 6150mAh battery, designed for extended usage. It supports 10W fast charging via the Type-C cable to quickly replenish power.



Image 9: 6150mAh High-capacity Battery details.

5.5 Security Features

The UMIDIGI POWER 7 offers multiple security options:

- **Face Unlock:** Use your face to unlock the device.
- **Side-Mounted Fingerprint Sensor:** A fingerprint sensor integrated into the side for quick and secure

access.

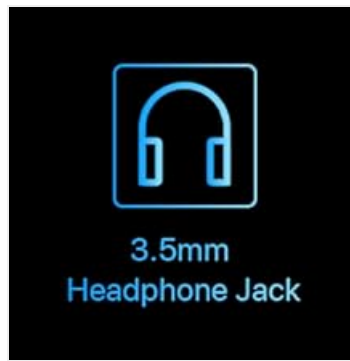


Image 10: Face Unlock and Fingerprint Sensor.

5.6 Customizable Shortcut Key

The customizable shortcut key on the left side of the device can be configured to quickly access frequently used applications or functions with a single-click, double-click, or long-press action.

5.7 Connectivity

The UMIDIGI Power 7 supports Global LTE Bands, features a 3.5mm headphone jack, and includes a headset-free FM radio function.



Image 11: Connectivity and OS features.

Your browser does not support the video tag.

Video 2: A brief overview of the UMIDIGI Power 7 smartphone's features and design.

6. SPECIFICATIONS

Feature	Detail
Brand	UMIDIGI
Model Name	POWER 7
Operating System	Android
RAM Memory Installed Size	4 GB
Memory Storage Capacity	128 GB (Expandable to 256GB with microSD)
CPU Model	Unisoc Tiger T610 Octa-Core

Feature	Detail
Screen Size	6.7 Inches
Resolution	1650 x 720 HD+
Rear Facing Camera Photo Sensor Resolution	20 MP (Main) + 8 MP (Ultra-wide) + 5 MP (Macro)
Front Photo Sensor Resolution	8 MP
Battery Capacity	6150 Milliamp Hours
Charging	10W Quick Charge, USB Type C
Wireless Carrier	Unlocked for All Carriers
Cellular Technology	4G
Biometric Security Feature	Face Recognition, Fingerprint Sensor
Item Weight	216 Grams
Item Dimensions	6.65 x 3.03 x 0.39 inches

7. MAINTENANCE

To ensure the longevity and optimal performance of your UMIDIGI POWER 7, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to benefit from the latest features, security patches, and performance improvements.
- **Battery Care:** Avoid extreme temperatures. Do not fully discharge the battery frequently.
- **Storage:** Keep the device away from direct sunlight, excessive heat, and moisture.

8. TROUBLESHOOTING

If you encounter issues with your UMIDIGI POWER 7, refer to the following common troubleshooting steps:

- **Device Not Turning On:** Ensure the battery is charged. Connect the phone to its charger for at least 30 minutes, then try powering it on again.
- **Screen Unresponsive:** Restart the device by pressing and holding the Power button for about 10-15 seconds.
- **Network Issues:** Check if the SIM card is correctly inserted. Try restarting the phone or toggling Airplane Mode on and off. Verify your carrier settings.
- **Applications Crashing:** Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage > Clear Cache). If the issue persists, try reinstalling the app.
- **Battery Draining Quickly:** Reduce screen brightness, close unused apps, and disable unnecessary features like GPS or Wi-Fi when not in use.

- **Overheating:** Avoid using the phone while charging or during prolonged heavy usage (e.g., gaming). Close background applications.

For more complex issues, consider performing a factory reset (backup your data first) or contacting UMIDIGI customer support.

9. WARRANTY AND SUPPORT

Your UMIDIGI POWER 7 smartphone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official UMIDIGI website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or service inquiries, please contact UMIDIGI customer support through their official channels.