

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CKPSMS](#) /

› [CKPSMS Bobbins & Bobbin Cases KP-19232 Instruction Manual](#)

CKPSMS KP-19232

CKPSMS Bobbins & Bobbin Cases Instruction Manual

Model: KP-19232

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the CKPSMS Brand Bobbins and Bobbin Cases, model KP-19232. This set includes high-quality replacement parts designed for specific PFAFF home sewing machines. The kit contains 2 bobbin cases and 20 steel bobbins, essential components for proper sewing machine operation.



Image 1.1: A complete set of CKPSMS steel bobbins and two bobbin cases, showcasing the quantity and type of components included in the KP-19232 package.

2. SAFETY INFORMATION

Always prioritize safety when handling sewing machine parts. Ensure the sewing machine is turned off and unplugged before installing or removing any components. Handle small parts with care to avoid injury or damage to the parts themselves.

Product safety photos and guideline

For CKPSMS brand sewing machine parts and accessories



Needle Plate:

Always use the correct needle plate for your sewing machine model. Do not use a damaged or bent needle plate. When changing the needle plate, make sure the sewing machine is turned off and unplugged.



Presser Foot:

Always use the correct presser foot for your sewing machine model. Do not use a damaged or bent presser foot. When changing the presser foot, make sure the sewing machine is turned off and unplugged.



Foot pedal, auto bobbin winder and any other products which are required to connect to the power:

- Do not use the product when your hands are wet.
- If the power cord is damaged, stop using the product immediately and replace it with a new one.
- Always disconnect the power supply before repairing the product.
- Do not connect the product to a power source with a voltage that does not match.



Bobbin Case:

Always use the correct bobbin case for your sewing machine model. Do not use a damaged or bent bobbin case. When changing the bobbin case, make sure the sewing machine is turned off and unplugged.



Fabric cleaner:

- Do not spray towards the body, face, or hands of a person.
- Keep out of reach of children.
- Do not use upside down.
- Do not connect to a power source with a voltage that does not match the product.
- Do not modify the power cord or auxiliary tools of this product by yourself.



Looper, thread cutter, blades and any other products which are sharp or incisive:

- Take sufficient safety precautions to prevent injury to your fingers.
- Before disassembling or assembling, understand the correct method and make sure to install it in the designated position.
- Keep it in a place where children cannot touch it.
- Store it in a sturdy packaging box and take measures to prevent rust and corrosion.

Image 2.1: General safety guidelines for various sewing machine parts. When handling bobbin cases, ensure the machine is off and unplugged. Avoid using damaged parts.

2.1 Bobbin Case Safety

- Always use the correct bobbin case for your sewing machine model.
- Do not use a damaged or bent bobbin case.
- When changing the bobbin case, make sure the sewing machine is turned off and unplugged to prevent accidental operation.

3. PACKAGE CONTENTS

The KP-19232 package includes the following items:

- **2 PCS** Bobbin Cases (No Back Lash design)
- **20 PCS** Steel Bobbins



Image 3.1: The CKPSMS Bobbins and Bobbin Cases neatly packaged in a clear plastic storage box, illustrating the complete contents of the kit.

4. COMPATIBILITY

These high-quality bobbin cases and steel bobbins are specifically designed to be compatible with/replacement for the following PFAFF brand HOME Sewing Machines:

- Tipmatic 1010
- Tipmatic 1011
- Tipmatic 1014
- Tipmatic 1015
- Tipmatic 1018

- Tipmatic 1019
- Tipmatic 1025
- Tipmatic 1027
- Tipmatic 1035
- Tipmatic 1037
- Tipmatic 1045
- Tipmatic 1047
- Tipmatic 1050
- Tipmatic 1051
- Tipmatic 6110
- Tipmatic 6112
- Tipmatic 6120
- Tipmatic 6120 stretch & Jeans
- Tipmatic 6122
- Tipmatic 6122 Festival 135

Important: Please pay attention to the size of the product to ensure proper fit with your specific machine model.



Image 4.1: Detailed dimensions of the steel bobbins, showing measurements such as 21.89mm diameter and 8.84mm height, crucial for ensuring compatibility with your sewing machine.

5. SETUP AND INSTALLATION

Replacing or installing bobbins and bobbin cases is a standard procedure for sewing machine maintenance. Always refer to your specific sewing machine's instruction manual for precise steps, as procedures may vary slightly between models.

5.1 Installing a Bobbin into the Bobbin Case

1. Ensure the bobbin is wound correctly with thread.
2. Hold the bobbin case with one hand.
3. Insert the bobbin into the bobbin case, ensuring the thread unwinds in the correct direction (usually clockwise or counter-clockwise, depending on the machine and bobbin case design).
4. Guide the thread through the tension spring slot on the bobbin case. The thread should slide smoothly under the tension spring.
5. Pull the thread gently to ensure it feeds properly and has appropriate tension.



Image 5.1: A close-up view of a single bobbin case, highlighting the tension spring and thread path where the bobbin thread is inserted.

5.2 Inserting the Bobbin Case into the Sewing Machine

1. Turn off and unplug your sewing machine.
2. Open the bobbin compartment of your sewing machine (location varies by model, often under the needle plate or in a front-loading compartment).
3. Hold the bobbin case by its latch or finger.
4. Carefully insert the bobbin case into its designated slot in the machine. It should click or snap into place securely.
5. Ensure the thread from the bobbin case is correctly positioned according to your machine's threading path.
6. Close the bobbin compartment cover.

6. OPERATING GUIDELINES

Once the bobbin and bobbin case are correctly installed, you can proceed with your sewing tasks. Proper installation is crucial for achieving balanced stitches and preventing thread jams or breakage.

- Always ensure the bobbin thread is pulled up through the needle plate before starting to sew.
- Monitor the bobbin thread level to avoid running out mid-seam.
- If you experience skipped stitches, loose stitches, or thread tangles, check the bobbin and bobbin case installation and thread tension.

7. MAINTENANCE

To ensure the longevity and optimal performance of your CKPSMS bobbins and bobbin cases:

- **Cleaning:** Periodically remove lint and dust from the bobbin case and bobbin area of your sewing machine. Use a small brush or lint remover.
- **Storage:** Store bobbins and bobbin cases in a clean, dry environment, preferably in their original packaging or a dedicated storage box, to prevent rust and damage.
- **Inspection:** Regularly inspect bobbins and bobbin cases for any signs of wear, bending, or damage. Replace parts that appear worn or damaged to prevent issues with your sewing machine.

8. TROUBLESHOOTING

If you encounter issues related to bobbin or bobbin case function, consider the following:

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|---------------------------------------|--|---|
| Thread jams or tangles in bobbin area | Incorrect bobbin insertion, lint buildup, damaged bobbin/case | Re-insert bobbin correctly, clean bobbin area, inspect and replace damaged parts. |
| Skipped stitches or uneven tension | Improper bobbin tension, incorrect bobbin type, damaged bobbin case spring | Ensure bobbin thread is correctly routed through tension spring. Verify bobbin size. Replace bobbin case if spring is faulty. |
| Bobbin case does not fit | Incorrect model compatibility | Double-check your sewing machine model against the compatibility list in Section 4. Ensure you have the correct part number. |

For persistent issues, consult your sewing machine's original manual or contact CKPSMS technical support.

9. SPECIFICATIONS

- **Part Number:** KP-19232
- **Product Type:** Bobbin Cases & Steel Bobbins
- **Quantity:** 2 Bobbin Cases, 20 Steel Bobbins
- **Material:** Steel (Bobbins), Metal (Bobbin Cases)
- **Product Dimensions:** 15 x 12 x 1 inches (Packaging)
- **Manufacturer:** CKPSMS
- **Country of Origin:** China
- **Date First Available:** August 26, 2022

10. TECHNICAL SUPPORT AND WARRANTY

CKPSMS is committed to providing excellent customer support for its products.

10.1 Technical Assistance

If you are unsure if these parts are compatible with your machine, or if you encounter any issues using the received parts, please do not hesitate to contact us. Our technicians are available to provide professional and accurate advice.

How to Contact Support:

- Send us a message via Amazon.
- When contacting, please provide your machine brand and complete model number for faster assistance.

10.2 Warranty Information

Specific warranty details are not provided in this manual. For information regarding product warranty, please

refer to the product listing on Amazon or contact CKPSMS customer service directly via the methods mentioned above.

© 2024 CKPSMS Brand. All rights reserved.

This manual is for informational purposes only. CKPSMS is not responsible for any damage or injury resulting from improper use or installation of these parts.