

## FLITI Halloween-light-8.26

# FLITI Christmas Decoration Projector Light User Manual

Model: Halloween-light-8.26 | Brand: FLITI

## INTRODUCTION

---

The FLITI Christmas Decoration Projector Light is designed to illuminate your home with festive patterns and dynamic ocean wave effects. This projector features dual projection heads, offering both RGBW water ripple effects and various pattern images. It is suitable for year-round holiday decorations, including Christmas, Halloween, birthdays, and more. This manual provides essential information for proper setup, operation, and maintenance of your projector.

## PACKAGE CONTENTS

---

Please check the package contents to ensure all items are present:

- Christmas Projector Light x 1
- Interchangeable Slides x 19 (featuring 76 patterns and 11 festive themes)
- Mounting Package (includes round base and ground stake) x 1
- Remote Control x 1
- Power Cable (16.3 feet / 5 meters) x 1
- User Manual x 1

## FEATURES

---

- **Enhanced Brightness and Clarity:** Features upgraded projection technology for brighter and clearer images compared to previous models.
- **Dual Projection Heads:** Combines RGBW water wave effects with pattern projections for dynamic displays.
- **19 Interchangeable Slides:** Includes a wide variety of slides for different holidays and occasions, such as Halloween, Christmas, birthdays, Valentine's Day, Thanksgiving, Easter, Mother's Day, and Father's Day.
- **Non-Fading Digital Animation:** Utilizes digital camera technology to maintain high-definition pattern quality over extended use, preventing fading common with film-based projectors.
- **Quiet Operation:** Equipped with a quiet rotation motor for minimal noise during operation.
- **Wide Projection Area:** Projects up to 32 feet, covering an area of up to 2137 square feet, suitable for most house exteriors.

- **Adjustable Projection Angle:** The light head rotates 180 degrees vertically, allowing for flexible projection angles.
- **Improved Weather Resistance:** Upgraded to IP65 waterproof rating for enhanced durability in outdoor conditions.
- **Extended Power Cord:** A 16.3-foot (5-meter) power cord provides greater flexibility for placement.
- **Multiple Installation Methods:** Can be installed using a round base for floor or wall placement, or a ground stake for lawn insertion.

## SETUP

---

### 1. Choose Installation Method:

- **Ground Installation:** Attach the ground stake to the projector base. Insert the stake firmly into the outdoor lawn or garden soil.
- **Surface Installation:** Attach the round base to the projector. Place the projector on a flat surface or mount it to a wall using appropriate hardware (not included).

2. **Insert Slide:** Select your desired slide. Open the slide compartment on the projector, insert the slide, and close the compartment securely. Ensure the slide is correctly oriented for projection.

3. **Position the Projector:** Adjust the projector's position and the 180-degree rotatable head to achieve the desired projection area and angle on your wall or surface.

4. **Connect Power:** Plug the 16.3-foot power cord into a standard electrical outlet. Ensure the outlet is suitable for outdoor use if installing outdoors.



Image: A family enjoying Easter projections indoors, with the projector discreetly placed on the floor, demonstrating versatile placement.



Halloween



Christmas



Mother's Day



Father's Day

Image: Collage image showcasing various holiday projections: Halloween, Christmas, Mother's Day, and Father's Day, demonstrating the projector's versatility for year-round use.

## OPERATING INSTRUCTIONS

1. **Power On/Off:** Once plugged in, the projector will power on. Use the remote control to turn the projector on or off.
2. **Change Slides:** To change the projected pattern, power off the projector, open the slide compartment, replace the current slide with a new one, and close the compartment. Power on the projector to see the new pattern.
3. **Adjust Projection Modes:** Use the remote control to cycle through different projection modes, which may include static patterns, rotating patterns, water wave effects, or a combination of both.
4. **Adjust Speed:** The remote control allows you to adjust the rotation speed of the patterns and the movement speed of the water wave effect.
5. **Timer Function:** Set a timer using the remote control for automatic shut-off after a specified duration.

# Landscape Projector for All Year Round Holiday Disco Party Daily Life


19 Patterns Sliders-Color Never Fading



Image: A visual representation of the 19 interchangeable slides included with the projector, showcasing various holiday and seasonal themes.

## 2026 Latest Upgraded Projector Light

## 2025 Old Version Projector Light

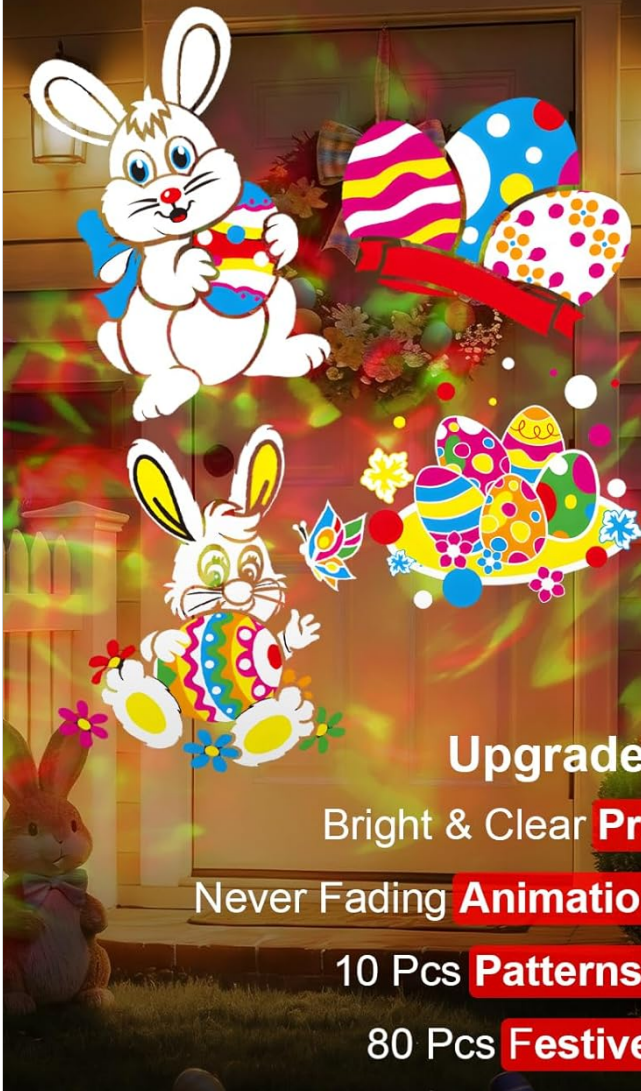

### Upgrade Function

Bright & Clear **Projector** Dim & Blur

Never Fading **Animations** 2 Months Later Fading

10 Pcs **Patterns Sliders** Only One

80 Pcs **Festive Patterns** 4 Pcs

Image: Comparison highlighting the upgraded 2026 projector light (left) with brighter, clearer, and non-fading animations, versus the 2025 old version (right) with dim and blurry projections.

## MAINTENANCE

- **Cleaning:** Periodically wipe the projector lens and body with a soft, dry cloth to remove dust and debris. Do not use abrasive cleaners or solvents.
- **Slide Care:** Handle slides carefully to avoid scratches or damage. Store them in a clean, dry place when not in use.
- **Storage:** When not in use for extended periods, store the projector in its original packaging or a protective container in a cool, dry place.
- **Weather Protection:** While the projector is IP65 waterproof, avoid submerging it in water or exposing it to extreme weather conditions for prolonged periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No projection or dim light	Power not connected; Projector off; Damaged slide; Lens obstructed.	Ensure power cable is securely plugged in. Turn on the projector using the remote. Check if the slide is inserted correctly and undamaged. Clean the lens if dirty.
Blurry projection	Incorrect focus; Dirty lens/slide; Projector too far/close.	Adjust the distance to the projection surface. Clean the lens and slide. Ensure the slide is fully inserted.
Patterns not changing/moving	Static mode selected; Motor issue.	Use the remote control to select a dynamic or rotating pattern mode. If the issue persists, contact customer support.
Remote control not working	Battery depleted; Obstruction; Out of range.	Replace the remote control battery. Ensure there are no obstructions between the remote and the projector. Operate within the specified range.

## SPECIFICATIONS

<b>Brand</b>	FLITI
<b>Model Number</b>	Halloween-light-8.26
<b>Product Type</b>	Holiday Decoration Projector Light
<b>Color</b>	Black A-11 Theme
<b>Shape</b>	Snowflake (referring to pattern type)
<b>Material</b>	Plastic
<b>Finish Type</b>	Projector
<b>Light Source Type</b>	LED
<b>Power Source</b>	Corded Electric
<b>Voltage</b>	120 Volts (AC)
<b>Wattage</b>	10 Watts
<b>Mounting Type</b>	Floor Mount, Wall Mount
<b>Light Source Features</b>	RGB, Water Wave
<b>Number of Light Sources</b>	2
<b>Beam Angle</b>	180 degrees
<b>Item Dimensions (L x W x H)</b>	5 x 4 x 6 cm
<b>UPC</b>	199284375338
<b>Included Components</b>	Slides, Remote Control

## WARRANTY AND SUPPORT

FLITI offers a **30-day return and refund service** for this product. Additionally, a **1-year warranty service** is provided from

the date of purchase. For any questions, technical assistance, or warranty claims, please contact FLITI customer support through your retailer or the official FLITI website. Please retain your proof of purchase for warranty validation.