

Evolved Novelties 840739

Evolved Novelties Real Simple 10 Function Rechargeable Bullet User Manual

Model: 840739

INTRODUCTION

Thank you for choosing the Evolved Novelties Real Simple 10 Function Rechargeable Bullet. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before first use and retain it for future reference.

The Real Simple Bullet is designed for personal pleasure, featuring a sleek, discreet design with a powerful 10-speed motor and a tapered tip. It is crafted for ease of use with a single-button control and is fully submersible for use in water and easy cleaning.

IMPORTANT SAFETY INFORMATION

- **Read all instructions before use.**
- This product is for external use only.
- Discontinue use immediately if you experience any discomfort, irritation, or pain. Consult a healthcare professional if symptoms persist.
- Consult a healthcare professional if you have any pre-existing medical conditions or concerns before using this product.
- Keep out of reach of children.
- Do not use if the product appears damaged or defective.
- Use only the provided USB charging cable. Do not use damaged chargers or cables.
- Do not leave the product unattended while charging.
- Avoid extreme temperatures and direct sunlight.
- Clean the product thoroughly before and after each use as instructed in the Maintenance section.

PACKAGE CONTENTS

- 1 x Evolved Novelties Real Simple 10 Function Rechargeable Bullet
- 1 x USB Charging Cable
- 1 x User Manual

PRODUCT OVERVIEW

The Evolved Novelties Real Simple Bullet features a compact design with a single control button and a discreet charging port.



This image displays the Evolved Novelties Real Simple 10 Function Rechargeable Bullet in its entirety, showcasing its sleek, smoke-colored, bullet-shaped design. The device has a smooth, glossy finish and a subtle seam where the two halves meet. A small, circular control button is visible near the base.

SETUP

Initial Charge

Before first use, fully charge the device. Connect the provided USB charging cable to the charging port on the device and plug the other end into a standard USB power source (e.g., computer, USB wall adapter). The indicator light will show charging status (e.g., blinking while charging, solid when fully charged).

First Use

Clean the device thoroughly before its initial use as per the 'Maintenance and Cleaning' section.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the control button for approximately 2-3 seconds to turn the device on or off.
2. **Cycle Functions:** Once powered on, short press the control button to cycle through the 10 distinct vibration functions.
3. **Explore Functions:** Experiment with the different patterns and intensities to find your preferred setting.



This image shows a close-up of the Evolved Novelties Real Simple Bullet, highlighting the control button and the charging port area. The circular control button is black and slightly recessed, located on the lower half of the device. The charging port is a small, circular opening adjacent to the button, designed for the USB charging cable.

CHARGING

When the battery is low, the indicator light may flash or the device's performance may decrease. To recharge:

1. Locate the charging port on the device.
2. Insert the small end of the provided USB charging cable into the device's charging port.
3. Connect the larger end of the USB cable to a compatible USB power source (e.g., computer, USB wall adapter).
4. The indicator light will illuminate or blink to indicate charging. Refer to the product's specific light behavior for

charging status (e.g., solid light when fully charged).

5. Disconnect the cable once charging is complete. Do not overcharge.

Charging time may vary depending on the power source and battery level.

MAINTENANCE AND CLEANING

- **Cleaning:** Clean the device thoroughly before and after each use. Wash with warm water and a mild, toy-safe soap or a specialized toy cleaner. Rinse thoroughly with clean water.
- **Drying:** Pat dry with a lint-free cloth or allow to air dry completely before storage.
- **Water Submersion:** The device is fully submersible. Ensure the charging port is completely dry before connecting the charging cable.
- **Do Not Use:** Avoid harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the material.

STORAGE

- Store the device in a clean, dry, and cool place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation or reactions.
- Ensure the device is fully charged before long-term storage to maintain battery health.

TROUBLESHOOTING

- **Device not turning on:**
 - Ensure the device is fully charged. Connect to the USB charger and check the indicator light.
 - Press and hold the power button for 2-3 seconds. A short press may only cycle functions if already on.
- **Device not charging:**
 - Check if the USB cable is securely connected to both the device and the power source.
 - Try a different USB port or power adapter.
 - Ensure the charging port on the device is clean and free of debris.
- **Weak vibrations or inconsistent functions:**
 - The battery may be low. Recharge the device.
 - Ensure the device is clean and free of any obstructions.

If problems persist, please contact customer support.

SPECIFICATIONS

- **Model:** 840739
- **Material:** ABS with Metal Finish (Exterior), Silicone (Contact Surface)
- **Color:** Smoke
- **Functions:** 10 Vibration Functions
- **Power Source:** USB Rechargeable
- **Dimensions:** 6.3 x 4.72 x 1.57 inches

- **Weight:** Approximately 2.01 ounces
- **Water Resistance:** Fully Submersible
- **Manufacturer:** Evolved novelties inc.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Evolved Novelties customer service directly. Contact details can typically be found on the manufacturer's official website or product documentation.

Website: www.evolvednovelties.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question