

## My Fan Parts UC7216T

# UC7216T Ceiling Fan Remote Control Instruction Manual

Model: UC7216T

## 1. INTRODUCTION

---

Thank you for choosing the My Fan Parts UC7216T Ceiling Fan Remote Control. This remote is designed to provide convenient control over your ceiling fan's speed and light functions. Please read this manual carefully before installation and operation to ensure proper use and longevity of your product.

## 2. PRODUCT OVERVIEW

---

The UC7216T remote control features a slim design with clearly labeled buttons for fan speed and light control. It also includes a wall holder for convenient storage.

### 2.1 Remote Control Layout (Front)





This image displays the front of the UC7216T remote control. It features five grey buttons: 'HI', 'MED', 'LOW', and 'OFF' for fan speed control, stacked vertically. Below these is a button with a light bulb icon for controlling the fan's light. A small indicator light is visible at the top.

- **HI:** Activates high fan speed.
- **MED:** Activates medium fan speed.
- **LOW:** Activates low fan speed.

- **OFF:** Turns the fan off.
- **Light Button:** Toggles the fan light on/off.

## 2.2 Remote Control Layout (Back)





This image shows the back of the UC7216T remote control with the battery cover open. Two empty compartments for AAA batteries are visible. Above the battery compartments, a small panel reveals four dip switches labeled 1 through 4, which are used for frequency matching with the fan receiver.

- **Battery Compartment:** Holds two (2) AAA batteries (not included).
- **Dip Switches:** A set of four small switches used to match the frequency code with your ceiling fan's receiver unit.

### 3. SETUP

---

#### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover open.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery cover securely.

*Note: Batteries are not included with this product.*

#### 3.2 Matching Dip Switches

For the remote control to communicate with your ceiling fan, the dip switches on the remote must match the dip switches on your fan's receiver unit. The receiver unit is typically located in the fan's canopy, above the motor housing.

1. Turn off the power to your ceiling fan at the circuit breaker or wall switch.
2. Access the receiver unit in your ceiling fan's canopy. This may require removing the fan's decorative cover.
3. Identify the dip switches on the receiver unit. Note their ON/OFF (or UP/DOWN) positions.
4. On your UC7216T remote control, open the battery cover to expose its dip switches.
5. Carefully adjust the dip switches on the remote control to exactly match the pattern of the dip switches on your fan's receiver unit.
6. Once matched, replace the battery cover on the remote and reassemble your fan's canopy cover.
7. Restore power to your ceiling fan.

**Important: Failure to match the dip switches correctly will prevent the remote from operating your fan.**

### 4. OPERATING INSTRUCTIONS

---

Once the remote is set up and paired with your fan, you can use the buttons to control its functions:

- **Fan Speed Control:** Press the 'HI', 'MED', or 'LOW' buttons to select the desired fan speed. Press 'OFF' to turn the fan off.
- **Light Control:** Press the 'Light' button (with the light bulb icon) to turn the fan light on or off.

## 5. MAINTENANCE

---

### 5.1 Battery Replacement

When the remote's performance diminishes or the indicator light does not illuminate, it's time to replace the batteries. Follow the battery installation steps in Section 3.1.

### 5.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the remote in water.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not operating fan/light.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote not operating fan/light.	Dip switches not matched.	Verify that the dip switches on the remote match those on the fan's receiver unit (refer to Section 3.2).
Intermittent operation.	Weak batteries.	Replace batteries.
Fan/light does not respond after power outage.	Receiver unit needs reset.	Turn off power to the fan at the circuit breaker for 30 seconds, then restore power.

## 7. SPECIFICATIONS

---

- **Model Number:** UC7216T
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity:** Radio Frequency (RF)
- **Number of Buttons:** 4 (plus light control)
- **Manufacturer:** Rhine
- **Country of Origin:** Taiwan

## 8. WARRANTY AND SUPPORT

---

Specific warranty information for this product is not provided in the available documentation. For details regarding warranty coverage, returns, or technical support, please contact the seller or the manufacturer, My Fan Parts, directly through their official channels.

For further assistance, please refer to the contact information provided by your retailer or on the product packaging.

