

Alesis

Alesis Harmony 61 Pro

DIGITAL KEYBOARD USER MANUAL

Introduction

The Alesis Harmony 61 Pro is a versatile 61-key keyboard piano designed for both beginners and experienced players. It features touch-sensitive keys with adjustable response, a vast sound library, and an intuitive control set for enhanced musical expression.

Key features include:

- 61 full-size keys with user-adjustable touch response.
- 580 premium built-in sounds with Layer and Split modes.
- Pitch-bend wheel and X/Y performance touchpad with DJ-style FX.
- 177 built-in demo songs with step-lesson mode.
- 180 built-in accompaniment rhythms.
- On-board effects: 10 Reverb, 8 Chorus, and 2 Slicer effects.
- Backlit LCD screen with notation and chord dictionary.
- Built-in recorder for .WAV file recording via SD card input.
- USB-MIDI connection for use with educational and recording software.
- Powerful 30W (15W x 2) stereo speaker system.
- Connectivity: 1/4" Stereo out, 1/8" AUX input.
- Optional battery power for portability.

What's in the Box

Please ensure all the following items are included in your package:

- Alesis Harmony 61 Pro Digital Keyboard
- Power Supply
- Music Rest
- User Guide (this manual)



Image: The Alesis Harmony 61 Pro keyboard shown with its included accessories: power adapter and music rest. It also highlights the option for battery power (6 AA Cell Batteries, not included).

Setup

1. **Power Connection:** Connect the included power adapter to the DC 12V input on the rear panel of the Harmony 61 Pro and then to a power outlet. Alternatively, for portable use, insert 6 AA cell batteries (not included) into the battery compartment on the underside of the keyboard.
2. **Music Rest Installation:** Slide the music rest into the slot located on the top panel of the keyboard. Ensure it is securely seated.
3. **Audio Output:** For private practice, connect headphones to the 1/4" PHONES jack. To connect to external speakers or an amplifier, use the 1/4" STEREO OUT jack.
4. **Audio Input:** To play along with an external audio device (e.g., smartphone, tablet), connect it to the 1/8" AUX IN jack using an appropriate audio cable.
5. **USB-MIDI Connection:** For connecting to a computer for MIDI functionality with educational or recording software, use a standard USB cable to connect the USB-MIDI port on the keyboard to your computer's USB port.
6. **SD Card:** Insert an SD card into the SD CARD input slot for recording your performances as .WAV files.



Image: A close-up view of the rear panel of the Alesis Harmony 61 Pro, highlighting its various connectivity options including the SD card input, USB-MIDI port, Sustain pedal input, Headphone jack, Aux In, and Power input.

Operating Instructions

Basic Operation

- **Power On/Off:** Press the Power button located on the control panel to turn the keyboard on or off.
- **Volume Control:** Use the Master Volume knob to adjust the overall output volume.
- **Sound Selection:** Use the "SOUND" buttons and the numeric keypad to select from the 580 built-in sounds. The LCD screen will display the selected sound.



61

FULL-SIZE KEYS

with user adjustable touch response



580

PREMIUM SOUNDS

with layer and split mode functionality



DJ-STYLE

MIX MODE

features 30 different styles with 5 sections each

Image: The Alesis Harmony 61 Pro keyboard, emphasizing its 61 full-size keys with adjustable touch response, the extensive library of 580 premium sounds, and the DJ-style Mix Mode featuring 30 different styles.

Performance Features

- **Touch Response:** Adjust the touch sensitivity of the keys to match your playing style. Refer to the user guide for detailed settings.
- **Pitch-Bend Wheel:** Use the pitch-bend wheel on the left side of the keyboard to smoothly bend the pitch of notes up or down for expressive playing.
- **X/Y Performance Touchpad:** Explore the X/Y touchpad for real-time control over various parameters and DJ-style effects.
- **Layer Mode:** Combine two different sounds to play simultaneously when a key is pressed.
- **Split Mode:** Divide the keyboard into two sections, allowing you to play different sounds with your left and right hands.



Image: A detailed view of the Alesis Harmony 61 Pro, showcasing the pitch-bend wheel for expressive control, the X/Y performance touchpad for dynamic effects, and the powerful 30W (15W x 2) stereo speaker system.

Learning and Practice Tools

- **Built-in Songs:** Access 177 built-in demo songs. Utilize the step-lesson mode to learn these songs note by note.
- **Auto-Accompaniment:** Choose from 180 built-in auto-accompaniment patterns to provide a full band backing for your playing.
- **Metronome:** The built-in metronome is adjustable from 5-280 BPM, providing a steady beat for practice.
- **Chord Dictionary:** The backlit LCD screen displays notation and includes a built-in chord dictionary to assist with learning chords.



580
SOUNDS
LCD
SCREEN

180
BUILT-IN AUTO-
ACCOMPANIMENT
PATTERNS

BUILT-IN
METRONOME
ADJUSTABLE
FROM 5-280 BPM

Image: The Alesis Harmony 61 Pro keyboard's control panel, highlighting the backlit LCD screen that shows notation, the availability of 180 built-in auto-accompaniment patterns, and the adjustable built-in metronome (5-280 BPM).

Recording and Effects

- **On-board FX:** Apply 10 Reverb, 8 Chorus, and 2 Slicer effects to add depth and character to your sound.
- **Recording:** Record your performances directly to an SD card as high-quality lossless .WAV files (16-bit, 44.1kHz).

CONNECTIVITY



Image: The Alesis Harmony 61 Pro keyboard, showcasing its on-board effects (10 Reverb, 8 Chorus, 2 Slicer), 180 built-in auto-accompaniment patterns, and 177 built-in songs with step-lesson functionality.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surface of the keyboard. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the unit. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove batteries to prevent leakage.
- **Key Care:** Keep the keys free from dust and debris. Avoid placing heavy objects on the keys.
- **Power Adapter:** Always use the original power adapter provided with the unit. Disconnect the power adapter from the wall outlet when not in use for long periods.

Troubleshooting

If you encounter issues with your Alesis Harmony 61 Pro, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
No power	<p>Ensure the power adapter is securely connected to both the keyboard and a working power outlet.</p> <p>If using batteries, check if they are correctly inserted and not depleted. Replace if necessary.</p> <p>Try a different power outlet.</p>
No sound from speakers/headphones	<p>Check the Master Volume knob and ensure it is turned up.</p> <p>Ensure headphones are fully plugged into the PHONES jack.</p> <p>If using external speakers, ensure they are powered on and connected correctly.</p> <p>Verify that a sound is selected and not set to a silent patch.</p>
Keys not responding or inconsistent touch response	<p>Check the touch response settings in the keyboard's menu. Adjust as needed.</p> <p>Ensure no foreign objects are lodged under the keys.</p>
SD card not recognized or recording issues	<p>Ensure the SD card is inserted correctly and fully.</p> <p>Check the SD card format. It may need to be formatted by the keyboard itself.</p> <p>Ensure the SD card is not full or write-protected.</p>

For more detailed troubleshooting or issues not listed here, please refer to the complete User Guide PDF available on the Alesis website or contact Alesis customer support.

Specifications

Feature	Detail
Keys	61 full-size, touch-sensitive
Sounds	580 built-in premium sounds
Polyphony	64-note max
Effects	10 Reverb, 8 Chorus, 2 Slicer
Accompaniment Patterns	180 built-in
Demo Songs	177 built-in with lesson function
Display	Backlit LCD with notation and chord dictionary
Speakers	30W (15W x 2) stereo
Connectivity	1/4" Stereo Out, 1/8" AUX In, 1/4" PHONES, USB-MIDI, SD Card Input
Power	12V DC power adapter (included) or 6 AA cell batteries (not included)
Dimensions (L x W x H)	1.42"D x 3.72"W x 0.46"H
Item Weight	7.53 Kilograms (16.57 pounds)

Feature	Detail
Model Name	Harmony 61 Pro
UPC	694318025857

Warranty Information

Alesis products are manufactured to the highest quality standards. For specific warranty terms and conditions applicable to your Harmony 61 Pro keyboard, please refer to the warranty card included with your product or visit the official Alesis website. Warranty coverage typically includes defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims.

Support

For further assistance, technical support, or to access additional resources such as updated drivers, software, and FAQs, please visit the official Alesis support website:

Alesis Support Website

You can also find additional information and product registration details on the Alesis brand store page on Amazon [Alesis Amazon Store](#).

© 2024 Alesis. All rights reserved.

Alesis is a registered trademark of inMusic Brands, Inc.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question