

Satisfyer 9043712

Satisfyer Viva la Vulva 3 Lay-on Vibrator User Manual

Model: 9043712

1. PRODUCT OVERVIEW

The Satisfyer Viva la Vulva 3 is a lay-on vibrator designed for clitoral stimulation. It features a playful design and a wide, rounded surface made of body-friendly, hygienic silicone. The device offers 12 distinct vibration modes, controllable via a single touch button.

Its innovative design ensures that vibrations are concentrated at the contact surface for intense stimulation, while the handle experiences minimal vibration for comfortable use. The Viva la Vulva 3 is waterproof (IPX7), allowing for use in various environments, including the shower or bath. It is powered by a built-in rechargeable battery.



Image 1.1: The Satisfyer Viva la Vulva 3 lay-on vibrator, showcasing its ergonomic and playful design in mint.

PRODUCT FEATURES

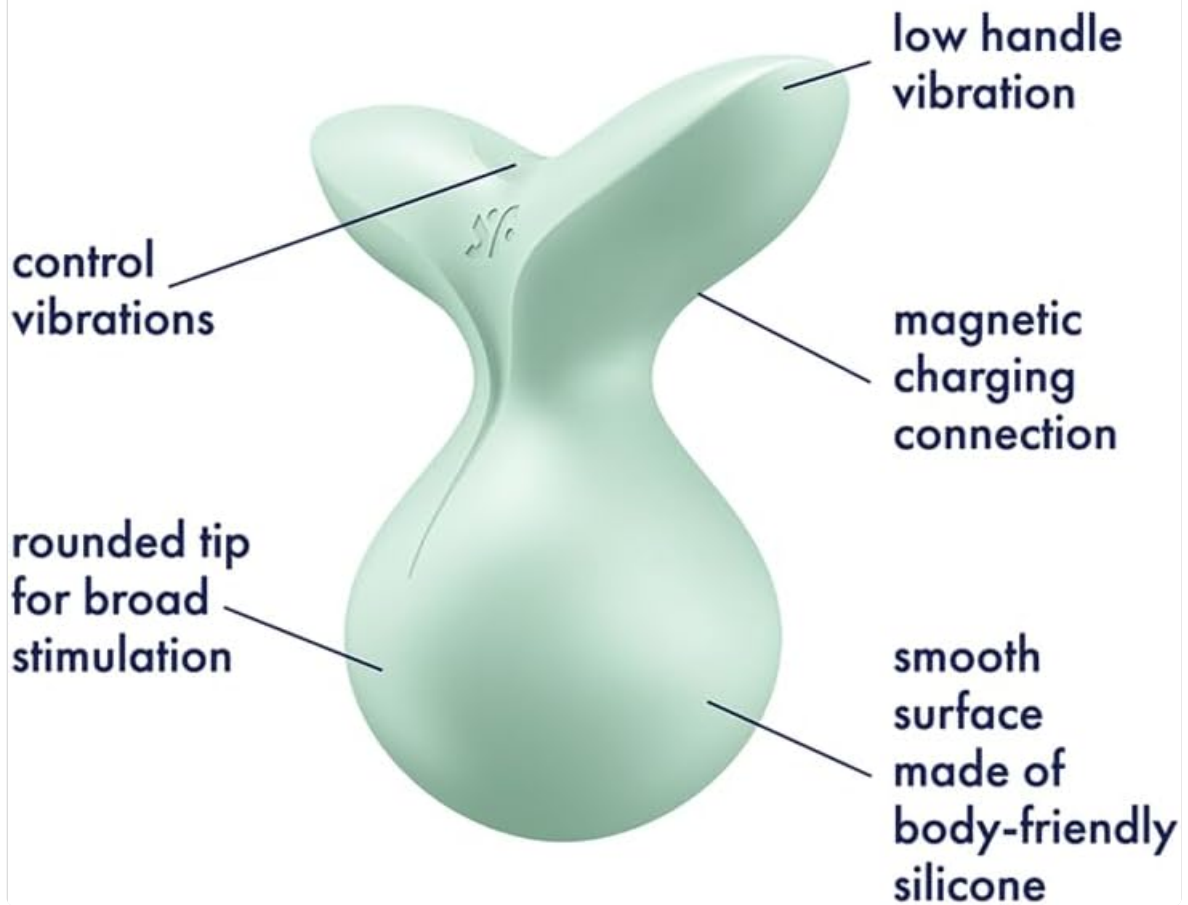


Image 1.2: Diagram illustrating key features including low handle vibration, control button, magnetic charging connection, rounded tip for broad stimulation, and smooth body-friendly silicone surface.

2. SETUP AND FIRST USE

2.1 Unpacking

Carefully remove the device and all accessories from the packaging. Verify that all components, including the USB charging cable, are present.

2.2 Initial Charging

Before first use, fully charge the device. Connect the included USB charging cable to the magnetic charging contacts located on the back of the device and to a standard USB power source (e.g., computer USB port, USB wall adapter). The charging indicator will illuminate during charging and change when fully charged (refer to LED indicator behavior in the specifications section).



Image 2.1: Rear view of the device, highlighting the two magnetic charging contact points.

2.3 Cleaning Before Use

Clean the device thoroughly with warm water and a mild, toy-safe cleaner before its first use. Rinse well and allow to air dry or gently pat dry with a lint-free cloth.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

To power on the device, press and hold the One Touch button for approximately 2 seconds. The device will start vibrating. To power off, press and hold the One Touch button again for approximately 2 seconds.

3.2 Changing Vibration Modes

Once the device is powered on, short presses of the One Touch button will cycle through the 12 available vibration modes. Experiment with each mode to find your preferred intensity and pattern.

3.3 Usage

Position the wide, rounded surface of the vibrator against the clitoral area for direct stimulation. The ergonomic handle is designed to fit comfortably in your hand, providing control during use. The device's waterproof design allows for use in wet environments.



Image 3.1: The device illustrating its 'Steady Handle' feature, indicating minimal vibration in the handle for enhanced comfort during use.

4. CARE AND MAINTENANCE

4.1 Cleaning

After each use, clean the device thoroughly. Use warm water and a mild, toy-safe cleaning solution. Avoid harsh chemicals, alcohol, or petroleum-based cleaners, as these can damage the silicone material. Rinse the device completely and allow it to air dry or pat dry with a soft, lint-free cloth.

4.2 Charging

Recharge the device as needed using the provided USB cable. Avoid overcharging by disconnecting the charger once the battery is full. The battery life is approximately one hour of continuous use, and charging time is typically fast.

4.3 Storage

Store the device in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation or reactions.

5. TROUBLESHOOTING

- **Device does not turn on:** Ensure the device is fully charged. Connect it to the charger and wait for the charging indicator to confirm.
- **Vibrations are weak or inconsistent:** The battery may be low. Recharge the device.
- **Device does not charge:** Ensure the USB cable is securely connected to both the device's magnetic contacts and the power source. Try a different USB port or power adapter. Clean the magnetic charging contacts on the device and cable with a dry cloth to ensure good connection.
- **Unusual noise or odor:** Discontinue use immediately and contact customer support.

6. PRODUCT SPECIFICATIONS

Brand	Satisfyer
Model Name	Viva la Vulva 3
Item Model Number	9043712
Color	Mint
Material	Medical Silicone
Vibration Modes	12
Water Resistance Level	Waterproof (IPX7)
Battery	1 Lithium Polymer battery (included)
Product Dimensions (L x W x H)	19.69 x 19.69 x 11.02 inches
Weight	8.47 ounces
Manufacturer	Satisfyer
Date First Available	August 15, 2023

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The Satisfyer Viva la Vulva 3 comes with a**15-year warranty**, ensuring long-lasting satisfaction and product reliability. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, concerns, or technical assistance, please refer to the official Satisfyer website or contact their customer support directly. Contact information can typically be found on the product packaging or the brand's official online presence.

© 2024 Satisfyer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question