

RC-799M

Generic RC-799M Remote Control Instruction Manual

For Onkyo A/V AV Receivers

INTRODUCTION

This manual provides instructions for the Generic RC-799M Infrared Replacement Remote Control. It is designed for use with various Onkyo A/V AV Receiver models. Please note that this is a replacement remote and may not support all functions of the original remote. Compatibility is limited to the models listed in the product title.

SETUP

Battery Installation

This remote control requires 2 AA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two AA batteries, ensuring correct polarity (+ and - terminals) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image: Back view of the remote control with the battery compartment open, illustrating battery insertion.

OPERATING INSTRUCTIONS

Basic Operation

After battery installation, the remote control is ready for immediate use with compatible Onkyo A/V AV Receivers.

- Point the remote control directly at the infrared (IR) sensor on your Onkyo A/V AV Receiver.
- Press the desired function buttons (e.g., Power, Volume Up/Down, Input Select, Menu Navigation) to control your receiver.

Compatibility Note

This remote is specifically designed for Onkyo and INTEGRA components. It **cannot** be programmed to control other brands of televisions or devices. Some original remote functions, such as a dedicated mute button, may not be present on this replacement model.



Image: Front view of the remote control, displaying its button layout.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote in a dry place away from direct sunlight, high humidity, and extreme temperatures.
- **Battery Replacement:** If the remote's performance degrades or it becomes unresponsive, replace both AA batteries with new ones. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check battery polarity. Ensure batteries are inserted correctly according to the markings inside the compartment.
 - Replace old batteries with new ones. Weak batteries are a common cause of unresponsiveness.
 - Ensure there are no obstructions between the remote control and the receiver's IR sensor.
 - Verify that your receiver model is listed as compatible with this remote control.
- **Some functions not working:**
 - This replacement remote may not support all functions of your original remote. Refer to the product description for known limitations (e.g., absence of a dedicated mute button).
 - This remote cannot be programmed for other devices or brands. It is designed exclusively for compatible Onkyo and INTEGRA components.

SPECIFICATIONS

- **Model Number:** RC-799M
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AA Batteries (not included)
- **Compatible Devices:** Onkyo and INTEGRA A/V AV Receivers (specific models listed in product title)
- **Special Feature:** Cannot program, only controls Onkyo & INTEGRA components. May not include all original remote functions (e.g., no dedicated mute button).

WARRANTY AND SUPPORT

This product is a generic replacement remote control. For specific warranty information, please refer to the seller's policy at the time of purchase. No instruction manual is included with the physical product; this digital manual serves as the primary guide. For further assistance or inquiries, please contact the seller directly through your purchase platform.