

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Roxicosly](#) /

› [Roxicosly CR1023 Digital Alarm Clock Instruction Manual](#)

## Roxicosly CR1023

# Roxicosly CR1023 Digital Alarm Clock Instruction Manual

Model: CR1023

## 1. INTRODUCTION

Thank you for choosing the Roxicosly CR1023 Digital Alarm Clock. This user-friendly device features a large, mirrored display, dual alarms, adjustable brightness, a night light, and convenient charging ports. This manual provides detailed instructions to help you set up and operate your new alarm clock effectively.



Image: The Roxicosly Digital Alarm Clock, highlighting its mirrored display and key features such as large digital display, dimmer, snooze, night light, dual alarm, volume knob, 12/24H format, USB/Type-C charging, and DST indicator.

## 2. PACKAGE CONTENTS

- 1x Roxicosly CR1023 Digital Alarm Clock
- 1x DC Adapter & USB Cable
- 1x User Manual



Image: The Roxicosly Digital Alarm Clock, its power adapter, and USB cable, laid out next to the product box and manual.

## 3. SETUP

### 3.1 Power Connection

1. Connect the provided DC adapter to the DC jack on the back of the alarm clock.
2. Plug the DC adapter into a standard wall outlet. The clock display will illuminate.

### 3.2 Battery Backup (Optional)

For backup power during outages, install 2 AAA batteries (not included) into the reserved slot on the back of the clock. These batteries will preserve time and alarm settings. During a power outage, the screen will go blank, but the alarm function will remain active. The correct time will display once main power is restored.



Image: Rear view of the alarm clock with the battery compartment open, showing where to insert AAA backup batteries.

## 4. OPERATING INSTRUCTIONS

### 4.1 Setting Time and Date

1. Press the **TIME/DST** button on the back of the clock. The hour digits will flash.
2. Use the **+** or **-** buttons to adjust the hour.
3. Press **TIME/DST** again to set the minutes, then use **+** or **-** to adjust.

4. Continue pressing **TIME/DST** to cycle through setting the year, month, and day, adjusting each with **+** or **-**.
5. Press **TIME/DST** one last time to confirm all settings.

#### 4.2 12H/24H Format & DST

- To switch between 12-hour and 24-hour time formats, press the **12/24H** button.
- To activate or deactivate Daylight Saving Time (DST), press and hold the **TIME/DST** button.



Image: The alarm clock displaying time in 12-hour, 24-hour, and with Daylight Saving Time (DST) activated.

#### 4.3 Setting Alarms (Dual Alarms)

The clock supports two independent alarms (Alarm 1 and Alarm 2).

1. Press the **ALARM 1** or **ALARM 2** button. The hour digits for the selected alarm will flash.
2. Use the **+** or **-** buttons to adjust the alarm hour.
3. Press the respective **ALARM** button again to set the minutes, then use **+** or **-** to adjust.
4. Press the **ALARM** button one last time to confirm.
5. To turn an alarm ON or OFF, use the dedicated **ALM ON/OFF** switch for Alarm 1 or Alarm 2.

#### 4.4 Alarm Volume Adjustment

Adjust the alarm volume using the physical twist knob located on the back of the clock. There are 7 volume levels (70-118 dB) to suit your preference.

# USB&Type-C Charging Ports

Charge 2 devices at the same time



Image: The alarm clock displaying two different alarm times (7:30 and 15:30) and illustrating the 7 adjustable increasing volume levels.

## 4.5 Display Brightness (0-100% Dimmer)

The digital display brightness can be adjusted from 0% to 100% using the physical twist knob on the back of the clock. This allows you to set a comfortable brightness level for day or night without disturbing your sleep.

# 9 Minutes Snooze & Dimmable Night Light



Image: The alarm clock with large, bold numbers and a visual representation of the 0-100% full-range dimmer functionality.

## 4.6 Night Light & Snooze Function

- The clock features a built-in night light at the back with 3 adjustable brightness settings.
- To activate or adjust the night light, press the large button on the top of the clock.
- When an alarm sounds, press the large button on the top for a 9-minute snooze.

# DUAL ALARMS

🕒 7:30



15:30 🕒



**7 Adjustable Increasing Volume(70db-118db)**



Image: The alarm clock on a nightstand, illustrating the night light feature with three brightness levels and the large top button for snooze.

## 4.7 Charging Ports

The clock is equipped with two charging ports on the back:

- 1x USB charging port
- 1x Type-C charging port

These ports allow you to charge up to two mobile devices simultaneously, making it ideal for overnight charging.



Image: The alarm clock on a desk, showing a smartphone and wireless earbuds charging via its USB and Type-C ports.

## 5. MAINTENANCE

- Clean the clock's mirrored surface and body with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Ensure the clock is unplugged before cleaning.
- Keep the clock away from water and high humidity.

## 6. TROUBLESHOOTING

Problem	Solution
Clock display is blank.	Ensure the DC adapter is securely plugged into both the clock and a working wall outlet. If using battery backup, the screen will be blank during a power outage, but the alarm will still function.
Alarm does not sound.	Check that the alarm is set correctly and the <b>ALM ON/OFF</b> switch is in the ON position. Verify the volume knob is not set to the lowest level.
Time/settings reset after power outage.	Install 2 AAA backup batteries (not included) to retain settings during power interruptions.
Display is too bright/dim.	Adjust the display brightness using the physical twist knob on the back of the clock.

## 7. SPECIFICATIONS

- **Brand:** Roxicosly
- **Model:** CR1023
- **Display Type:** Digital LED with Mirrored Face
- **Display Size:** 7 inches (approx. 6.5"W x 3.03"H)
- **Power Source:** DC (Plug-in)
- **Battery Backup:** 2x AAA batteries (not included) for memory retention
- **Dimmer:** 0-100% Full Range Dimmer (adjustable via knob)

- **Alarm:** Dual Alarms with 7 Volume Levels (70-118 dB)
- **Snooze:** 9 minutes
- **Night Light:** Built-in, 3 adjustable brightness settings
- **Charging Ports:** 1x USB, 1x Type-C
- **Time Format:** 12H/24H selectable
- **Special Features:** DST (Daylight Saving Time) function
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Mounting Type:** Tabletop

## 8. OFFICIAL PRODUCT VIDEO

---

Your browser does not support the video tag.

Video: An official demonstration of the Roxicosly Digital Alarm Clock with Mirror Screen, showcasing its features and ease of use.

## 9. WARRANTY & SUPPORT

---

If you have any questions or require assistance with your Roxicosly CR1023 Digital Alarm Clock, please feel free to contact us. Refer to your product packaging or purchase platform for specific warranty details and customer support contact information.