

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DOFLER](#) /

› [DOFLER Night Light Projector BZ-001 Instruction Manual](#)

## DOFLER BZ-001

# DOFLER Night Light Projector BZ-001 Instruction Manual

Model: BZ-001 | Brand: DOFLER

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your DOFLER Night Light Projector, Model BZ-001. This device is designed to create a soothing environment with light projections and lullaby music. Please read this manual thoroughly before operation and retain it for future reference.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- DOFLER Night Light Projector (Main Unit)
- Remote Control
- 3 Projection Films (Star and Moon, Sea World, Dinosaur World)
- USB Charging Cable
- Instruction Manual (this document)

## SETUP

### 1. Charging the Device

The projector contains a built-in lithium battery. Before first use, fully charge the device using the provided USB charging cable. Connect the small end of the USB cable to the charging port on the projector and the larger end to a standard USB power adapter (not included) or a computer USB port. The charging indicator light will show the charging status.

### 2. Installing Projection Films

1. Gently remove the top dome cover of the projector.
2. Select one of the three projection films. Ensure the film is clean and free of dust.

- Carefully align the film with the internal grooves and place it onto the projector's inner cylinder.
- Replace the top dome cover, ensuring it is securely seated.



Image: The DOFLER Night Light Projector displaying its interchangeable projection films and remote control. This image illustrates the various components and the overall design of the product.

## OPERATION

### 1. Power On/Off

Press the power button on the projector or the remote control to turn the device on or off.

### 2. Projection Themes

The projector comes with three distinct projection films:

- **Star and Moon:** Projects a classic starry night sky.
- **Sea World:** Displays various ocean creatures and underwater scenes.
- **Dinosaur World:** Features dinosaur patterns.

To change the theme, replace the projection film as described in the "Installing Projection Films" section.

# 3 Interesting Projection Themes

Discover the endless charm of the nature and creatures.



**Sea World**



**Dinosaur World**



**Stars and Moon**


*Image: Examples of the three available projection themes: Sea World, Dinosaur World, and Stars and Moon, as projected onto a room's ceiling and walls.*

## 3. Light Modes and Brightness

The projector offers 17 different lighting effects, combining single and mixed colors. Use the remote control to adjust light colors and brightness levels (50%, 75%, 100%).

## 3 -Level Brightness Control

Change the brightness level according to your needs.

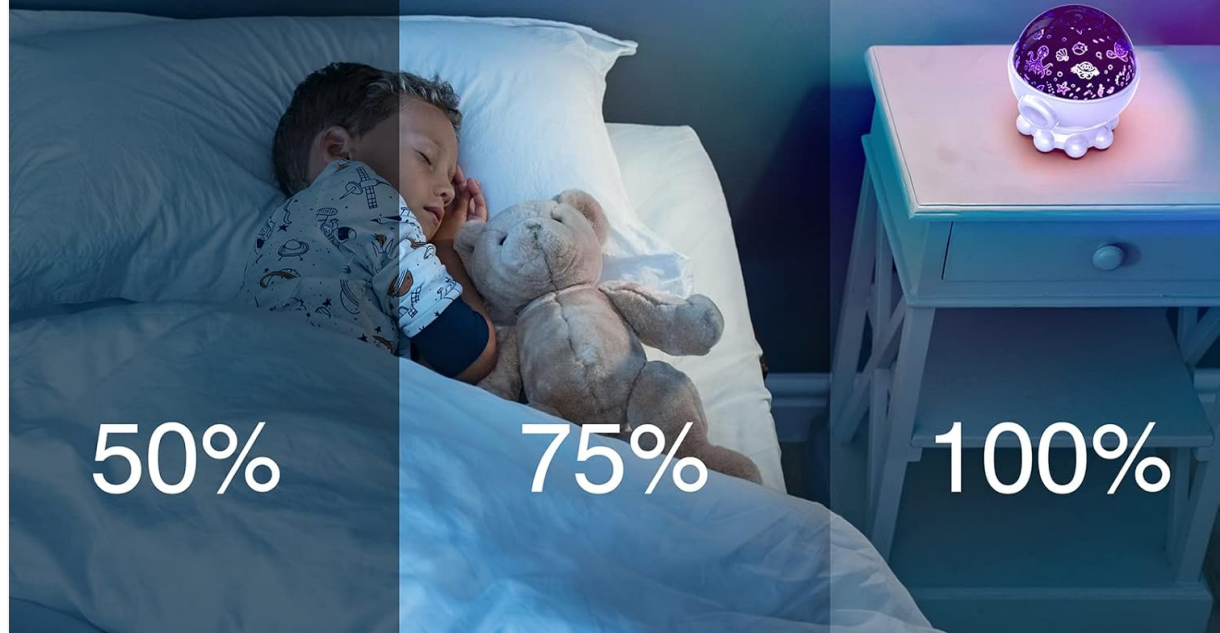

*Image: Illustration of the three brightness levels (50%, 75%, 100%) for the projected light, showing how the intensity changes.*

### 4. Rotation Function

Activate the 360° rotation feature via the remote control to make the projected patterns move across the room.

## Auto Shut Off Timer



*Image: The projector highlighting its 360-degree rotation capability and the auto shut-off timer options (1, 2, 4 hours).*

### 5. Lullaby Songs

The projector includes 9 built-in lullaby songs. Use the remote control to select songs and adjust the volume.

# 9 Bedtime Lullabies



# Night light



Image: The DOFLER Night Light Projector functioning as a night light and playing lullabies, creating a calming atmosphere for a child.

## 6. Auto-Off Timer

Set an automatic shut-off timer for 1, 2, or 4 hours using the remote control to conserve power.

## MAINTENANCE

### Cleaning

- Ensure the device is powered off and unplugged before cleaning.
- Wipe the exterior of the projector with a soft, dry cloth.
- For projection films, gently wipe with a microfiber cloth to remove dust or fingerprints. Avoid abrasive cleaners.
- Do not immerse the device in water or use liquid cleaners directly on it.

### Battery Care

- Recharge the device regularly to maintain battery health.
- Avoid prolonged exposure to extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device using the USB cable.
Projection is dim or unclear.	Room is too bright; projection film is dirty or incorrectly installed.	Ensure the room is dark. Clean the projection film. Reinstall the film correctly. Adjust brightness settings.
Remote control not working.	Remote battery is low; remote is too far from the projector.	Replace the remote control battery. Ensure the remote is within close range (approximately 5 feet) of the projector.
Rotation function not working.	Rotation feature is not activated.	Press the rotation button on the remote control or projector.

## SPECIFICATIONS

- **Model:** BZ-001
- **Product Dimensions:** 13.46 x 11.94 x 12.19 cm
- **Item Weight:** 381 g
- **Power Source:** Built-in Lithium Battery
- **Projection Films:** 3 (Star and Moon, Sea World, Dinosaur World)
- **Light Modes:** 17 effects
- **Lullaby Songs:** 9 songs
- **Rotation:** 360°
- **Timer Settings:** 1 hour, 2 hours, 4 hours
- **Control:** Remote Control, On-device buttons
- **Material:** Plastic

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official DOFLER website. Please have your model number (BZ-001) and purchase date available when contacting support.