

[Manuals.plus](#) /

› [MP myPhone](#) /

› MP myPhone 6320 Mobile Phone User Manual

MP myPhone 6320

MP myPhone 6320 Mobile Phone User Manual

Your guide to setup, operation, and maintenance

INTRODUCTION

The MP myPhone 6320 is a classic mobile phone designed for ease of use, featuring large keys and a clear 2.4-inch display. It includes essential functions such as a camera, MP3 player, flashlight, and Bluetooth connectivity, powered by a durable 1000 mAh battery. This manual provides detailed instructions to help you get the most out of your device.

WHAT'S IN THE BOX

Please check the contents of your package. If any items are missing or damaged, contact your retailer.

- MP myPhone 6320 Mobile Phone
- 1000 mAh Lithium-ion Battery
- USB Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the physical features of your MP myPhone 6320.



Figure 1: Front view of the MP myPhone 6320, highlighting the display and keypad with large, easy-to-read buttons.

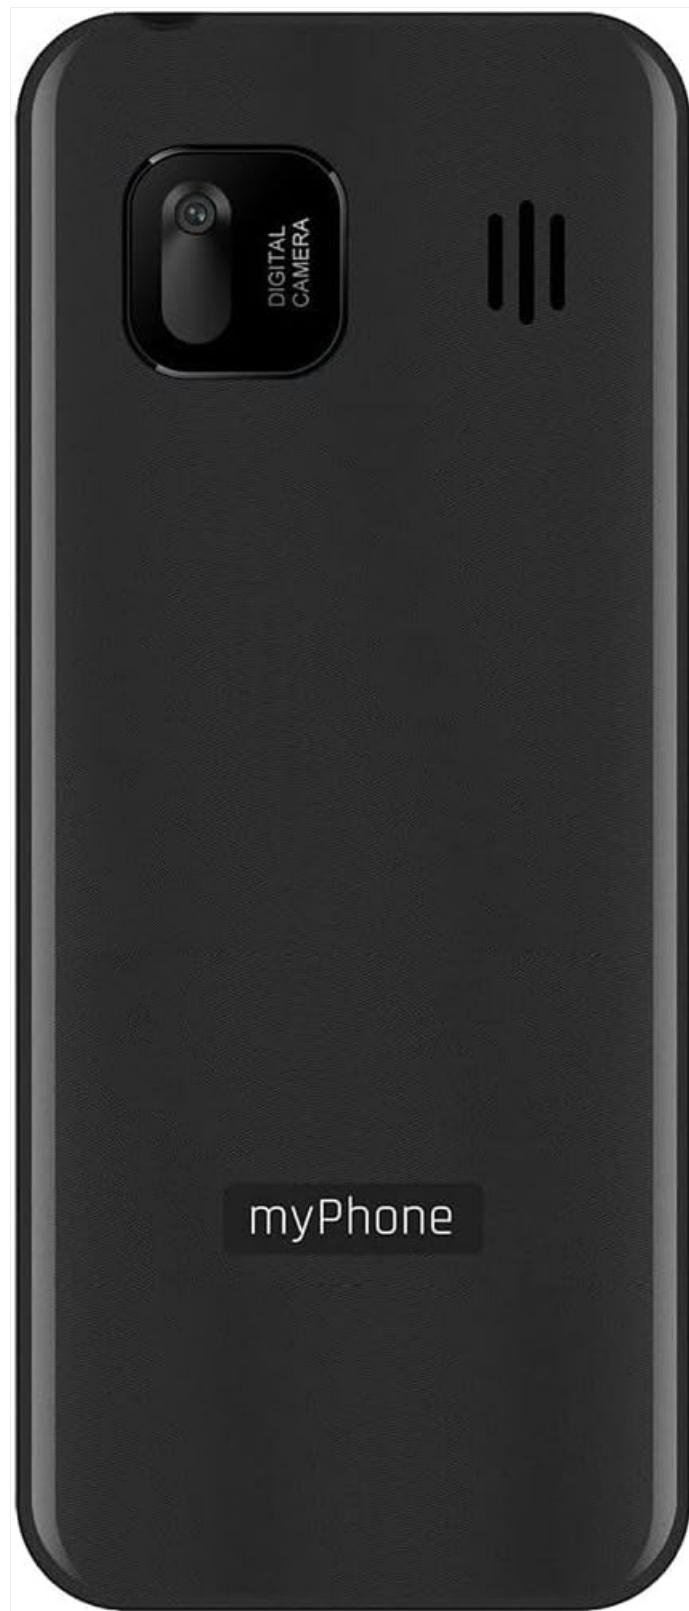


Figure 2: Back view of the MP myPhone 6320, featuring the integrated camera and speaker.

Key Features:

- **2.4-inch Display:** Provides clear visibility for calls, messages, and menu navigation.
- **Large Keys:** Designed for comfortable and accurate dialing and typing.
- **VGA Camera:** Capture simple photos.
- **MP3 Player:** Enjoy your favorite music on the go.
- **Flashlight:** Convenient built-in light for dark environments.
- **Bluetooth:** Connect wirelessly to compatible devices.
- **Dual SIM:** Use two independent SIM cards simultaneously.

- **1000 mAh Battery:** Offers extended standby and talk time.

SETUP

1. Installing the SIM Card(s)

1. Remove the back cover of the phone by gently prying it open from the notch.
2. If the battery is installed, remove it.
3. Locate the SIM card slots. This phone supports two Micro SIM cards.
4. Insert your Micro SIM card(s) into the designated slot(s) with the gold contacts facing down and the cut corner aligned as shown on the phone.
5. Ensure the SIM card(s) are securely in place.

2. Installing the Battery

1. Align the battery contacts with the contacts in the battery compartment.
2. Gently press the battery into place until it fits snugly.
3. Replace the back cover, ensuring it clicks into position.

3. Charging the Battery

1. Connect the small end of the USB cable to the charging port on your phone (Micro USB).
2. Connect the other end of the USB cable to a compatible USB power adapter or a computer's USB port.
3. The battery indicator on the screen will show the charging status.
4. Allow the phone to charge completely before first use. A full charge can take approximately 2-3 hours.

OPERATING INSTRUCTIONS

Power On/Off

- To power on: Press and hold the **Power/End Call** button until the screen lights up.
- To power off: Press and hold the **Power/End Call** button, then select 'Power off' from the options.

Making Calls

1. From the home screen, dial the phone number using the keypad.
2. Press the **Call** button (green receiver icon) to initiate the call.
3. To end a call, press the **End Call** button (red receiver icon).

Receiving Calls

- When a call comes in, press the **Call** button (green receiver icon) to answer.
- To reject a call, press the **End Call** button (red receiver icon).

Sending and Receiving Messages

1. From the main menu, navigate to 'Messages'.
2. Select 'Write message' or 'New SMS'.
3. Enter your message using the keypad.
4. Enter the recipient's phone number or select from contacts.
5. Select 'Send'.
6. Received messages will appear in your 'Inbox'.

Using the Camera

1. From the main menu, select 'Camera'.
2. Frame your shot using the display.
3. Press the 'OK' button or the dedicated camera button (if available) to take a photo.
4. Photos are saved to the phone's memory.

MP3 Player

1. Ensure you have MP3 files stored on your phone's memory or an inserted memory card (if supported).
2. From the main menu, select 'Multimedia' or 'MP3 Player'.
3. Browse and select the song you wish to play.
4. Use the navigation keys to control playback (play, pause, skip).

Flashlight Function

- To turn on the flashlight, press and hold the dedicated flashlight button (often the center navigation key).
- Repeat the action to turn it off.

Bluetooth Connectivity

1. From the main menu, go to 'Settings' and then 'Bluetooth'.
2. Turn Bluetooth 'On'.
3. Select 'Search for devices' to find nearby Bluetooth devices.
4. Select the desired device from the list and follow the on-screen prompts to pair.

Dual SIM Management

- If two SIM cards are inserted, the phone will typically ask which SIM to use when making a call or sending a message.
- You can manage SIM card settings (e.g., default SIM for calls/messages) in the 'Settings' menu under 'Dual SIM settings'.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's screen and body. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Do not expose the battery to high temperatures or puncture it. Use only the original or approved replacement battery.
- **Water Resistance:** This phone is not water-resistant. Avoid exposure to liquids.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on	Battery is depleted or not installed correctly.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls	No network signal, SIM card not inserted, or SIM card issue.	Check network coverage. Reinsert SIM card(s). Contact your service provider.
Poor call quality	Weak signal or network congestion.	Move to an area with better signal. Try again later.
Battery drains quickly	Heavy usage, background applications, or aging battery.	Reduce screen brightness. Close unused applications. Consider replacing the battery if it's old.

Problem	Possible Cause	Solution
Bluetooth not connecting	Bluetooth is off, device not discoverable, or pairing issue.	Ensure Bluetooth is on for both devices. Make sure the other device is in pairing mode. Try re-pairing.

SPECIFICATIONS

Feature	Detail
Model Name	6320
Brand	MP myPhone
Display Size	2.4 Inches
Display Type	LCD
Max Display Resolution	320 x 240
Aspect Ratio	4:3
RAM Size	32 MB
CPU Model	MediaTek Helio
Operating System	Other
Wireless Carrier	All carriers
Cellular Technology	2G
Connectivity Technology	Bluetooth
Wireless Technology	GSM
Color	Black
SIM Card Slots	Dual SIM
SIM Card Size	Micro
Input Type	Buttons
Form Factor	Bar
Rear Camera Count	1
Camera Flash	No flash
Battery Capacity	1000 mAh
Talk Time	4 Hours
Weight	200 Grams
Water Resistance Level	Not waterproof
GPS Geopositioning	False
Included Components	USB Cable

WARRANTY AND SUPPORT

The MP myPhone 6320 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or further inquiries, please contact your retailer or visit the official MP myPhone website.

Keep your purchase receipt and warranty card in a safe place as proof of purchase may be required for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question