

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOMCOM](#) /

› [HOMCOM 100L Bamboo Foldable Laundry Hamper with 2 Compartments - User Manual](#)

## HOMCOM FR850-144GY0531

# HOMCOM 100L Bamboo Foldable Laundry Hamper

Model: FR850-144GY0531

## INTRODUCTION

Thank you for choosing the HOMCOM 100L Bamboo Foldable Laundry Hamper. This manual provides essential information for the safe and efficient use of your new product. Please read it thoroughly before assembly and use, and retain it for future reference.

## SAFETY INSTRUCTIONS

- Keep all packaging materials away from children to prevent suffocation hazards.
- Do not overload the hamper beyond its recommended weight capacity of 15 kg.
- Ensure the hamper is placed on a flat, stable surface to prevent tipping.
- Avoid placing the hamper in excessively damp environments for prolonged periods, as this may affect the bamboo material.
- This product is intended for household use only.

## PACKAGE CONTENTS

Please check the package to ensure all components are present and undamaged:

- 1 x Bamboo Laundry Hamper (Folded)
- 1 x Removable Fabric Liner Bag with 2 Compartments
- 1 x Bamboo Lid with Handle
- 1 x Instruction Manual

## SETUP

1. **Unfold the Hamper:** Carefully unfold the bamboo hamper body. Ensure the internal support rods or panels are fully extended to create a stable rectangular shape.
2. **Insert the Liner Bag:** Place the removable fabric liner bag inside the hamper. The bag features two

compartments, typically labeled 'Lights' and 'Darks' for easy sorting. Secure the bag's edges over the top rim of the hamper. The bag is designed to fit snugly.

3. **Place the Lid:** Position the bamboo lid on top of the hamper. The lid is designed to rest securely on the hamper's rim.



**Figure 1:** The laundry hamper shown in its folded state for storage and unfolded for use. This illustrates the product's space-saving design.

# SAC À DOUBLURE EN 2 PARTIES

Peut être facilement séparé en 2 sections pour répondre à des besoins différents



**Figure 2:** A close-up view of the interior, highlighting the two-part fabric liner bag. The compartments are labeled 'Lights' and 'Darks' for convenient laundry sorting.

## OPERATING INSTRUCTIONS

- 1. Sorting Laundry:** Utilize the two compartments of the liner bag to separate your laundry. The 'Lights' section is for light-colored garments, and the 'Darks' section is for dark-colored garments. This helps prevent color bleeding and simplifies your laundry routine.
- 2. Using the Lid:** The bamboo lid helps conceal dirty laundry and maintain a tidy appearance. It can be easily lifted using the integrated handle.
- 3. Transporting the Hamper:** The hamper is equipped with side handles for easy transportation. When moving the hamper, ensure the lid is securely in place and lift from both side handles. For heavier loads, it is recommended to remove the liner bag first.

# DÉTAILS

Couvercle facile  
d'accès



Poignée latérale pour  
un déplacement facile



**Figure 3:** Detailed views of the hamper's features, including the handle on the lid for easy access and the sturdy side handles for convenient portability.

## MAINTENANCE

- **Cleaning the Bamboo Exterior:** Wipe the bamboo surface with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the bamboo finish. Dry immediately with a clean cloth.
- **Washing the Liner Bag:** The fabric liner bag is removable and washable. It is recommended to machine wash the bag in cold water on a gentle cycle and air dry to maintain its shape and integrity. Do not bleach.
- **Regular Inspection:** Periodically check the hamper for any signs of wear or damage, especially the connections and the fabric liner.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Liner bag does not stay in place.	Bag is overloaded or not properly secured.	Ensure the bag's edges are fully draped over the hamper's rim. Avoid overloading the bag; remove some laundry if it's too heavy.

Problem	Possible Cause	Solution
Hamper appears unstable.	Hamper not fully unfolded or placed on an uneven surface.	Verify that the hamper's internal structure is fully extended and locked. Place the hamper on a flat, level surface.
Unpleasant odor from hamper.	Accumulation of dirty laundry or moisture.	Empty the hamper regularly. Wash the liner bag. Ensure laundry is dry before placing it in the hamper to prevent mold or mildew.

## SPECIFICATIONS

---

**Model:** FR850-144GY0531

**Brand:** HOMCOM

**Material:** Bamboo, Fabric (Liner)

**Color:** Gray

**Overall Dimensions (L x W x H):** 52 cm x 32 cm x 63 cm (20.5 in x 12.6 in x 24.8 in)

**Capacity:** 100 Liters

**Weight:** 2.1 kg (4.6 lbs)

**Max. Load Capacity:** 15 kg (33 lbs)

**Special Features:** Foldable design, 2-compartment removable liner, Lid, Side handles



**Figure 4:** Visual representation of the hamper's dimensions, indicating a height of 63cm, a length of 52cm, and a width of 32cm.

## **WARRANTY AND SUPPORT**

HOMCOM products are designed for quality and durability. For warranty information, please refer to the terms and conditions provided at the point of purchase or visit the official HOMCOM website. If you encounter any issues or require assistance with your product, please contact HOMCOM customer support through the retailer where the product was purchased or via the contact information available on the HOMCOM brand store.