

[manuals.plus](#) /› [Giantex](#) /› [Giantex Portable Washing Machine GT-US61100-FPGR Instruction Manual](#)

Giantex GT-US61100-FPGR

Giantex Portable Washing Machine Instruction Manual

Model: GT-US61100-FPGR

1. INTRODUCTION

Thank you for choosing the Giantex Portable Washing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the washing machine is placed on a stable, level surface to prevent vibration and noise during operation.
- Do not operate the machine if the power cord or plug is damaged. Contact qualified personnel for repair.
- Keep children and pets away from the machine during operation.
- Do not immerse the machine in water or spray water directly onto the control panel.
- Unplug the machine from the power outlet before cleaning or performing any maintenance.
- Ensure proper drainage setup to prevent water overflow or damage.
- Do not overload the wash or spin tubs beyond their specified capacities.
- Avoid washing items with sharp objects or excessive metal parts that could damage the tubs.

3. PRODUCT OVERVIEW

The Giantex Portable Washing Machine is a twin-tub design featuring separate wash and spin functions. It is compact and suitable for small living spaces.



Figure 3.1: Top-down view of the Giantex Portable Washing Machine, showing the wash and spin tubs with control knobs.

Key Features:

- **Dual-Motor System:** Separate motors for washing (240W) and spinning (120W) for efficient operation.
- **Twin Tub Design:** Dedicated tubs for washing (8 lbs capacity) and spinning (5 lbs capacity).
- **Built-in Drain Pump:** Powerful pump with a maximum pumping height of 59 inches and a 79-inch drainage pipe for quick water removal.
- **Separate Time Control:** Independent timers for wash (0-15 minutes) and spin (0-5 minutes) cycles.
- **Wash Modes:** Selectable modes for Soft, Normal, and Drain.
- **Compact Design:** Ideal for apartments, homes, dorms, and RVs.



1

Transport Cover

Easy to Open &
Help The Washer Keep Stable

2

Convenient Side Handles

Help Effortlessly Move The Laundry Machine



3

Special Bottom Design

Together with Long Drain Hose for Two-Way Drainage

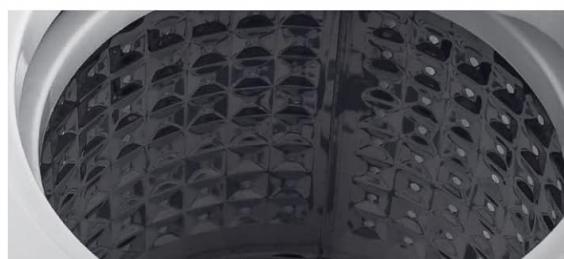


Figure 3.2: Detailed view of product features including transport cover, convenient side handles, special bottom design for two-way drainage, and stainless steel inner barrel.

4. SETUP

4.1 Unpacking and Placement

- Carefully remove the washing machine from its packaging.
- Place the machine on a firm, level surface. Ensure there is enough space around the unit for proper ventilation and operation.
- Verify that all included components (drain hose, inlet hose, manual) are present.

4.2 Water Connection

The machine can be filled manually or by connecting the inlet hose to a faucet.

- **Manual Fill:** Pour water directly into the wash tub using a bucket or showerhead until the desired water level is reached.
- **Inlet Hose Connection:** Connect one end of the inlet hose to the 'WATER INLET' port on the machine and the other end to a suitable faucet. Ensure a secure connection to prevent leaks.

4.3 Drain Setup

The machine features a built-in pump for efficient drainage.

- Attach the drain hose to the drain outlet on the machine.
- Position the other end of the drain hose into a sink, bathtub, or floor drain. The built-in pump allows for a maximum pumping height of 59 inches. Ensure the hose is securely placed to prevent it from dislodging during drainage.

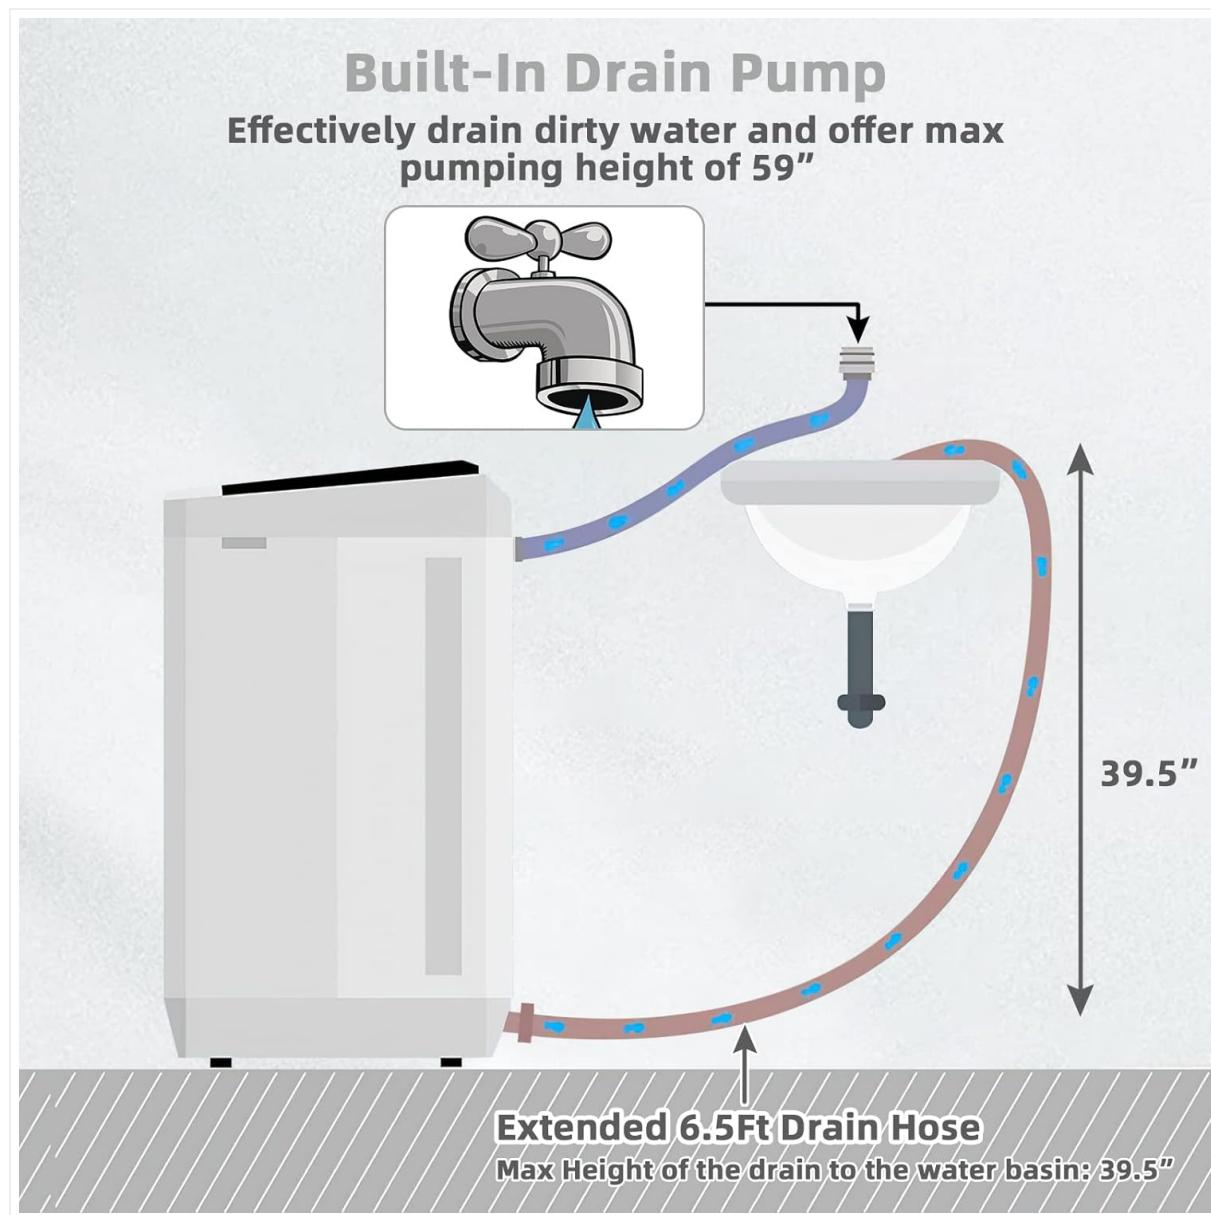


Figure 4.1: Illustration demonstrating the built-in drain pump and extended drain hose for efficient water removal into a sink.

5. OPERATING INSTRUCTIONS

5.1 Washing Process

1. **Load Clothes:** Open the wash tub lid and place clothes inside. Do not exceed the 8 lbs capacity.
2. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the wash tub.
3. **Fill Water:** Fill the wash tub with water to the desired level using the inlet hose or manually.
4. **Set Wash Timer:** Turn the 'WASH TIMER' knob to select the desired wash duration (0-15 minutes).
5. **Select Wash Mode:** Turn the 'SELECT SWITCH' knob to choose between 'SOFT' (for delicate items) or

'NORMAL' (for regular laundry).

6. Close the wash tub lid. The machine will begin the wash cycle.



Figure 5.1: The twin tub design, illustrating the 8 lbs wash tub capacity and 5 lbs spin tub capacity with examples of clothing items.

Simultaneous Operation

Independent timer control for washer and spinner

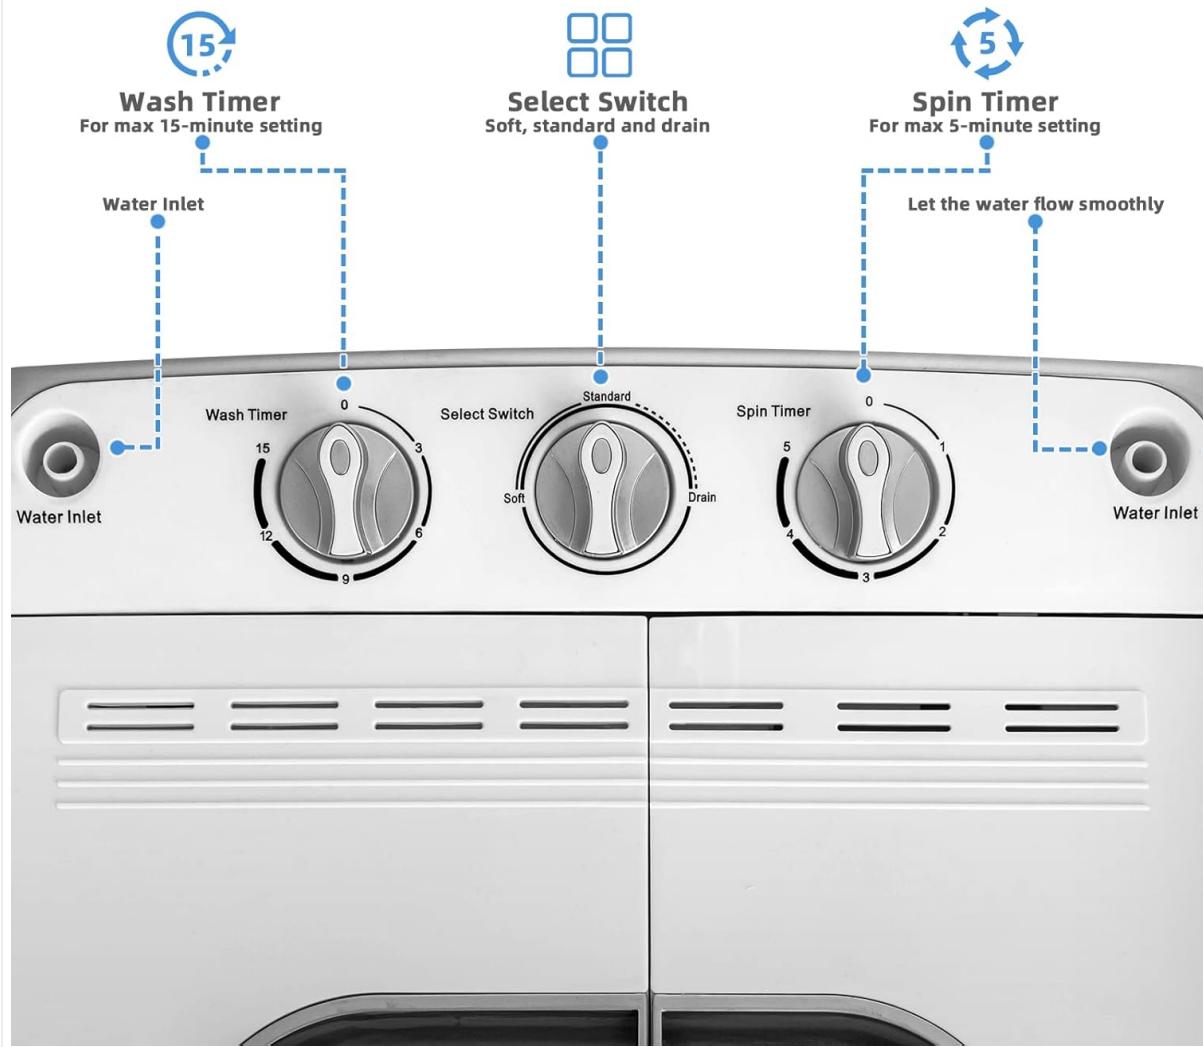


Figure 5.2: Close-up of the control panel, showing the Wash Timer (max 15 minutes), Select Switch (Soft, Standard, Drain), and Spin Timer (max 5 minutes).

5.2 Draining Process

1. After the wash cycle is complete, turn the 'SELECT SWITCH' knob to 'DRAIN'.
2. The machine will automatically pump out the water through the drain hose.
3. Once all water is drained, return the 'SELECT SWITCH' to 'NORMAL' or 'SOFT'.

5.3 Spinning Process

1. **Transfer Clothes:** Carefully transfer the washed clothes from the wash tub to the spin tub.
2. **Even Distribution:** Ensure clothes are evenly distributed inside the spin tub to prevent excessive vibration. Do not exceed the 5 lbs capacity.
3. Close the spin tub lid.
4. **Set Spin Timer:** Turn the 'SPIN TIMER' knob to select the desired spin duration (0-5 minutes).
5. The machine will begin the spin cycle. Once complete, remove the clothes.

Your browser does not support the video tag.

Video 5.1: A brief demonstration of the Giantex Portable Washing Machine in operation, showcasing the washing and spinning functions.

6. MAINTENANCE

6.1 Cleaning the Lint Filter

- Regularly check and clean the lint filter located inside the wash tub.
- Remove the filter, clear any accumulated lint, and rinse it under running water.
- Reinsert the clean filter securely into its position.

6.2 General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.
- Clean the interior of the tubs periodically to prevent residue buildup.
- Ensure the machine is dry before storing or prolonged periods of non-use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Timer not set.	Check power connection; Set wash/spin timer.
Water does not drain	Drain hose blocked or improperly positioned; 'SELECT SWITCH' not on 'DRAIN'.	Clear drain hose, ensure proper height; Turn 'SELECT SWITCH' to 'DRAIN'.
Excessive vibration/noise during spin	Clothes unevenly distributed in spin tub; Machine not on a level surface.	Rearrange clothes evenly; Adjust machine's position on a level surface.
Water leaks	Hoses not securely connected; Overfilling the tub.	Check all hose connections; Do not exceed maximum water level.

8. SPECIFICATIONS

Specification	Detail
Brand	Giantex
Model Number	GT-US61100-FPGR
Wash Capacity	8 lbs
Spin Capacity	5 lbs
Washing Power	240W
Spinning Power	120W
Max Pumping Height	59 inches

Specification	Detail
Drainage Pipe Length	79 inches
Product Dimensions (L x W x H)	23" x 14.5" x 26" (with closed lid)
Material Type	Stainless Steel (inner barrel)
Included Components	Drain Hose, Inlet Hose, Manual

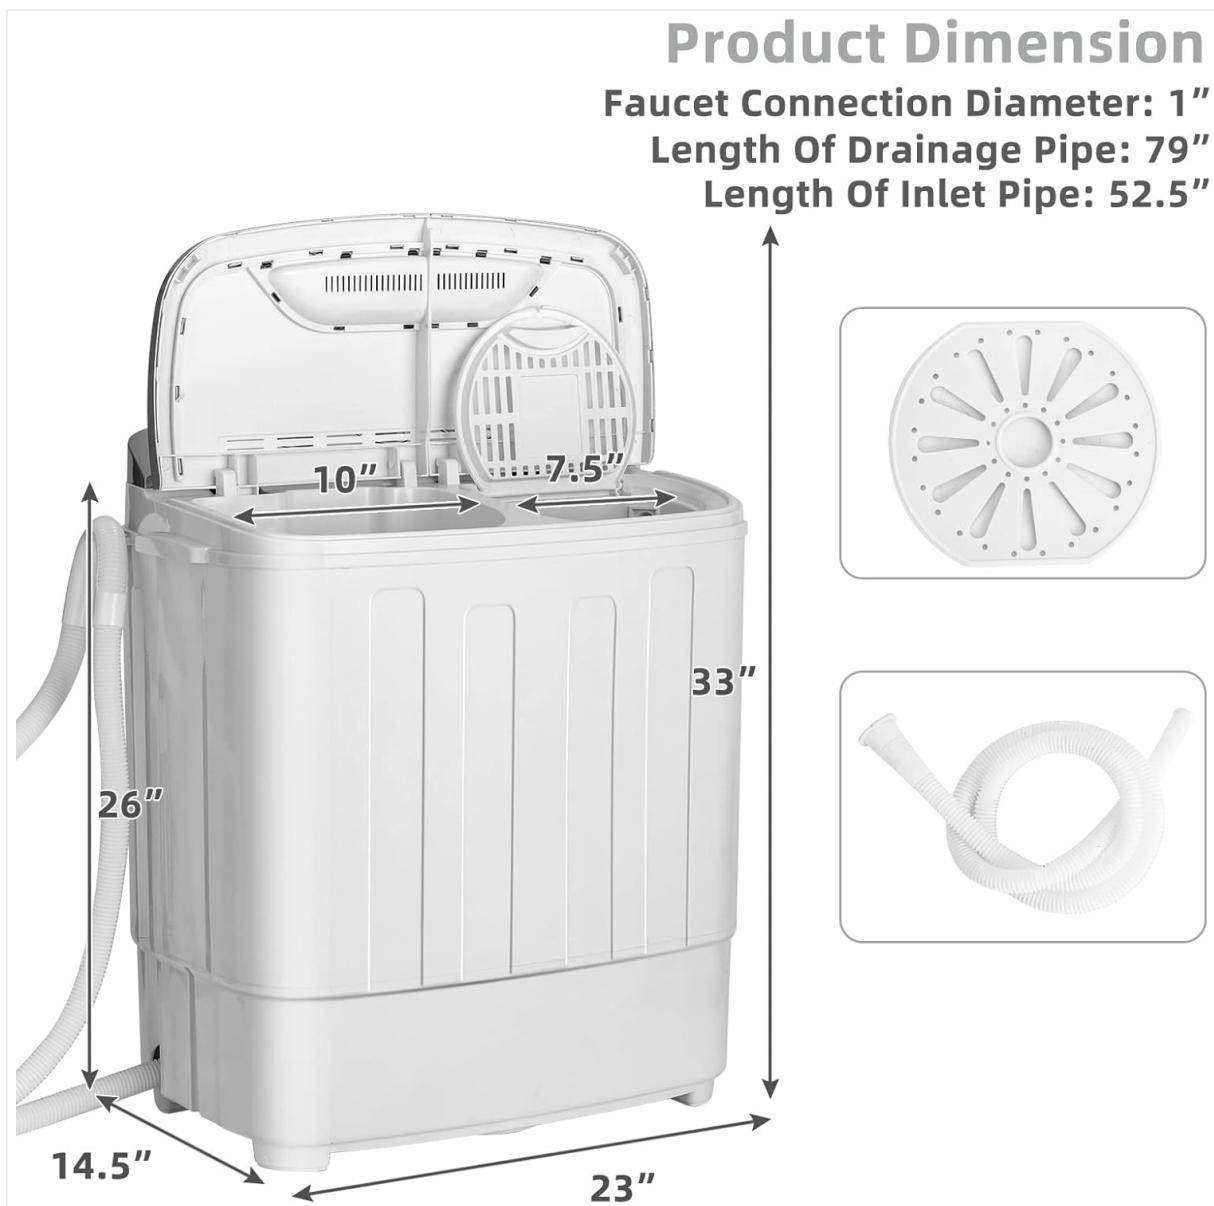


Figure 8.1: Diagram illustrating the product dimensions and lengths of the drainage and inlet pipes.

9. WARRANTY AND SUPPORT

This product may be eligible for extended protection plans. Please refer to your purchase documentation for specific warranty details and terms. For technical support or service inquiries, please contact Giantex customer service.

- **Protection Plans:** 2-Year and 3-Year protection plans may be available for purchase.
- **Return Policy:** Standard 30-day return/replacement policy may apply. Refer to your retailer's policy for details.

