

[Manuals.plus](#) /

› [Haier](#) /

› Haier 7.5 Kg Fully Automatic Top Load Washing Machine HWM75-H826S6 User Manual

Haier HWM75-H826S6

Haier 7.5 Kg Fully Automatic Top Load Washing Machine HWM75-H826S6 User Manual

Model: HWM75-H826S6 | Brand: Haier

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your Haier 7.5 Kg Fully Automatic Top Load Washing Machine, model HWM75-H826S6. Please read these instructions carefully before using the appliance and retain them for future reference.



Image: Front view of the Haier 7.5 Kg Fully Automatic Top Load Washing Machine.

Key Features Overview



Image: A summary of key features including Dual Magic Filter, Ocean Wave Drum, Powerful Storm Pulsator, 15 Wash Programs, Auto Restart, and 5-Star Energy Efficiency.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the appliance before cleaning or performing any maintenance.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. The package includes: 1 Washing Machine, 1 Bottom Plate, 1 Water Inlet Hose.

Location and Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. The machine is designed for freestanding installation. Avoid direct sunlight or extreme temperatures.

Dimensions (D x W x H): 57D x 55W x 101H Centimeters.

OCEANUS WAVE DRUM

Generates powerful water waves that penetrate deeply into fabrics, effectively removing dirt & stains



Abrasion Free



Fast Cleaning

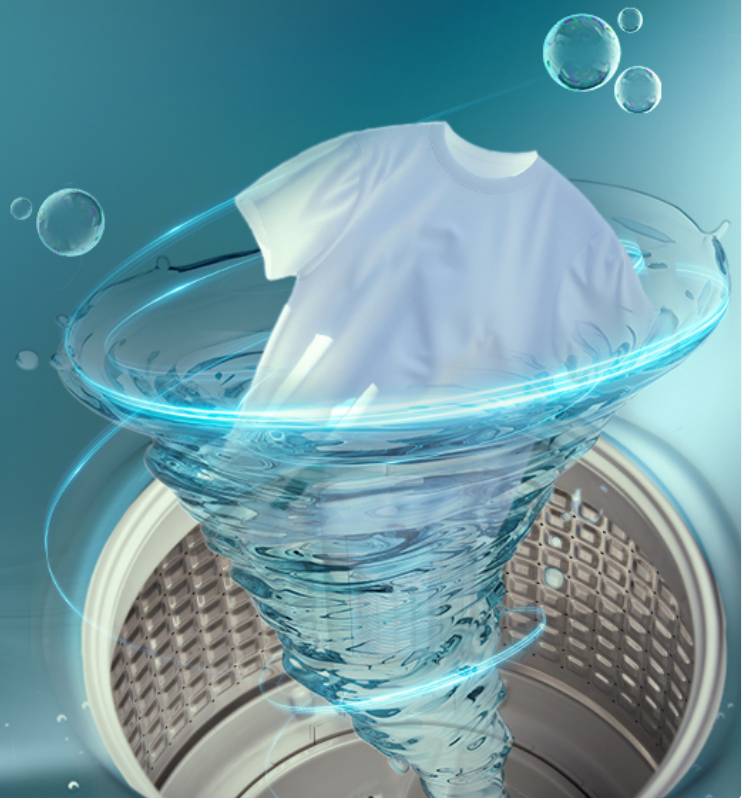


Image: Product dimensions and energy rating guide for the washing machine.

Water Connection

Connect the water inlet hose to a cold water tap and to the designated inlet on the washing machine. Ensure all connections are tight to prevent leaks. This model is designed to operate effectively even with near-zero water pressure.

Drainage

Position the drain hose correctly to allow for proper water discharge. Ensure the hose is not kinked or blocked.

Power Connection

Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

Control Panel Overview

The washing machine features a push-button control panel for easy operation. Familiarize yourself with the various buttons and indicators.

3 HOT WATER MODES

Experience versatile washing with three hot water modes up to 60°C. Choose warm, hot, or allergen-free for tailored fabric care and optimal garment washing.



Image: Close-up of the control panel displaying various wash programs and settings.

Loading Laundry

Open the top lid and load clothes into the stainless steel drum. Do not overload the machine; the maximum capacity is 7.5 kg. Distribute laundry evenly to prevent imbalance during the wash cycle.

Adding Detergent and Softener

Add appropriate amounts of detergent and fabric softener to their respective dispensers. Refer to detergent packaging for recommended quantities based on load size and water hardness.

Selecting a Wash Program

Your Haier washing machine offers 15 wash programs to suit different fabric types and cleaning needs. Use the control buttons to select the desired program.

- **P1 Heavy:** For heavily soiled, durable items.
- **P2 Sports:** For sportswear.
- **P3 Eco:** Energy-efficient wash for normal loads.
- **P4 Silk:** Gentle wash for delicate silk items.
- **P5 Soak:** Pre-soak cycle for stubborn stains.
- **P6 Wool:** Specialized program for woolens.
- **P7 Baby Care:** Thorough wash for baby clothes.
- **P8 Synthetic:** For synthetic fabrics.
- **P9 Rinse + Spin:** Additional rinse and spin cycle.
- **PA Air Dry:** Air drying function.
- **Allergen Free:** Hot water wash to remove allergens.
- **Hot:** High-temperature wash.
- **Warm:** Medium-temperature wash.

- **Normal:** Standard daily wash.
- **Delicate:** Gentle wash for fragile items.
- **Quick Wash:** A rapid 15-minute cycle for lightly soiled clothes.



Image: The Quick Wash cycle indicator, showing a 15-minute duration.

Special Features

- **In-Built Heater:** Provides 99.9% germ-free washing and effectively removes tough stains using hot water. Features 3 hot water modes: Allergen Free, Hot, and Warm, with temperatures up to 60°C. The butterfly-shaped design enhances heating efficiency by 30%.



Image: Illustration of the in-built heater's function, highlighting germ removal and stain cleaning capabilities.

- **3 Hot Water Modes:** Experience versatile washing with three hot water modes up to 60°C. Choose warm, hot, or allergen-free for tailored fabric care and optimal garment washing.



Image: Control panel section indicating the three hot water modes: Allergen Free, Hot, and Warm.

- **Oceanus Wave Drum:** Generates powerful water waves that penetrate deeply into fabrics, ensuring effective dirt and stain removal while being abrasion-free.
- **Powerful Storm Pulsator:** Enhances deep cleaning performance.
- **Child Lock:** Prevents accidental changes to settings during operation.
- **Delay Start:** Allows you to set a delayed start time for your wash cycle.
- **Auto Restart:** Automatically resumes the wash cycle from where it left off after a power interruption.

Starting a Wash Cycle

1. Load laundry and add detergent/softener.
2. Close the top lid securely.
3. Select your desired wash program and any additional options (e.g., temperature, delay start).
4. Press the Start/Pause button to begin the cycle.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

Cleaning the Dual Magic Filter

The Dual Magic Filter collects lint and debris during washing. Clean it regularly (e.g., after every 2-3 washes) to maintain washing efficiency and prevent lint transfer to clothes.

1. Open the filter cover located inside the drum.
2. Remove the filter and rinse it under running water to remove accumulated lint.
3. Reinsert the clean filter and close the cover securely.



Image: The Dual Magic Filter, designed to collect lint and ensure cleaner clothes.

Cleaning the Drum (Tub Clean)

Perform a tub clean cycle periodically to remove detergent residue, mold, and odors from the drum. Consult the control panel for a dedicated "Tub Clean" program or run an empty hot wash cycle with a washing machine cleaner.

Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

Protective Rat Mesh

Periodically check the protective rat mesh at the bottom of the machine for any damage or blockages to ensure continued protection.

TROUBLESHOOTING GUIDE

Before contacting customer service, refer to this guide for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed, power outage, child lock activated.	Check power connection, ensure lid is closed, check circuit breaker, deactivate child lock.
Water not filling	Water tap closed, inlet hose kinked/blocked, water supply issue.	Open water tap, straighten hose, check household water supply.
Water not draining	Drain hose kinked/blocked, drain pump filter clogged.	Straighten drain hose, clean drain pump filter (refer to service manual if accessible).
Excessive vibration/noise	Machine not level, laundry unevenly distributed, transit bolts not removed.	Adjust leveling feet, redistribute laundry, ensure all transit bolts are removed (during initial installation).
Clothes not clean	Overloading, insufficient detergent, incorrect program selection, dirty filter.	Reduce load size, use correct detergent amount, select appropriate program, clean Dual Magic Filter.

If the problem persists after attempting these solutions, please contact Haier customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Haier
Model Name	HWM75-H826S6
Model Number	HWM75-H826S6
Type	Fully Automatic Top Load
Capacity	7.5 kg
Color	Starry Silver
Product Dimensions (D x W x H)	57D x 55W x 101H Centimeters
Item Weight	37 Kilograms
Drum Material	Stainless Steel
Max Rotational Speed	780 RPM
Number of Programs	15
Special Features	Child Lock, Delay Start, Inbuilt Heater, Protective Rat Mesh, Temperature Control, Oceanus Wave Drum, Dual Magic Filter, Powerful Storm Pulsator, Auto Restart
Controls Type	Push Button
Installation Type	Freestanding
Included Components	1 Washing Machine, 1 Bottom Plate, 1 Water Inlet Hose
Energy Rating	5 Star

WARRANTY AND SUPPORT

Warranty Information

Your Haier washing machine comes with a comprehensive manufacturer's warranty:

- **2 Years Comprehensive Warranty** on the product.
- **10 Years Warranty** on the motor.

Terms and Conditions apply. Please retain your purchase invoice for warranty claims.

OCEANUS WAVE DRUM

Generates powerful water waves that penetrate deeply into fabrics, effectively removing dirt & stains



Abrasion Free



Fast Cleaning



Image: Warranty details (2 years comprehensive, 10 years motor) and energy rating information.

Customer Support

For any queries, assistance, or to schedule a service appointment, please contact Haier customer care:

- **Telephone:** 1800-419-9999
- **WhatsApp:** 8553049999
- **Email:** customercare@haierindia.com

When contacting support, please provide the product's model name (HWM75-H826S6) and details from your purchase invoice.

Haier has an extensive service network with over 800 service centers and 3000+ technicians, covering more than 19000 pincodes and 170+ locations.

© 2024 Haier. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question