

Milly Mally Cosy (Model 7290115246094)

Qplay Cosy 4-in-1 Tricycle User Manual

Model: Cosy (7290115246094) | Brand: Milly Mally

INTRODUCTION

The Qplay Cosy 4-in-1 Tricycle is designed to adapt to your child's growth, transforming from a parent-controlled stroller to an independent tricycle. Its unique removable and adjustable components ensure a perfect fit at every stage of development, from approximately 10 to 36 months of age, or for children between 70-110 cm in height.

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Qplay Cosy Tricycle. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

Always ensure your child is securely fastened with the five-point safety harness. Never leave your child unattended on the tricycle. This product complies with strict European safety standards.

- Ensure all parts are correctly assembled and securely fastened before each use.
- Do not exceed the maximum weight limit of 20 kg.
- Always supervise your child when using the tricycle.
- Keep small parts away from children during assembly to prevent choking hazards.
- The tricycle is designed for children aged 10-36 months and 70-110 cm in height.

SETUP AND ASSEMBLY

The Qplay Cosy Tricycle requires assembly. Follow these steps carefully. A detailed instruction manual is included in the product packaging for visual guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present against the parts list provided in the separate assembly guide.
2. **Attach Front Wheel Assembly:** Secure the front wheel assembly to the main frame. Ensure the front wheel is equipped with its protective cover to prevent legs from twisting.
3. **Install Rear Wheels:** Attach the 7.5-inch EVA foam rear wheels to the rear axle.
4. **Mount Seat and Backrest:** Secure the comfortable adjustable seat with its high backrest to the frame. The fabric seat cover is removable for cleaning.
5. **Attach Parent Handle:** Insert and secure the adjustable telescopic parent handle. This handle features a free-wheel system control for the front wheel.
6. **Install Sun Canopy:** Attach the foldable, ventilated sun canopy/awning.
7. **Secure Safety Harness:** Ensure the five-point safety belts with covers are correctly installed and adjustable.

8. **Attach Footrests/Pedals:** Install the central foldable footrests. These can be converted to pedals as your child grows.
9. **Handlebar Installation:** Attach the handlebars with non-slip rubber grips.
10. **Final Checks:** Before first use, double-check all connections, bolts, and adjustments to ensure they are secure.



Figure 1: Fully assembled Qplay Cosy 4-in-1 Tricycle in blue. This image shows the tricycle from a front-side angle, highlighting its blue frame, black seat with blue accents, adjustable parent handle, sun canopy, and EVA foam wheels. The front wheel has a protective cover, and the foldable footrests are visible.

OPERATING INSTRUCTIONS

4-in-1 Evolution Stages:

- **Stage 1 (Parent-Controlled Stroller):** For younger children (10+ months). Use the adjustable telescopic parent handle to steer and control the tricycle. The child's feet rest on the central foldable footrests. The five-point harness ensures safety.
- **Stage 2 (Assisted Tricycle):** As the child grows, the footrests can be converted to pedals. The parent still maintains control via the handle, but the child can begin to practice pedaling.

- **Stage 3 (Learning Tricycle):** The parent handle can be removed, allowing the child more independence while still benefiting from the backrest and safety features. The child uses the pedals.
- **Stage 4 (Independent Tricycle):** For older children (up to 36 months/20kg). The backrest can be removed, allowing the child to pedal and steer independently, similar to a traditional tricycle.

Key Features and Controls:

- **Adjustable Telescopic Parent Handle:** Adjust height from 93 cm to 96 cm for comfortable pushing. Includes a handle for the front wheel free-wheel system, allowing the child to pedal without affecting the tricycle's speed when parent-controlled.
- **Five-Point Safety Harness:** Always secure your child using this harness. Covers are provided for comfort on arms and crotch.
- **Adjustable Seat and Backrest:** The seat is comfortable and features a high backrest for support. Both are adjustable to suit your child's size.
- **Removable Fabric Seat Cover:** For easy cleaning.
- **Foldable Sun Canopy/Awning:** Provides shade and protection. It is ventilated at the rear.
- **Quiet EVA Foam Wheels:** 9-inch front wheel and 7.5-inch rear wheels ensure a smooth and quiet ride.
- **Rear Brake:** Located at the rear wheels for stopping the tricycle.
- **Direction Limiter:** Helps control the steering range for younger riders.
- **Adjustable Belts:** Ensure the safety belts are adjusted snugly to your child.

MAINTENANCE

Regular maintenance will extend the life of your Qplay Cosy Tricycle.

- **Cleaning:**
 - Wipe the steel frame and plastic parts with a damp cloth and mild soap.
 - The fabric seat cover is removable and can be hand-washed with mild detergent. Allow to air dry completely before reattaching.
 - Do not use abrasive cleaners or solvents.
- **Inspection:**
 - Periodically check all screws, bolts, and fasteners to ensure they are tight. Tighten if necessary.
 - Inspect wheels for wear and tear.
 - Check the safety harness for any signs of fraying or damage.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle difficult to steer or move.	Loose wheel connections; debris in wheels; brake engaged.	Check and tighten wheel connections. Remove any debris from wheels. Ensure rear brake is disengaged.
Parent handle feels wobbly.	Handle not fully inserted or secured.	Ensure the telescopic handle is fully extended and locked into position, and its securing mechanism is engaged.

Problem	Possible Cause	Solution
Pedals not engaging or spinning freely.	Free-wheel system engaged; pedals not properly installed.	Disengage the free-wheel system if you want the child's pedaling to propel the tricycle. Re-check pedal installation.
Sun canopy not staying in position.	Canopy attachment points loose.	Ensure the canopy is securely clipped or fastened to its designated points on the tricycle frame.

If you encounter issues not listed here, please refer to the original assembly guide or contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Qplay Cosy
Model Number	7290115246094
Brand	Milly Mally
Recommended Age Range	10 - 36 months
Recommended Child Height	70 - 110 cm
Maximum Load Capacity	20 kg (44 lbs)
Product Weight	7 kg (15.4 lbs)
Material	High-quality painted steel frame, Plastic components, EVA foam wheels
Front Wheel Size	9 inches (EVA foam)
Rear Wheel Size	7.5 inches (EVA foam)
Overall Dimensions (L x W x H)	90 x 52 x 101 cm (35.4 x 20.5 x 39.8 inches)
Parent Handle Height Adjustment	93 - 96 cm (36.6 - 37.8 inches)
Handlebar Width	40.5 cm (15.9 inches)
Height to Handlebar	57 cm (22.4 inches)
Footrest Height	14 cm (5.5 inches)
Backrest Height from Seat	39 cm (15.4 inches)
Seat Height from Ground	33 cm (13 inches)
Safety Standards	Complies with strict European safety standards.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer. Milly Mally products typically come with a manufacturer's warranty covering defects in materials and workmanship.

For technical support, spare parts, or any inquiries regarding your Qplay Cosy Tricycle, please contact Milly Mally

customer service or the authorized dealer from whom you purchased the product. Keep your proof of purchase handy when contacting support.

Online Resources: You may find additional support and FAQs on the official Milly Mally website. *Note: Specific URL not provided in source data.)*