

Kinto 20432

Kinto 20432 To-Go Tumbler User Manual

Model: 20432

INTRODUCTION

The Kinto To-Go Tumbler is designed for various lifestyles, allowing you to enjoy your drink without constantly opening and closing the lid. Its double-walled stainless steel vacuum construction maintains temperature and flavor, while its simple, timeless design offers comfort and easy cleaning.

This manual provides essential information for the safe and effective use of your Kinto To-Go Tumbler. Please read it thoroughly before first use and retain it for future reference.



Image: Kinto 20432 To-Go Tumbler in safety pink, showcasing its sleek design and secure lid.

SETUP

1. **Unpack:** Carefully remove the tumbler from its packaging.
2. **Initial Cleaning:** Before first use, wash all parts of the tumbler (body and lid) thoroughly with warm water and mild dish soap. Rinse completely.
3. **Dry:** Ensure all components are completely dry before assembly and storage.

OPERATING INSTRUCTIONS

1. **Filling:** Remove the lid. Pour your desired beverage into the tumbler. Do not overfill; leave a small space from the rim to prevent spills when attaching the lid.
2. **Securing the Lid:** Place the lid onto the tumbler and twist it clockwise until it is securely fastened. Ensure the lid is properly aligned and tightened to prevent leaks.
3. **Drinking:** The lid is designed for easy drinking without needing to open and close it repeatedly. Simply sip from

the designated opening.

4. **Temperature Retention:** The double-walled vacuum insulation helps keep hot beverages hot and cold beverages cold for extended periods. For best results, pre-heat or pre-chill the tumbler with hot or cold water for a few minutes before filling.

***Important:** Do not use the tumbler in a microwave oven. Do not place in a freezer.*

MAINTENANCE AND CARE

- **Daily Cleaning:** After each use, disassemble the lid and wash all parts with warm water and mild dish soap. Use a soft brush for hard-to-reach areas if necessary.
- **Dishwasher Safe:** The Kinto To-Go Tumbler is dishwasher safe. Place it on the top rack for best results.
- **Drying:** Allow all components to air dry completely before reassembling or storing to prevent odors and mildew.
- **Stain Removal:** For stubborn stains, a mixture of baking soda and water can be used. Let it sit for a few hours, then scrub and rinse thoroughly.
- **Storage:** Store the tumbler with the lid removed or slightly ajar to allow air circulation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tumbler leaks	Lid not securely tightened; gasket improperly seated or missing.	Ensure lid is twisted on tightly. Check that the silicone gasket is correctly placed and free from damage.
Beverage not staying hot/cold	Lid not sealed properly; tumbler not pre-heated/pre-chilled.	Verify the lid is tightly sealed. Pre-heat with hot water or pre-chill with cold water for 5 minutes before filling.
Unpleasant odor inside tumbler	Improper cleaning or drying; residue buildup.	Wash thoroughly with warm soapy water and ensure complete drying. For persistent odors, use a baking soda solution.

SPECIFICATIONS

Brand: Kinto

Model: 20432

Material: Stainless Steel

Color: Safety Pink

Capacity: 240 ml (8.1 Ounces)

Dimensions (W x H): 8.7 cm x 9.5 cm

Special Feature: Insulated, High-quality design, Secure plug lid

Recommended Uses: Home, Travel, Daily Use

Dishwasher Safe: Yes

Microwave Safe: No

Reusable: Yes

WARRANTY AND SUPPORT

Kinto products are manufactured to high-quality standards. For specific warranty information or support, please refer to the product packaging or contact Kinto customer service directly through their official website.

When contacting support, please have your product model number (20432) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question