

BEKO STM6120W

Beko STM6120W Vertical Steam Iron User Manual

Model: STM6120W | Brand: BEKO

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Beko STM6120W Vertical Steam Iron.

The Beko STM6120W is designed for comfortable and easy garment care, offering powerful vertical steaming for quick wrinkle removal and hygienic fabric treatment. It features a ceramic plate, drip protection, automatic shut-off, and a removable water tank, making it a versatile tool for your laundry needs.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

- Always unplug the iron from the electrical outlet when filling with water, emptying, or when not in use.
- Do not leave the iron unattended while it is connected to the power supply.
- Keep the iron and its cord out of reach of children.
- Do not immerse the iron in water or other liquids.
- Use the iron only for its intended purpose.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Always place the iron on a stable, heat-resistant surface.
- Be cautious when handling hot steam. Steam can cause burns.
- Only use tap water in the water tank. Do not add perfumes, vinegar, starch, or other chemicals.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Beko STM6120W Vertical Steam Iron:



Figure 1: Main product view showing the Beko STM6120W Vertical Steam Iron and its detachable water tank.



Figure 2: The steam iron displayed with its included accessories: a brush attachment and a water measuring cup.





Figure 3: Side view highlighting the transparent water tank with its 'MAX' fill indicator.





Figure 4: Front view detailing the ceramic steam plate with multiple steam outlets.



Figure 5: Rear view displaying the control panel, including the power button and LCD display.

29.6cm



12.7cm

12.4cm

Figure 6: Diagram illustrating the product dimensions: 29.6cm height, 12.7cm length, and 12.4cm width.

SETUP

Before First Use

- Remove all packaging materials and labels from the appliance.
- Wipe the ceramic plate with a soft, damp cloth.
- It is recommended to test the steamer on an old piece of fabric first to ensure no residue is present.

Filling the Water Tank

- Ensure the appliance is unplugged from the power outlet.
- Remove the detachable water tank. The tank has a capacity of 230ml.
- Fill the water tank with clean tap water up to the 'MAX' line.
- Securely reattach the water tank to the main unit.

OPERATING INSTRUCTIONS

Powering On and Heating Up

- Plug the steam iron into a suitable electrical outlet (220-240V, 50-60Hz).
- Press the power button. The LCD display will illuminate.
- The iron will heat up quickly, typically ready for use in approximately 35 seconds.

Vertical Steaming

- Hold the garment taut with one hand. For best results, hang the garment on a hanger.
- Hold the steam iron vertically, with the steam plate facing the garment, but not touching it directly.
- Press the steam trigger to release a continuous steam emission of 28g/min.
- Move the steam iron slowly over the garment, from top to bottom, allowing the steam to penetrate the fabric and relax wrinkles.

Hygienic Function

The powerful steam output helps to refresh, disinfect, and remove odors from various fabric types, eliminating 99.9% of bacteria.

Using Attachments

For thicker fabrics or to remove lint, attach the brush accessory to the steam plate before steaming.

MAINTENANCE AND CLEANING

After Each Use

- Unplug the appliance and allow it to cool down completely.
- Empty any remaining water from the water tank.
- Wipe the exterior of the iron with a soft, damp cloth.

Cleaning the Ceramic Plate

If the ceramic plate becomes dirty, wipe it with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling

Regular descaling is important to maintain performance, especially in areas with hard water. Refer to the full manual for detailed descaling instructions.

TROUBLESHOOTING

If your Beko STM6120W Vertical Steam Iron is not functioning as expected, please refer to the following common issues and solutions:

No Steam Output

- Ensure the water tank is filled with water.
- Check if the appliance is properly plugged in and powered on.
- Allow sufficient time for the iron to heat up (approximately 35 seconds).
- Ensure the steam trigger is pressed firmly.
- If the pump sounds like it's working but no steam is produced, the nozzles might be blocked. Refer to the cleaning section or contact customer support.

Water Leaking

- Ensure the water tank is securely attached and not overfilled.
- Do not tilt the iron too much during use, as this can cause water to leak.

Appliance Not Turning On

- Check the power cord and electrical outlet.
- Ensure the power button is pressed.

For persistent issues, please contact Beko customer support.

SPECIFICATIONS

Feature	Detail
Model	STM6120W
Brand	BEKO
Power	2200 W
Continuous Steam	28 g/min
Water Tank Capacity	230 ml
Dimensions (L x W x H)	12.7 x 12.4 x 29.6 cm
Weight	1.1 Kilograms

Heating Time	Approx. 35 seconds
Plate Type	Ceramic
Voltage/Frequency	220-240 V / 50-60 Hz

WARRANTY AND SUPPORT

Your Beko STM6120W Vertical Steam Iron comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Beko customer support through their official website or the contact information provided in your product packaging.

You can also visit the official BEKO Store for more information: [BEKO Official Store](#)