

ECONTROLLY SB150

Instruction Manual

ECONTROLLY Replaced Remote Control for JBL Cinema SoundBar SB150

1. INTRODUCTION

Thank you for choosing the ECONTROLLY Replaced Remote Control. This remote is specifically designed to be a direct replacement for the original remote control of the JBL Cinema SoundBar SB150 Audio System Player. It requires no programming and is ready for use simply by installing batteries.

This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new remote control, ensuring a seamless experience with your audio system.

2. SETUP

2.1 Battery Installation

The remote control requires **2 AAA batteries** (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch or slide the battery cover in the direction indicated by the arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.





Figure 1: Rear view of the remote control, highlighting the battery compartment and release mechanism.

2.2 Initial Use

This replacement remote control is pre-programmed and does not require any additional setup or pairing with your JBL Cinema SoundBar SB150. Once the batteries are correctly installed, the remote is ready for immediate use.

3. OPERATING INSTRUCTIONS

The remote control provides full functionality for your JBL Cinema SoundBar SB150. Below is a description of each button's function:





Figure 2: Front view of the ECONTROLLY replacement remote control.

Power Button (): Turns the soundbar on or off.

Bluetooth Button (): Switches the soundbar's input source to Bluetooth for wireless audio streaming.

AUX Button (): Selects the Auxiliary (3.5mm jack) input source.

Optical Button (▶): Selects the Optical digital audio input source.

Feedback Button (): Toggles the soundbar's audio feedback sounds (e.g., button press tones) on or off.

Volume Up/Down Buttons (– / +): Adjusts the overall volume level of the soundbar.

Bass Up/Down Buttons (– / + next to 'BASS'): Adjusts the bass level of the soundbar.

Movie Mode Button (): Activates the soundbar's Movie sound mode, optimizing audio for cinematic content.

Music Mode Button (): Activates the soundbar's Music sound mode, optimizing audio for music playback.

News Mode Button (): Activates the soundbar's News sound mode, enhancing vocal clarity for news and dialogue.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and soundbar. Remote out of range.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the line of sight to the soundbar. Move closer to the soundbar.
Buttons not working	Dirty contacts. Damaged button.	Clean the remote surface. If a specific button is unresponsive, the remote may be damaged and require replacement.
Intermittent control	Low battery power. Interference from other electronic devices.	Replace batteries. Move the soundbar or remote away from potential sources of interference.

If the problem persists after trying these solutions, please contact ECONTROLLY customer support for further assistance.

6. SPECIFICATIONS

Below are the technical specifications for the ECONTROLLY Replaced Remote Control:

- **Model Number:** SB150 (Replacement)
- **Compatible Devices:** JBL Cinema SoundBar SB150 Audio System Player
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 0.65 x 2 inches (approximately)
- **Item Weight:** 1 ounce (approximately, without batteries)
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (dedicated to SB150)

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support for your ECONTROLLY Replaced Remote Control, please refer to the seller's policy on the platform where the purchase was made or contact ECONTROLLY customer service directly. Please have your purchase details and product model number (SB150) ready when contacting support.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question