

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AGARO](#) /

› [AGARO Supreme Cordless Stick Vacuum Cleaner User Manual](#)

AGARO Supreme

AGARO Supreme Cordless Stick Vacuum Cleaner User Manual

Model: Supreme

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the AGARO Supreme Cordless Stick Vacuum Cleaner. Retain this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, charging, or performing any maintenance.
- Use only the charger supplied by the manufacturer to recharge.
- Store the vacuum cleaner indoors in a dry place.

2. PRODUCT OVERVIEW

The AGARO Supreme Cordless Stick Vacuum Cleaner is a versatile 2-in-1 device designed for efficient dry vacuuming in your home. It features a powerful brushless motor and multiple attachments for various cleaning needs.

Included Components:

- Main Unit
- Extension Tube
- Motorized Brush Head

- 2-in-1 Bristle Brush
- Mattress Brush
- Crevice Nozzle
- Sponge Filter
- Wall Bracket
- Screws for Wall Bracket
- Charger



Image: The AGARO Supreme Cordless Stick Vacuum Cleaner shown in its full stick configuration and as a detached handheld unit.

3. ASSEMBLY

The AGARO Supreme vacuum cleaner can be assembled in various configurations for different cleaning tasks.

1. **Stick Vacuum Assembly:** Connect the main unit (with dust cup) to one end of the extension tube. Connect the motorized brush head to the other end of the extension tube. Ensure all connections click securely into place.

2. **Handheld Vacuum Assembly:** For handheld use, detach the extension tube and motorized brush head. Directly attach desired accessories such as the crevice nozzle, 2-in-1 bristle brush, or mattress brush to the main unit.
3. **Accessory Attachment:** To attach any accessory, align it with the suction opening and push firmly until it clicks into place. To remove, press the release button (if present) and pull the accessory off.



Image: Illustration of the motorized brush, 2-in-1 multipurpose brush, crevice nozzle, and mattress brush heads.

4. CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner's battery. The battery is rechargeable and provides cordless operation.

- Connect the charger to the charging port on the main unit.
- Plug the charger into a standard electrical outlet.
- The charging indicator lights will illuminate, indicating the charging status.
- A full charge takes approximately 5 hours.
- Battery life varies by suction mode:
 - Low mode: Up to 60 minutes

- Medium mode: Up to 20 minutes
- High mode: Up to 8 minutes



Image: Visual representation of battery life in different suction modes and the 5-hour recharging time.

5. OPERATION

Operating the AGARO Supreme is straightforward with its intuitive controls and versatile design.

Power On/Off:

- Press the power button on the main unit to turn the vacuum cleaner on.
- Press the power button again to turn it off.

Adjusting Suction Modes:

The vacuum cleaner offers three adjustable suction modes for different cleaning intensities.

- Press the mode selection button (often indicated by a fan icon or similar) to cycle through Low, Medium, and High suction settings.
- Select Low for light cleaning and extended battery life.
- Select Medium for general cleaning tasks.

- Select High for maximum suction power on stubborn dirt or pet hair.



Image: Visual guide to the three adjustable suction modes: Low, Medium, and High, with corresponding airflow indicators.

Using Different Attachments:

- **Motorized Brush Head:** Ideal for floors and carpets, effectively removing dry embedded dust, pet hair, and crumbs.
- **Crevice Nozzle:** Use for narrow gaps, corners, and hard-to-reach areas.
- **2-in-1 Bristle Brush:** Suitable for delicate surfaces, upholstery, and keyboards.
- **Mattress Brush:** Designed for cleaning mattresses and fabric surfaces.

2-in-1

DRY VACUUMING

400W
Brushless Motor
— up to —
25 kPa Suction



Image: The vacuum cleaner demonstrated in both its stick and handheld configurations for dry vacuuming.

Flexible Head:

The motorized brush head features a flexible joint that can be moved up to 270 degrees, allowing for easy maneuverability around furniture and obstacles.



Image: The motorized rolling brush head demonstrating its 270-degree swivel action for enhanced cleaning flexibility.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Bin:

The 0.5-liter bagless dust collecting bin is designed for hygienic emptying.

1. Ensure the vacuum cleaner is turned off.
2. Locate the dust bin release button on the main unit.
3. Press the button to detach the dust bin.
4. Position the dust bin over a trash receptacle.
5. Open the bottom flap of the dust bin to release collected debris.
6. Close the flap and reattach the dust bin to the main unit, ensuring it clicks securely.

0.5L BAGLESS Dust Collecting CONTAINER



Image: A hand demonstrating the process of emptying the 0.5-liter bagless dust collecting container into a waste bin.

Cleaning Filters:

The HEPA filter traps 99.99% of particles, dust, and allergens as small as 0.3 microns. Clean regularly to maintain suction power.

1. Remove the dust bin as described above.
2. Carefully remove the HEPA filter from the dust bin assembly.
3. Tap the filter gently over a trash can to remove loose dust.
4. If necessary, rinse the filter under cold running water. Ensure it is completely dry before reinserting. Do not use detergents or hot water.
5. Reassemble the filter and dust bin.

Cleaning Brush Heads:

- Turn off the vacuum cleaner and detach the brush head.
- Use scissors or a brush to remove any tangled hair, threads, or debris from the roller brush.
- Wipe the exterior of the brush head with a dry or slightly damp cloth.

7. TROUBLESHOOTING

If you encounter issues with your AGARO Supreme vacuum cleaner, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|------------------------------|--|---|
| Vacuum does not turn on | Battery is depleted Power button not pressed correctly | Charge the battery fully Ensure the power button is pressed firmly |
| Low suction power | Dust bin is full Filter is clogged Brush head or tube is blocked | Empty the dust bin Clean or replace the HEPA filter Check and clear any blockages in the brush head or extension tube |
| Motorized brush not rotating | Brush is tangled with hair/debris Brush head not properly attached | Clean the roller brush Reattach the brush head securely |
| Battery not charging | Charger not connected properly Faulty charger or outlet | Ensure charger is securely plugged into vacuum and outlet Try a different outlet or contact customer support for charger replacement |

8. SPECIFICATIONS

- **Brand:** AGARO
- **Model Name:** Supreme
- **Motor:** 400W Brushless DC Motor
- **Suction Power:** Up to 25 kPa
- **Suction Modes:** 3 (Low, Medium, High)
- **Battery:** Rechargeable 2000 mAh
- **Battery Life:** Up to 60 minutes (Low), 20 minutes (Medium), 8 minutes (High)
- **Charging Time:** Up to 5 hours
- **Dust Bin Capacity:** 0.5 Litres (Bagless)
- **Filter Type:** HEPA Filter (traps 99.99% of particles as small as 0.3 microns)
- **Form Factor:** 2-in-1 Handheld & Stick
- **Special Features:** Cordless, Flexible Head (270-degree maneuverability), Motorized Multi-Floor Rolling Brush
- **Noise Level:** 80 dB
- **Product Dimensions:** 21.7L x 25.6W x 117.2H Centimeters
- **Item Weight:** 4 kg

9. WARRANTY INFORMATION

The AGARO Supreme Cordless Stick Vacuum Cleaner comes with a **1-year warranty** from the date of

purchase.

This warranty covers manufacturing defects and malfunctions under normal household use. It does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.

For warranty claims or technical support, please contact AGARO customer service. Keep your purchase receipt as proof of purchase.