

[manuals.plus](#) /› [PRITOM](#) /› [PRITOM 10-inch Android Tablet User Manual](#)

## PRITOM PT-DE-M10-3G

# PRITOM 10-inch Android Tablet User Manual

Model: PT-DE-M10-3G

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your PRITOM 10-inch Android Tablet. Please read it thoroughly before using the device and keep it for future reference.

## 2. SAFETY INFORMATION

Observe the following safety guidelines to prevent damage to the device or injury to yourself:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only manufacturer-approved chargers and accessories.
- Do not attempt to disassemble or repair the tablet yourself.
- Keep the tablet away from water and other liquids.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- PRITOM 10-inch Android Tablet
- USB Type-C Cable
- Power Adapter (if included)
- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the tablet's components.



Figure 4.1: Front and Rear View of the Tablet

This image displays the PRITOM 10-inch Android Tablet from both the front and back. The front shows the display with various application icons, while the rear highlights the camera module.



**TF Card**

**SIM Card**

The SIM card supports 3G calls, and the TF card can expand the storage space to 512GB

Figure 4.2: TF Card and SIM Card Slots

This image provides a detailed view of the side of the tablet, illustrating the dedicated slots for a TF (microSD) card and a SIM card. These slots allow for expandable storage and cellular connectivity.

## 5. SETUP

### 5.1 Initial Charging

Before first use, fully charge the tablet. Connect the USB Type-C cable to the tablet's charging port and the other end to a power adapter. The battery indicator will show charging status.

### 5.2 Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options.

### 5.3 SIM Card and TF Card Installation

The tablet supports a micro SIM card for 3G calls and a TF (microSD) card for expandable storage up to 512GB.

1. Locate the SIM/TF card slot on the side of the tablet (refer to Figure 4.2).

2. Gently open the slot cover.
3. Insert the micro SIM card into the designated SIM slot with the gold contacts facing down.
4. Insert the TF card into the designated TF slot with the gold contacts facing down.
5. Close the slot cover securely.

## 6. OPERATING INSTRUCTIONS

### 6.1 Basic Navigation

- **Touch:** Tap icons or options to select.
- **Swipe:** Drag your finger across the screen to scroll or navigate.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out on images or web pages.

### 6.2 Connectivity

#### Wi-Fi Connection

1. Go to *Settings > Network & internet > Wi-Fi*.
2. Toggle Wi-Fi ON.
3. Select your desired network and enter the password if prompted.

#### Bluetooth Pairing

1. Go to *Settings > Connected devices > Bluetooth*.
2. Toggle Bluetooth ON.
3. Select the device you wish to pair with from the list of available devices.

#### 3G Cellular Calls

With a micro SIM card inserted, you can make and receive 3G calls. Ensure your SIM card supports the tablet's frequency bands (GSM 850/900/1800/1900; WCDMA CDMA 850/2100).




Figure 6.1: Tablet Supporting Phone Calls

This image illustrates the PRITOM tablet being used for video calls, highlighting its capability to support

phone calls via a SIM card.

## GPS Navigation

The tablet features GPS for navigation. You can use pre-installed map applications or download others from the Google Play Store. Offline Google Maps are supported.

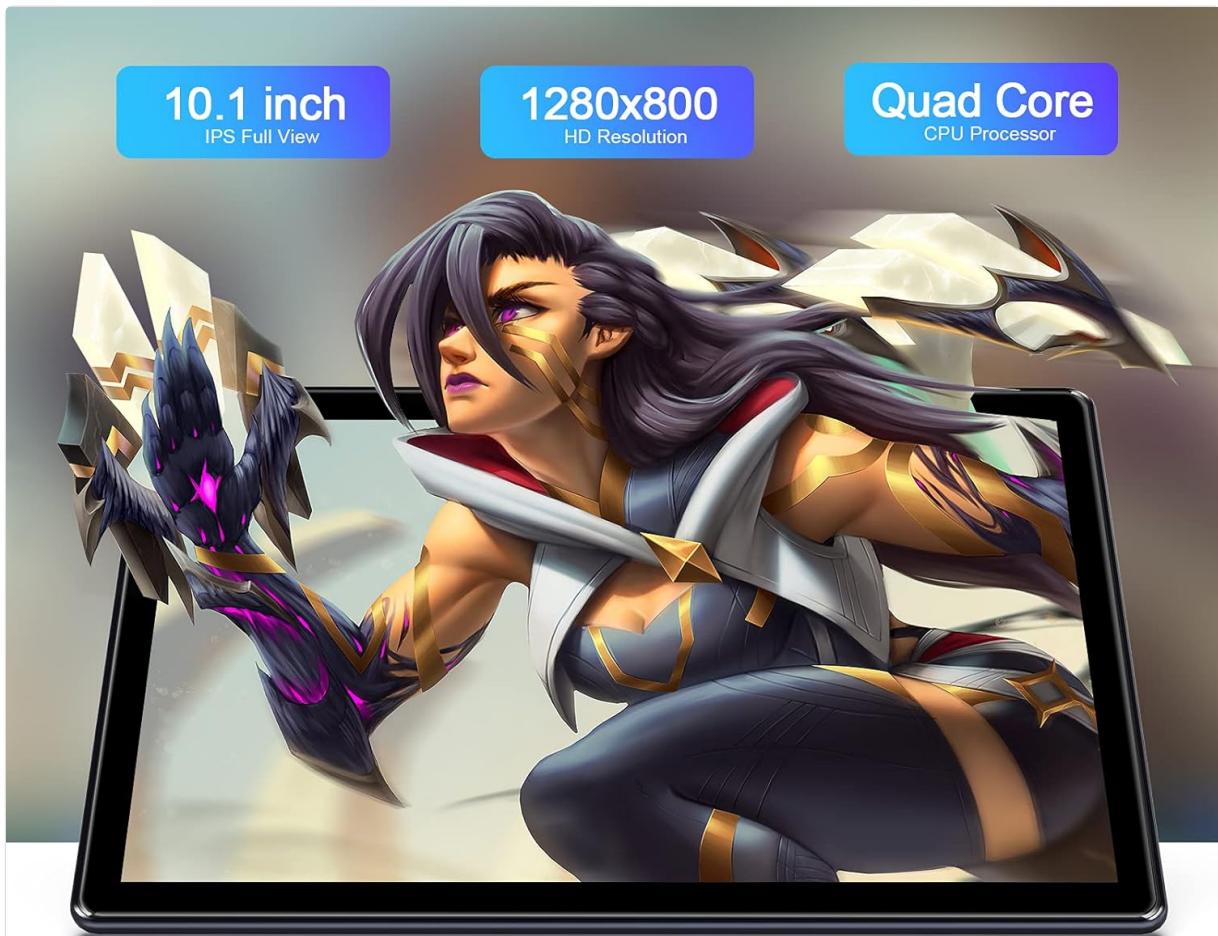

## 10.1 inch HD Large Screen

It adopts a 10.1" full HD 1280x800 IPS screen with brilliant colors, The game and movie watching experience is more immersive and shocking

Figure 6.2: GPS Navigation on Tablet

This image shows the tablet mounted in a car, actively displaying a GPS map, indicating its use for navigation.

### 6.3 Camera Usage

The tablet is equipped with a 2.0 MP front camera and an 8.0 MP rear camera. Open the Camera application to take photos or record videos.

### 6.4 Audio Output

The tablet features dual speakers for enhanced audio experience. Connect headphones via the 3.5mm audio jack for private listening.

# Three-Dimensional External Release

Equipped with the third-generation sound cavity unit, the external sound is more fresh and lifelike; Intelligent independent function automatically adjusts the effect according to environmental changes, making the video and audio shocking



Figure 6.3: Tablet Audio Features

This diagram illustrates the tablet's internal sound cavity and dual horn design, which contribute to its enhanced audio output.

## 7. MAINTENANCE

### 7.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use liquid cleaners or abrasive materials.

### 7.2 Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet charging for extended periods after it is fully charged.
- Store the tablet in a cool, dry place if not used for a long time.

### 7.3 Software Updates

Periodically check for system updates via *Settings > System > System update* to ensure optimal performance and security.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not power on.	Low battery; system crash.	Charge the tablet for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart.
Wi-Fi connection issues.	Incorrect password; router issue; out of range.	Verify password. Restart router. Move closer to the Wi-Fi source.
SIM card not detected.	Improper insertion; incompatible SIM type.	Ensure micro SIM is correctly inserted. Confirm SIM card is active and compatible (micro SIM, 3G bands).
Tablet is slow or unresponsive.	Too many apps running; low storage.	Close background apps. Clear cache. Free up storage space. Restart the tablet.

## 9. SPECIFICATIONS

<b>Brand</b>	PRITOM
<b>Model Number</b>	PT-DE-M10-3G
<b>Operating System</b>	Android 10 Go
<b>Processor</b>	Quad-core (Unisoc)
<b>RAM</b>	2 GB
<b>Internal Storage</b>	32 GB
<b>Expandable Storage</b>	Up to 512 GB (Micro SD/TF Card)
<b>Screen Size</b>	10.1 inches
<b>Display Resolution</b>	1280 x 800 IPS HD
<b>Front Camera</b>	2.0 MP
<b>Rear Camera</b>	8.0 MP
<b>Battery Life</b>	Up to 8 hours (mixed use)
<b>Connectivity</b>	Wi-Fi (802.11ac), Bluetooth, 3G (SIM support), GPS
<b>Charging Port</b>	USB Type-C
<b>Dimensions (L x W x H)</b>	25 x 18 x 1 cm
<b>Weight</b>	3 Grams

## 10. WARRANTY AND SUPPORT

PRITOM offers a 180-day warranty for this tablet. For technical support or warranty claims, please contact

PRITOM customer service. Refer to the contact information provided with your purchase or visit the official PRITOM website.

The PRITOM team is dedicated to providing reliable customer service and technical support.

© 2024 PRITOM. All rights reserved.

## Related Documents - PT-DE-M10-3G

	<p><b><a href="#">PRITOM IRA T1029 User Guide</a></b></p> <p>User guide for the PRITOM IRA T1029 tablet, covering function overview, getting started, home screen, settings, network connection, app management, multimedia, troubleshooting, and specifications.</p>
	<p><b><a href="#">Benton M10 Tablet PC User Guide, Specifications, and FCC Compliance</a></b></p> <p>Comprehensive user guide for the Benton M10 Tablet PC, covering setup, features, network connection, app management, troubleshooting, and FCC compliance information.</p>
	<p><b><a href="#">VASTKING KingPad M10 User Manual</a></b></p> <p>Official user manual for the VASTKING KingPad M10 tablet, providing detailed instructions on setup, features, and operation of your Android device.</p>
	<p><b><a href="#">LANDI M10SE Portable Data Terminal User Guide</a></b></p> <p>User guide for the LANDI M10SE Portable Data Terminal, covering product profile, technical features, installation, usage, maintenance, transportation, storage, FAQs, frequency bands, RF output power, standards, and customer support.</p>
	<p><b><a href="#">Manual de Operación Proyector LCD Panasonic Serie PT-MZ</a></b></p> <p>Este manual de funciones proporciona instrucciones detalladas para los proyectores LCD Panasonic Serie PT-MZ, cubriendo configuración, operaciones básicas, ajustes, mantenimiento y advertencias de seguridad importantes para uso comercial.</p>

[Manual de Usuario de Tablet Android](#)

Guía completa para el usuario de la Tablet Android, cubriendo configuración, uso, gestión de aplicaciones, y solución de problemas.