

## Lubluelu VC-CF-X2101A

# Lubluelu VC-CF-X2101A Wet and Dry Cordless Vacuum Cleaner User Manual

Model: VC-CF-X2101A

## 1. INTRODUCTION

---

Thank you for choosing the Lubluelu VC-CF-X2101A Wet and Dry Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using this appliance.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Turn off all controls before unplugging.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use without filters in place.
- Store the appliance indoors in a cool, dry area.

### 3. PACKAGE CONTENTS

---

Verify that all components are present in the package:

- Lubluelu VC-CF-X2101A Main Unit
- Handle Assembly
- Clean Water Tank (0.8 L)
- Dirty Water Tank (0.9 L)
- Brush Roller
- Charging Dock / Storage Base
- Power Adapter
- Cleaning Tool
- User Manual
- Additional Brush Roller (Spare)

### 4. PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Lubluelu VC-CF-X2101A vacuum cleaner.

# Digital Display for Easier Operation & Voice Broadcast in Real Time

The clean water bucket is short of water, please add water.

Self-Cleaning starts



The digital display provides real-time information and voice broadcast for easier operation, indicating status such as water levels and cleaning modes.

## Dual Big Water Tank Design Quick Drying Floor

**900ml**

Dirty Water Tank

**800ml**

Clean Water Tank



The vacuum features a dual water tank system: a 0.8 L clean water tank and a 0.9 L dirty water tank. This separation ensures hygienic cleaning by always using fresh water.



The appliance is powered by a 6x4000mAh Lithium-Ion battery, providing up to 35 minutes of runtime on a full charge.

## 5. SETUP

---

### 5.1 Assembly

1. Insert the handle assembly into the main unit until it clicks securely into place.
2. Ensure the clean water tank and dirty water tank are correctly installed in their respective positions.

### 5.2 Charging the Battery

1. Place the vacuum cleaner on the charging dock.
2. Connect the power adapter to the charging dock and then to a power outlet.
3. The digital display will indicate the charging status. A full charge takes approximately 4 hours.
4. Ensure the appliance is fully charged before its first use.

## Automatic Self-Cleaning on Charging Station

Cleaning & Charging at same time



The vacuum cleaner charges on its dedicated docking station. The self-cleaning function can also be initiated while on the charging station.

### 5.3 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water. You may add a small amount of non-foaming cleaning solution suitable for wet/dry vacuums. Do not overfill.
3. Close the cap securely and reinsert the tank into the main unit until it clicks.

## 6. OPERATING INSTRUCTIONS

---

The Lubluelu VC-CF-X2101A is designed for cleaning sealed indoor hard floors such as tiles, vinyl, sealed wood, laminate, linoleum, and marble. It effectively handles both dry debris and wet spills, including sticky messes and pet hair.

### 6.1 Basic Operation

1. Ensure the clean water tank is filled and the dirty water tank is empty.
2. Press the Power button to turn on the vacuum cleaner. The digital display will illuminate.
3. Select the desired cleaning mode (e.g., Standard, Max) using the mode selection button. The vacuum offers 3-level suction power.
4. Tilt the main unit back to engage the brush roller and begin cleaning. The self-propulsion design assists in moving the vacuum forward.
5. Move the vacuum cleaner slowly and steadily over the floor surface. For wet messes, pass over the area multiple times if necessary.
6. The floor will dry quickly and without streaks due to efficient water recovery.

## Multi Surface Cleaning For All Dirt



The vacuum cleaner is effective on multiple surfaces for various types of dirt, including dry debris and wet spills.

### 6.2 Edge and Corner Cleaning

The vacuum cleaner is designed to clean close to edges and corners, reaching within 1 cm of walls and furniture. Position the vacuum with the side closest to the edge to maximize cleaning coverage in these areas.

## Edge Cleaning Design

Better Cleaning Result  
for Edge&Corner



The edge cleaning design allows the vacuum to clean within 1 cm of edges, improving access to difficult areas.

### 6.3 After Cleaning

1. Return the vacuum cleaner to the charging dock.
2. Proceed to the maintenance section for instructions on emptying the dirty water tank and initiating the self-cleaning cycle.

## 7. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

## 7.1 Emptying the Dirty Water Tank

1. After each use, remove the dirty water tank from the main unit.
2. Carefully open the tank and dispose of the dirty water and debris.
3. Rinse the dirty water tank thoroughly with clean water.
4. Ensure the filter inside the dirty water tank is clean. Rinse if necessary.
5. Allow the tank and filter to air dry completely before reassembling.

## 7.2 Self-Cleaning Cycle

The self-cleaning function automatically cleans the brush roller and internal tubes, eliminating the need for manual cleaning of the dirty brush.

1. Ensure the clean water tank is filled with fresh water (and cleaning solution, if desired).
2. Place the vacuum cleaner on the charging dock.
3. Press the dedicated self-cleaning button (refer to the product diagram for location).
4. The vacuum cleaner will initiate a cleaning cycle, flushing the brush roller and tubes.
5. Once the cycle is complete, empty and clean the dirty water tank as described above.

## 7.3 Cleaning the Brush Roller

While the self-cleaning function is effective, occasional manual inspection and cleaning of the brush roller may be necessary, especially if hair or debris is heavily tangled.

1. Turn off the vacuum cleaner and remove it from the charging dock.
2. Locate the brush roller cover on the floor head and open it.
3. Remove the brush roller. Use the provided cleaning tool to cut and remove any tangled hair or fibers.
4. Rinse the brush roller under running water if heavily soiled. Allow it to air dry completely.
5. Reinsert the clean, dry brush roller and close the cover securely.

## 8. TROUBLESHOOTING

---

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Appliance not assembled correctly	Charge the battery fully Ensure handle and tanks are securely installed
Poor suction or cleaning performance	Dirty water tank is full Clean water tank is empty Brush roller is tangled or dirty Filter is clogged	Empty and clean the dirty water tank Refill the clean water tank Clean the brush roller (manual or self-cleaning) Clean or replace the filter

Problem	Possible Cause	Solution
Water leaks	Water tanks not installed correctly Tank caps not sealed properly	Reinstall water tanks securely Ensure tank caps are tightly closed
Self-cleaning not working	Clean water tank is empty Vacuum not on charging dock	Refill the clean water tank Place the vacuum correctly on the charging dock

## 9. SPECIFICATIONS

Feature	Specification
Brand	Lubluelu
Model Number	VC-CF-X2101A
Type	Wet and Dry Cordless Vacuum Cleaner
Power Source	Battery Powered (Lithium-Ion)
Battery Capacity	6x4000mAh
Running Time	Up to 35 minutes
Charging Time	Approx. 4 hours
Clean Water Tank Capacity	0.8 Liters
Dirty Water Tank Capacity	0.9 Liters
Filter Type	Cartridge
Weight	6 Kilograms
Power Levels	3
Usage Environment	Indoor

## 10. WARRANTY AND SUPPORT

### 10.1 Warranty Information

This Lubluelu VC-CF-X2101A Wet and Dry Cordless Vacuum Cleaner comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, neglect, accident, alteration, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

### 10.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Lubluelu customer support. Refer to the product packaging or the official Lubluelu website for the most current contact information.

