

[Manuals.plus](#) /

› [O-CONN](#) /

› O-CONN 6 Inch Cordless Mini Chainsaw OCMC6IN1 Instruction Manual

O-CONN OCMC6IN1

O-CONN 6 Inch Cordless Mini Chainsaw OCMC6IN1 Instruction Manual

Model: OCMC6IN1

INTRODUCTION

Thank you for choosing the O-CONN 6 Inch Cordless Mini Chainsaw. This manual provides important instructions for assembly, operation, maintenance, and safety. Please read this manual thoroughly before using the product and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your tool.

IMPORTANT SAFETY INFORMATION

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment (PPE) including safety glasses, gloves, and hearing protection when operating the chainsaw.
- Ensure the work area is clear of obstructions and bystanders.
- Keep hands and body parts away from the chain when the tool is running.
- Do not operate the chainsaw in wet conditions or near flammable liquids or gases.
- Always remove the battery before making adjustments, changing accessories, or storing the tool.
- Maintain a firm grip with both hands on the chainsaw during operation.
- Be aware of kickback and how to avoid it.
- Only use original O-CONN replacement parts and accessories.

For detailed safety guidelines, refer to the complete safety section in your printed manual.

PACKAGE CONTENTS

Verify that all items are present upon unboxing:

- 1 x O-CONN Mini Chainsaw (6 Inch)

- 1 x Chain (Pre-installed)
- 1 x 2.0Ah Battery
- 1 x Battery Charger
- 1 x Carrying Case
- 1 x Pair of Gloves
- 1 x Nut Driver
- 1 x Screwdriver
- 1 x User Manual (this document)

What Is In Your Box?

- 1 x Mini Chainsaw
- 1 x Chain (Installed)
- 1 x Battery
- 1 x Suitcase
- 1 x User Manual
- 1 x Gloves
- 1 x Charger
- 1 x Screwdriver
- 1 x Nut Driver



Image: All components included in the O-CONN Mini Chainsaw package.

For additional accessories such as batteries, chains, guide bars, or chargers, please visit the official O-CONN store.

PRODUCT OVERVIEW

Familiarize yourself with the parts of your O-CONN Mini Chainsaw:



Image: Labeled components of the O-CONN Mini Chainsaw.

- **6 Inch Chain:** For cutting wood.
- **Anti Baffle:** Protects against wood chip splash.
- **Guide Plate:** Supports the chain during cutting.
- **Pure Copper Motor:** Provides efficient power.
- **Switch Button:** Activates the chainsaw.
- **Safety Lock:** Prevents accidental starting.
- **Comfortable Handle:** Ergonomically designed for grip and shock absorption.
- **High-power Battery:** Provides cordless operation.

1. Charge the Battery:

Before first use, fully charge the 2.0Ah battery using the provided charger. The charging time is typically 2-3 hours. Ensure the charger is connected to a standard power outlet and the battery is securely inserted. An indicator light on the charger will show charging status.



Image: The 2.0Ah battery with charging and working time details.

2. Install the Battery:

Once charged, slide the battery into the base of the chainsaw handle until it clicks securely into place.

3. Check Chain Tension:

The chain comes pre-installed. However, it is crucial to check and adjust the chain tension before each use and periodically during operation. A properly tensioned chain should be snug against the guide bar but still allow you to pull it around the bar by hand with gloves on. Refer to the detailed instructions in the printed manual for specific chain tension adjustment procedures using the provided nut driver and screwdriver.

4. Safety Check:

Ensure the anti-splash baffle is correctly positioned. Verify that the safety lock mechanism functions properly before starting the tool.

Your browser does not support the video tag.

Video: O-CONN Mini Chainsaw Unboxing and initial setup demonstration by the seller.

OPERATING INSTRUCTIONS

1. Starting the Chainsaw:

To start the chainsaw, you must simultaneously press the safety lock button and the switch button. Once the chainsaw starts, you can release the safety lock button, but continue to hold the switch button for operation.



Image: Safety features including the anti-splash baffle and safety lock.

2. Holding the Chainsaw:

Always hold the chainsaw firmly with both hands. The ergonomic design provides a comfortable, anti-slip, and shock-absorbing grip for extended use.

Ergonomic Design



One-Handed Operation
2.65 Pounds (Including Battery)
Compact Size



Comfortable Grip
Anti-Slip
Shock Absorption



Image: Ergonomic design for comfortable and secure handling.

3. Cutting Technique:

Position the chainsaw firmly against the material to be cut. Allow the chain to reach full speed before engaging the wood. Apply steady, even pressure. Avoid forcing the saw, as this can lead to kickback or damage to the tool. The high-efficiency cutting system with a pure copper motor and fast heat dissipation ensures smooth operation.

High-Efficiency Cutting

Pure Copper Motor & Fast Heat Dissipation



Image: High-efficiency cutting in progress.

4. Stopping the Chainsaw:

Release the switch button to stop the chainsaw. Ensure the chain has come to a complete stop before setting the tool down.

Your browser does not support the video tag.

Video: Demonstration of the O-CONN Mini Chainsaw in use for various cutting tasks by the seller.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your chainsaw.

- **Chain Tension:** Periodically check and adjust chain tension. A loose chain can derail, and a too-tight chain can cause excessive wear and reduce cutting efficiency.
- **Chain Sharpening:** A dull chain requires more effort to cut and can cause kickback. Sharpen the chain regularly or replace it when necessary.
- **Cleaning:** After each use, remove the battery and clean the guide bar, chain, and motor housing. Use a brush or

compressed air to remove sawdust and debris. Ensure the anti-splash baffle is clean and free of obstructions.

- **Battery Care:** Store the battery in a cool, dry place away from direct sunlight. Do not store fully discharged batteries for extended periods. Charge the battery fully before storage and every few months if not in use.
- **Storage:** Store the chainsaw in its carrying case in a dry, secure location, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start.	Battery not charged or improperly installed. Safety lock not engaged correctly. Overload protection activated.	Ensure battery is fully charged and securely installed. Press the safety lock button and switch button simultaneously. Allow the motor to cool down if overload protection was triggered.
Poor cutting performance.	Dull chain. Loose chain tension. Incorrect cutting technique.	Sharpen or replace the chain. Adjust chain tension as per instructions. Use proper cutting technique, allowing the saw to do the work.
Chain slips off the guide bar.	Chain tension is too loose.	Adjust chain tension immediately. Ensure it is snug but still movable by hand.
Excessive vibration or noise.	Loose components. Damaged chain or guide bar.	Check all fasteners for tightness. Inspect the chain and guide bar for damage and replace if necessary.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact O-CONN customer support.

SPECIFICATIONS

Feature	Detail
Brand	O-CONN
Model Number	OCMC6IN1
Power Source	Battery Powered
Battery Type	21V MAX 2.0Ah Lithium-ion
Horsepower	550 Watts
Chain Length	6 Inches
Item Weight	2.65 Pounds (including battery)
Product Dimensions (L x W x H)	13.78" x 3.94" x 4.33"

WARRANTY AND SUPPORT

O-CONN is committed to providing quality products and excellent customer service.

- **Warranty Information:** For details regarding the product warranty, please refer to the warranty card included in your package or contact O-CONN customer support directly.
- **Customer Support:** If you have any questions, concerns, or require assistance with your O-CONN Mini Chainsaw, our dedicated 24/7 after-sales support team is available to help. Please feel free to contact us through the contact information provided in your product packaging or on the official O-CONN website.

