

Scheppach 7905203701

Scheppach Base Frame Instruction Manual

Model: 7905203701

Compatible with Scheppach Log Splitters HL650, HL660, HL760

INTRODUCTION

This instruction manual provides essential information for the safe and proper assembly, operation, and maintenance of your Scheppach Base Frame, model 7905203701. This base frame is designed to enhance the usability of Scheppach hydraulic log splitters HL650, HL660, and HL760 by elevating the working height and providing mobility.

Please read this manual thoroughly before assembly and use to ensure optimal performance and safety.

SAFETY INSTRUCTIONS

- Always ensure all fasteners are securely tightened before and after each use.
- Operate the log splitter with the base frame on a stable, level surface.
- Do not exceed the weight capacity of the base frame or the log splitter.
- Keep hands and feet clear of moving parts during log splitter operation.
- Refer to your log splitter's instruction manual for additional safety guidelines.

INCLUDED COMPONENTS

The Scheppach Base Frame package includes the following:

- Base frame components (various metal sections)
- Fasteners (bolts, nuts, washers)
- Wheels (for mobility)

Please verify all components are present and undamaged before proceeding with assembly.

SETUP AND ASSEMBLY

Follow these steps to assemble the Scheppach Base Frame:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Attach Main Support Legs:** Connect the vertical support legs to the horizontal base sections using the provided bolts and nuts. Ensure all connections are firm but do not fully tighten yet.
3. **Install Wheels:** Secure the wheels to the designated axles on the base frame. The wheels allow for easier transport of the log splitter once mounted.
4. **Assemble Log Splitter Mounts:** Attach the upper mounting brackets, which will hold the log splitter, to the top of the vertical support legs. These brackets are designed to align with the mounting points on your Scheppach HL650, HL660, or HL760 log splitter.
5. **Mount Log Splitter:** Carefully lift your Scheppach log splitter onto the assembled base frame. Align the log splitter's mounting points with the brackets on the base frame and secure it using appropriate fasteners (may be supplied with the log splitter or the base frame).
6. **Final Tightening:** Once the log splitter is securely seated on the base frame, systematically tighten all bolts and nuts across the entire assembly. Double-check all connections for stability.



Image 1: Assembled Scheppach Base Frame. This image shows the blue metal frame with two wheels on one side and a stable foot on the other, designed to elevate and support a log splitter.

OPERATING THE BASE FRAME

The base frame is designed to provide an ergonomic working height for your Scheppach log splitter and facilitate its movement. Once your log splitter is securely mounted:

- **Ergonomic Operation:** The elevated position reduces the need for bending, making the log splitting process more comfortable and less strenuous on your back.
- **Mobility:** Utilize the integrated wheels to tilt and move the log splitter and base frame assembly to your desired working location. Always ensure the path is clear and level when moving the unit.
- **Stability:** Position the base frame on a firm, level surface before operating the log splitter. The stable foot on one side, combined with the wheels, provides a secure platform during operation.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your base frame:

- **Inspection:** Before each use, inspect the base frame for any signs of damage, wear, or loose fasteners.
- **Tighten Fasteners:** Periodically check and tighten all bolts and nuts to ensure the frame remains rigid and secure.
- **Cleaning:** Clean the frame with a damp cloth to remove dirt, sawdust, and debris. Avoid using harsh chemicals that could damage the paint finish.
- **Storage:** Store the base frame and log splitter in a dry, protected area when not in use to prevent rust and corrosion.

TROUBLESHOOTING

If you encounter issues with your base frame, consider the following:

- **Instability:** Ensure all bolts are fully tightened. Verify the base frame is placed on a completely level and firm surface.
- **Difficulty Moving:** Check if the wheels are free of debris and rotate smoothly. Ensure the ground surface is suitable for rolling.
- **Log Splitter Not Fitting:** Double-check that your log splitter model (HL650, HL660, or HL760) is compatible with this base frame. Review assembly steps to ensure correct orientation of mounting brackets.

SPECIFICATIONS

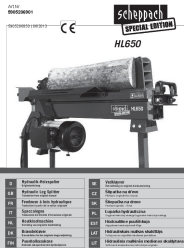
Feature	Detail
Brand	Scheppach
Model Number	7905203701
Compatible Log Splitters	Scheppach HL650, HL660, HL760
Item Weight	12.32 pounds (approx. 5.59 kg)
Package Dimensions	37.8 x 20.79 x 14.92 inches (approx. 96 x 52.8 x 37.9 cm)
Power Source	Hand Powered (for movement, frame itself is passive)
Included Components	Base frame

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Scheppach Base Frame, please contact Scheppach customer service directly. Retain your proof of purchase for warranty claims.

Contact information can typically be found on the official Scheppach website or on the product packaging.

Related Documents - 7905203701

 HL650	scheppach HL650 Hydraulischer Holzsplitter – Bedienungsanleitung und Sicherheitshinweise Entdecken Sie die Bedienungsanleitung für den scheppach HL650 Hydraulischen Holzsplitter. Dieses Dokument bietet detaillierte Informationen zur sicheren Montage, Bedienung und Wartung, um eine optimale Leistung und Langlebigkeit Ihres Geräts zu gewährleisten. Erfahren Sie mehr über die Handhabung und die wichtigsten Sicherheitshinweise für den scheppach HL650.
 HL810	Scheppach HL810 Log Splitter User Manual Comprehensive user manual for the Scheppach HL810 log splitter, detailing assembly, operation, safety precautions, and maintenance. Includes technical specifications and troubleshooting.
 HL1050	scheppach HL1050 Holzsplitter Bedienungsanleitung Umfassende Bedienungsanleitung für den scheppach HL1050 Holzsplitter. Enthält Informationen zu Montage, sicherer Bedienung, Wartung und technischen Daten für effiziente Holzaufbereitung.
 HL805	scheppach HL805 Holzsplitter Bedienungsanleitung Bedienungsanleitung für den scheppach HL805 Holzsplitter, mit Anleitungen zur sicheren Verwendung, Montage, Wartung und Fehlerbehebung.
 HL710	scheppach HL710 Hydraulic Log Splitter Manual This document provides operating instructions and safety information for the scheppach HL710 Hydraulic Log Splitter. It covers assembly, operation, maintenance, and troubleshooting.



Modell	Leistung	Max. Splitlenge	Max. Splittdurchmesser
HL850	8,5 kW	100 cm	20 cm

scheppach HL850 Holzspalter: Hydraulischer Holzspalter für Brennholz

Die scheppach HL850 ist ein leistungsstarker hydraulischer Holzspalter, konzipiert für das effiziente Zerkleinern von Brennholz. Dieses Handbuch bietet umfassende Anleitungen zu Montage, Betrieb, Wartung und Sicherheitshinweisen für den sicheren und bestimmungsgemäßen Gebrauch des Holzspalters.

Documents - Scheppach – 7905203701



Modell	Leistung	Max. Splitlenge	Max. Splittdurchmesser
HL760LS	7,6 kW	100 cm	20 cm

HL760LS

7 T SPLITTER

INCLUDED

[pdf] Specifications Dimension Guide

INCLUDED files bygxtra dk Issue 2020 11 Changes reserved 7 T SPLITTER With a splitting force of tonnes the scheppach HL760LS horizontal log splitter splits fi rewood with lengths up to 52 cm into re sized logs 2305784 Perfon File.aspx?id=f921bf89770540188db724fc6bf8935|||

ELECTRIC HL760LS 7 T SPLITTER With a splitting force of 7 tonnes, the scheppach HL760LS horizontal ... logs Safe and quiet operation HL760L ELECTRIC OPTIONAL ACCESSORIES STAND WITH WHEELS Order No: **7905203701** Barcode: 4014915228035 INCLUDED Variable stroke adjustment Tray table Safety cage again...

lang:en score:23 filesize: 4.23 M page_count: 2 document date: 2020-12-08