

## Braun HT1510BK

# Braun HT 1510 BK PurShine 2-Slice Toaster User Manual

Model: HT1510BK

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and care of your Braun HT 1510 BK PurShine 2-Slice Toaster. Please read all instructions carefully before using the appliance and retain this manual for future reference.



Figure 1: Braun HT 1510 BK PurShine 2-Slice Toaster, front-side view, showing the stainless steel body, black accents, control knob, and lever.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster before removing bread.
- Do not leave the toaster unattended during operation.

## 3. SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove the toaster from its packaging. Remove all packaging materials, labels, and stickers.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **Power Connection:** Unwind the power cord and plug it into a suitable electrical outlet (240V).
4. **Initial Operation:** Before toasting bread for consumption, operate the toaster empty for a few cycles at the highest browning setting (8) to burn off any manufacturing residues. A slight odor or smoke may be present during this initial use; this is normal and will dissipate. Ensure the area is well-ventilated.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Basic Toasting

1. **Insert Bread:** Place up to two slices of bread into the toasting slots.
2. **Select Browning Level:** Turn the browning control knob to your desired setting, from 1 (lightest) to 8 (darkest).



Figure 2: Close-up of the toaster's control panel, featuring the browning level dial (1-8), cancel button, reheat button, and defrost button.

3. **Start Toasting:** Press the toast lever down until it locks into place. The toasting cycle will begin automatically.
4. **High-Lift Function:** Once toasting is complete, the toast will automatically pop up. For smaller items, gently lift the toast lever further upwards to raise the bread carriage for easier removal.



Figure 3: Top-down view of the toaster slots with two slices of bread inserted, demonstrating the capacity.

5. **Cancel Function:** To stop the toasting cycle at any time, press the illuminated cancel button (O).

#### 4.2. Defrost Function

The defrost function allows you to toast frozen bread directly. This function automatically adjusts the toasting time to account for the frozen state of the bread.

1. Insert frozen bread into the slots.

2. Select your desired browning level.
3. Press the toast lever down, then press the illuminated defrost button (snowflake icon). The defrost indicator light will illuminate.
4. The toaster will automatically complete the defrosting and toasting cycle.

#### **4.3. Reheat Function**

The reheat function is designed to warm up already toasted bread without further browning it.

1. Insert already toasted bread into the slots.
2. Press the toast lever down, then press the illuminated reheat button (wavy lines icon). The reheat indicator light will illuminate.
3. The toaster will perform a short reheating cycle.

#### **4.4. Integrated Warming Rack**

The integrated warming rack is suitable for warming rolls, croissants, or pastries.

1. To deploy the warming rack, push the lever located on the side of the toaster upwards.
2. Place the items to be warmed on the rack.
3. Set the browning control to a low setting (e.g., 1 or 2).
4. Press the toast lever down to activate the heating elements.
5. Monitor the warming process closely to prevent burning. Press the cancel button to stop heating at any time.
6. Once warmed, lift the lever to retract the warming rack.



Figure 4: A hand placing a bread roll onto the integrated warming rack of the toaster, illustrating its use for heating larger items.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your toaster.

- 1. Before Cleaning:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- 2. Crumb Tray:** The toaster features an easy-to-clean crumb tray. Pull out the crumb tray located at the bottom of the toaster, empty the crumbs, and wipe it clean with a damp cloth. Ensure it is dry before reinserting.
- 3. Exterior:** Wipe the exterior surfaces of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
- 4. Interior:** Do not insert any objects into the toasting slots to clean them. If bread becomes jammed, unplug the toaster and carefully remove the bread after it has cooled.

5. **Storage:** The power cord can be stored neatly at the base of the toaster to keep your countertop tidy.

## 6. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your household circuit breaker.
Bread is not toasting evenly.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly.
Toast is too light or too dark.	Browning setting is incorrect for bread type.	Adjust the browning control knob to a higher or lower setting as needed. Different types of bread may require different settings.
Toast lever does not stay down.	Toaster is not plugged in; no bread in slots.	Ensure the toaster is plugged in. The lever will only lock down if the toaster is powered and bread is inserted.
Smoke coming from toaster.	Food stuck in slots; excessive crumbs; initial use residue.	Immediately unplug the toaster. Remove any stuck food or clean the crumb tray. If it's the first use, this is normal. If smoke persists, discontinue use.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Braun
Model	HT1510BK
Color	Black
Dimensions (L x W x H)	27 cm x 18.5 cm x 16.5 cm
Weight	1.6 kg
Capacity	2 Slices
Wattage	900 Watts
Voltage	240 Volts
Material	Stainless Steel
Special Features	8 Browning Levels, High-Lift System, Reheat Function, Defrost Function, Integrated Warming Rack, Crumb Tray

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official Braun website. Do not attempt to repair the appliance yourself; contact authorized service personnel for assistance.