

Reflex Active REF-200PRO-BK

Reflex Active PRO TWS In-Ear Headphones User Manual

Model: REF-200PRO-BK

1. INTRODUCTION

Thank you for choosing the Reflex Active PRO TWS In-Ear Headphones. These true wireless stereo earbuds are designed to provide a superior audio experience with advanced features like Active Noise Cancellation (ANC) and Transparency Mode. Enjoy crystal-clear sound, comfortable fit, and seamless connectivity for music, calls, and more.



Image: The Reflex Active PRO TWS In-Ear Headphones, black, resting inside their open charging case. A small LED indicator is visible on the front of the case.

2. SAFETY INFORMATION

Please read this manual carefully before using the product to ensure safe and proper operation. Keep this manual for future reference.

- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.
- **Driving Safety:** Do not use the earbuds while driving or cycling, or in any situation where your inability to hear ambient sounds could pose a danger to yourself or others.

- **Water Resistance:** The earbuds are water-resistant, but not waterproof. Do not submerge them in water. Avoid exposure to excessive moisture.
- **Charging:** Use only the provided charging cable and a certified power adapter. Do not attempt to disassemble or modify the product.
- **Children:** Keep out of reach of children. Small parts may pose a choking hazard.
- **Temperature:** Do not expose the product to extreme temperatures (hot or cold) or direct sunlight.

3. PACKAGE CONTENTS

Ensure all items are present in your package:

- Reflex Active PRO TWS In-Ear Headphones (Left and Right earbuds)
- Charging Case
- USB Charging Cable
- Ear Tips (3 sizes: Small, Medium, Large)
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Reflex Active PRO TWS In-Ear Headphones.



Image: Close-up view of the left and right Reflex Active PRO TWS earbuds, showing their ergonomic design and the small LED indicator on each.

Earbud Features:

- **Touch Control Area:** For playback, call management, and mode switching.
- **LED Indicator:** Shows pairing status, battery level, and charging status.
- **Microphone:** For calls and voice assistant.
- **Ear Tip:** Replaceable silicone tips for comfortable fit and sound isolation.

Charging Case Features:

- **Charging Port (USB-C):** For charging the case.
- **Case LED Indicator:** Shows case battery level and charging status.
- **Earbud Charging Slots:** Securely holds and charges the earbuds.



TRUE WIRELESS STEREO



VOICE CONTROL



ACTIVE NOISE CANCELLING



TOUCH CONTROL



AUDIO SAFE MODE



WIRELESS CONNECTION



STUDIO SOUND



250 HOURS STANDBY

Image: A graphic displaying key features of the earbuds, including True Wireless Stereo, Voice Control, Active Noise Cancelling, Touch Control, Audio Safe Mode, Wireless Connection, Studio Sound, and 250 Hours Standby.

5. SETUP

5.1 Charging the Earbuds and Case

Before first use, fully charge both the earbuds and the charging case.

1. **Charge the Case:** Connect the USB-C charging cable to the charging port on the case and the other end to a USB power source (e.g., wall adapter, computer USB port). The case LED indicator will show charging progress. A full charge takes approximately 2 hours for the base charge.
2. **Charge the Earbuds:** Place the earbuds into their respective slots in the charging case. Ensure they are correctly seated. The earbud LEDs will indicate charging. A full charge for the earbuds takes approximately 1 hour.



Image: The black Reflex Active PRO TWS charging case, showing the USB-C charging port at the bottom and the brand logo on the lid.

The earbuds provide approximately 5.5 hours of playtime on a single charge, with an additional 22 hours of combined playback time using the fully charged case.

5.2 Pairing with Your Device (Bluetooth)

The earbuds will automatically enter pairing mode when taken out of the charging case.

1. **Enable Bluetooth:** Turn on Bluetooth on your smartphone, tablet, or other compatible device.
2. **Remove Earbuds:** Open the charging case and remove both earbuds. They will automatically power on and attempt to pair with each other.
3. **Select Device:** On your device's Bluetooth settings, look for "Reflex Active PRO TWS" in the list of available devices and select it to connect.
4. **Confirmation:** Once successfully paired, you will hear an audible confirmation from the earbuds, and the earbud LEDs will stop flashing.

If pairing fails, place the earbuds back into the case, close the lid, and repeat the steps. The wireless range is 15-20 meters.

6. OPERATING INSTRUCTIONS

6.1 Basic Touch Controls

The earbuds feature intuitive touch controls on their outer surface.

Action	Left Earbud	Right Earbud
Play/Pause	Single tap	Single tap
Next Track	Double tap	Double tap
Previous Track	Triple tap	Triple tap
Volume Up	N/A	Long press
Volume Down	Long press	N/A
Answer/End Call	Single tap	Single tap
Reject Call	Long press	Long press

6.2 Active Noise Cancellation (ANC) and Transparency Mode

The Reflex Active PRO TWS earbuds feature both Active Noise Cancellation and Transparency Mode to adapt to your environment.

- **Switching Modes:** To cycle between ANC On, Transparency Mode, and ANC Off, perform a specific touch gesture (e.g., press and hold the touch area for 2 seconds on either earbud, or as specified in the quick start guide).
- **Active Noise Cancellation (ANC):** Reduces ambient noise, ideal for travel or noisy environments.
- **Transparency Mode:** Allows you to hear your surroundings clearly without removing the earbuds, useful for conversations or being aware of traffic.



ACTIVE NOISE CANCELLING

Image: A person sitting on a train, appearing relaxed with their eyes closed, demonstrating the use of Active Noise Cancellation to block out ambient sounds.

6.3 Voice Control

Activate your device's voice assistant (Siri, Google Assistant, etc.) directly from your earbuds.

- **Activation:** Typically, a specific touch gesture (e.g., a long press or triple tap on a specific earbud) will activate the voice assistant. Refer to the quick start guide for the exact gesture.
- **Commands:** Once activated, speak your command clearly into the earbud's microphone.

7. MAINTENANCE

Proper care will extend the life of your earbuds.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners or solvents. For ear tips, remove them and clean with mild soap and water, then dry thoroughly before reattaching.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them and

keep them charged. Store in a cool, dry place.

- **Avoid Extreme Conditions:** Do not expose the earbuds or case to extreme temperatures, humidity, or dust.

8. TROUBLESHOOTING

If you encounter any issues, try the following solutions:

Problem	Solution
Earbuds not pairing with device	Ensure Bluetooth is enabled on your device. Place earbuds back in case, close lid, then remove to re-enter pairing mode. Forget "Reflex Active PRO TWS" from your device's Bluetooth list and try pairing again.
Only one earbud working	Ensure both earbuds are charged. Place both earbuds back in the case, close the lid, wait a few seconds, then remove them. They should automatically connect to each other.
No sound or low volume	Check volume levels on both your device and the earbuds. Ensure earbuds are properly seated in your ears. Try cleaning the ear tips and speaker mesh.
Charging case not charging	Check the USB-C cable and power adapter. Ensure the cable is securely connected to both the case and the power source. Try a different cable or power source.
ANC/Transparency mode not working	Ensure earbuds are properly seated in your ears for optimal seal. Cycle through the modes using the touch controls.

9. SPECIFICATIONS

Feature	Detail
Model Number	REF-200PRO-BK
Bluetooth Version	5.2
Wireless Range	15-20 meters
Earbud Playtime	Up to 5.5 hours
Total Playtime (with case)	Up to 22 hours
Earbud Charge Time	Approx. 1 hour
Case Charge Time	Approx. 2 hours

Feature	Detail
Noise Cancellation	Active Noise Cancellation (ANC)
Transparency Mode	Yes
Control Type	Touch Control, Voice Control
Material	Rubber/silicone (and possibly plastic/soft-touch for case)
Weight	19 Grams
Water Resistance Level	Water-resistant
Battery Composition	Lithium
Included Components	Earbuds, Charging Case

10. WARRANTY AND SUPPORT



For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Reflex Active website. Keep your proof of purchase for any warranty claims.

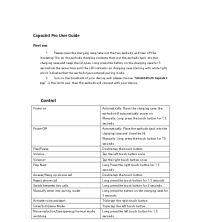 
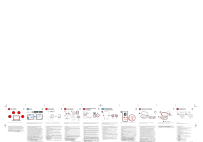 
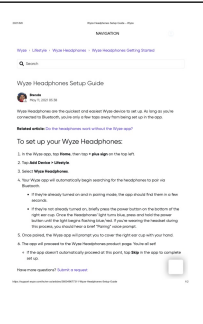 
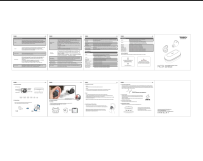 
Manufacturer: Peers Hardy

Country of Origin: China

© 2024 Reflex Active. All rights reserved.

Related Documents - REF-200PRO-BK

	<p>TOZO NC9 Plus ANC Wireless Earbuds User Guide</p> <p>Learn how to wear, pair, and control your TOZO NC9 Plus ANC Wireless Earbuds. This guide covers TWS auto pairing, earbud reset procedures, and detailed touch panel functions for active noise cancellation, transparency mode, music playback, call management, volume adjustment, and voice assistant activation.</p>
	<p>TOZO NC9 ANC Wireless Earbuds Quick Guide</p> <p>A comprehensive quick guide for the TOZO NC9 ANC Wireless Earbuds, covering product description, pairing instructions, wearing steps, earbud operations, noise control mode switching, and a detailed function list.</p>

	<p>SOUNDPEATS Capsule3 Pro Wireless Earbuds User Guide</p> <p>User guide for SOUNDPEATS Capsule3 Pro wireless earbuds, featuring Hi-Res Audio, LDAC, Hybrid Active Noise Cancellation, 6 mics for calls, Transparency Mode, and Game Mode. Covers setup, controls, reset, wearing, and FAQs.</p>
	<p>soundcore Space A40 Quick Start Guide</p> <p>Discover the soundcore Space A40 Quick Start Guide. Learn how to set up, wear, charge, pair, and control your Space A40 earbuds. Explore features like Adaptive Noise Cancellation (ANC), Transparency Mode, LDAC high-quality audio, multipoint connection, and manual pairing. Find essential information on product usage, troubleshooting, warranty, and customer support for models A3936, A3936L, and A3936R.</p>
	<p>Wyze Headphones Setup Guide: Step-by-Step Instructions</p> <p>A comprehensive guide to setting up your Wyze Headphones, covering Bluetooth pairing, app integration, and initial configuration for optimal use.</p>
	<p>TOZO NC9 Active Noise Cancellation Wireless Earbuds User Manual</p> <p>Learn how to use your TOZO NC9 Active Noise Cancellation wireless earbuds with this comprehensive user manual. Includes instructions for pairing, charging, touch controls, ANC, transparency mode, and troubleshooting.</p>

Reflex Active Słuchawki douszne PRO TWS z BT5.2 z aktywną redukcją szumów i funkcją przystępności bezprzewodnej przestrzeni. Czarne gumowe wykończenie lakieru z markowym logo na obudowie

Indeks: 407438 Produkt: Pares marki kol producenta: REF-200PRO-BK

Cena: **211,62 zł**

Opis

Reflex Active Słuchawki douszne PRO TWS z BT5.2 z aktywną redukcją szumów i funkcją przystępności bezprzewodnej przestrzeni. Czarne gumowe wykończenie lakieru z markowym logo na obudowie

Producent: Pares Hardy

Czarne gumowe słuchawki douszne Reflax Active TWS z aktywną redukcją szumów i funkcją przystępności bezprzewodnej przestrzeni. Długość 5-5 głośnicy obwodowej, zasięg 10-20 metrów oraz 3 kanały audio ze stacją zapamiętującą pamięć parady słuchania.

Wyposażenie: 1 zestaw słuchawek dousznych Bluetooth 5.2 z aktywną redukcją szumów. Sprężynowa opaska nadzorująca dopasowanie, odpowiednia dla rozmiarów głowy od 57 do 62 cm. Wyposażenie w komplecie:

Reflex Active Pro TWS to idealne rozwiązanie dla miłośników muzyki, którzy chcą sobie wygodnie dopasować dobię funkcjonalność. Słuchawki z elastyczną taśmą za paskiem i ładowarką w pudełku, zapewniając pełną swobodę w słuchaniu ulubionej muzyki.

- Głośniki z aktywną redukcją szumów, wersja Bluetooth 5.2

- Waga przesyłanego: 12 gramów

- Zasięg bezprzewodny: 10-20 metrów

- Funkcja przystępności bezprzewodnej przestrzeni, czarna gumowa laka i głośniki

- 5 głośniczek dworu oraz ładownia portowa, ładownice i akcesoria, zawierające grom

- 3 kanały audio ze stacji

• Instalacja techniczna Bezprzewodność

- zawiera komponenty: Słuchawki, Etui do ładownicy, Ładarka, instrukcja obsługi

- waga przesyłanego: 10 gram

- opis produktu: elektroniczny druk dostarczony

- zawartość: słuchawki, Oczyszczacz

- punkt dostawy: magazynu Słuchawki z aktywną redukcją szumów, wersja Bluetooth 5.2 4 głośniczek całościowo

Reflex Active Słuchawki douszne PRO TWS z BT5.2 aktywna redukcja szumów i funkcja przejrzystości bezpiecznej przestrzeni Czarne gumowe wykończenie lakieru markowym logo na obudowie Sklep internetowy stylem.pl reflex active sluchawki pro tws bt5 aktywna redukcja szumow funkcja przejrzystosci czarn upload files product czarne wykonczenie 607418 |||

lang:pl score:29 filesize: 107.66 K page count: 2 document date: 2025-01-28

