

Kenneth Cole REACTION KRWGP9006703

Kenneth Cole REACTION KRWGP9006703 Analogue-Digital Men's Watch Instruction Manual

Model: KRWGP9006703

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Kenneth Cole REACTION KRWGP9006703 Analogue-Digital Men's Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

2. PRODUCT OVERVIEW

The Kenneth Cole REACTION KRWGP9006703 is an Ana-Digital watch, combining traditional analog hands with a digital display for versatile timekeeping. Familiarize yourself with the watch components using the images below.



Figure 2.1: Front View of the Watch. This image displays the watch face, showing both the analog hands and the digital display. Key buttons labeled 'LIGHT', 'START', 'MODE', and 'RESET' are visible around the bezel, along with the crown on the right side.



Figure 2.2: Angled View of the Watch. This perspective highlights the watch's profile, the texture of the green silicone strap, and the robust black case. The various buttons and their positions are clearly visible.



Figure 2.3: Back View of the Watch. The stainless steel caseback is shown, engraved with product details such as 'STAINLESS STEEL CASEBACK', '3 ATM', 'JAPAN/CHINA MOVEMENT', and the model number 'GP90067'. Battery information 'SR626SW/CR2025' is also visible.

2.1 Watch Components

- **Analog Display:** Traditional hour, minute, and second hands.
- **Digital Display:** Shows time, date, and other digital functions.
- **Crown:** Used for setting analog time.
- **Buttons:**
 - **LIGHT:** Activates backlight for digital display.
 - **START:** Used for starting/stopping functions like stopwatch.
 - **MODE:** Cycles through digital display modes (e.g., time, date, alarm, stopwatch).
 - **RESET:** Used for resetting functions or adjusting settings.
- **Strap:** Green Silicone Strap for comfortable wear.
- **Case:** Durable IP Black Case.

3. SETUP INSTRUCTIONS

3.1 Setting Analog Time

1. Pull the crown out to the first position.
2. Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the desired time.
3. Once the analog time is set, push the crown back into its normal position.

3.2 Setting Digital Time and Date

The exact procedure may vary slightly depending on the specific module. Generally, follow these steps:

1. Press the **MODE** button repeatedly until you reach the Time Setting mode (often indicated by flashing digits).
2. Use the **RESET** button to select the digit or setting you wish to adjust (e.g., hours, minutes, year, month, day).
3. Use the **START** button to increase the selected value. Hold it down for faster adjustment.
4. Repeat steps 2 and 3 until all desired settings (hour, minute, AM/PM, year, month, day) are correctly set.
5. Press the **MODE** button again to exit the setting mode and return to normal time display.

4. OPERATING INSTRUCTIONS

4.1 Using Digital Modes

Press the **MODE** button to cycle through the various digital functions. Common modes include:

- **Time Display:** Shows current digital time (hours, minutes, seconds, AM/PM).
- **Date Display:** Shows current date (month, day, day of week).
- **Alarm:** Allows setting and activating an alarm.
- **Stopwatch:** Measures elapsed time.
- **Timer:** Counts down from a preset time.

4.2 Stopwatch Function

1. Press **MODE** until the stopwatch display appears.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

4.3 Alarm Function

1. Press **MODE** until the alarm setting display appears.
2. Use **RESET** to select the hour or minute digits.
3. Use **START** to adjust the selected value.
4. Press **MODE** to confirm the alarm time and exit.
5. To turn the alarm ON/OFF, typically press **START** while in the alarm display mode.

4.4 Backlight (LIGHT Button)

Press the **LIGHT** button to illuminate the digital display for a few seconds, allowing visibility in low-light conditions.

5. MAINTENANCE

5.1 Cleaning Your Watch

- Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt.
- For silicone straps, a damp cloth with mild soap can be used, then rinse thoroughly and dry completely.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

5.2 Water Resistance (3 ATM)

Your watch has a water resistance rating of 3 ATM (30 meters). This means it is suitable for everyday use and can withstand splashes or brief immersion in water, such as hand washing or rain. **It is not suitable for showering, bathing, swimming, snorkeling, or any water sports.**

- Do not operate any buttons or the crown while the watch is wet or submerged.
- Ensure the crown is fully pushed in after setting the time to maintain water resistance.

5.3 Battery Information

The watch is powered by 1 Lithium Ion battery (included). The caseback indicates battery types SR626SW (for analog movement) and CR2025 (for digital module). When the display becomes dim or the watch stops functioning, it may be time for a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and water resistance.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

Problem	Possible Cause	Solution
Analog hands not moving	Dead battery for analog movement, or crown is pulled out.	Push the crown in. If still not working, replace battery (SR626SW).
Digital display is blank or dim	Dead battery for digital module.	Replace battery (CR2025).
Incorrect time/date displayed	Time/date not set correctly, or accidental adjustment.	Refer to Section 3.1 and 3.2 to reset time and date.
Buttons not responding	Watch may be in a locked mode, or low battery.	Try pressing MODE to exit current function. If issue persists, consider battery replacement.

If the problem persists after attempting these solutions, please contact customer support or a qualified watch repair service.

7. SPECIFICATIONS

Feature	Detail
Model Number	KRWGP9006703
Function	Ana-Digital
Case Material	IP Black Case
Case Diameter	43.5 Millimeters

Feature	Detail
Dial Color	Green
Glass Type	Mineral
Strap Material	Green Silicone
Water Resistance	3 ATM (30 meters)
Watch Movement Type	Quartz
Batteries	1 Lithium Ion battery (included) - SR626SW for analog, CR2025 for digital
Product Dimensions (LxWxH)	10 x 2 x 10 Centimeters
Item Weight	118 Grams
Manufacturer	ILG Asia

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Kenneth Cole REACTION KRWGP9006703 watch comes with a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, warranty claims, or service inquiries, please contact the manufacturer or authorized service center. Refer to your purchase documentation for specific contact details.

Manufacturer: ILG ASIA LIMITED

Importer/Packer: ILG INDIA FASHION LLP

Contact information for ILG INDIA FASHION LLP: Pinnacle Business Park, F1-4, First floor, next to Ahura Center, Mahakali caves Road, Andheri east, Mumbai - 400093.