



[Manuals.plus](#) /

> [SanJie](#) /

> SanJie Wireless Doorbell Kit Instruction Manual (1 Push Button + 2 Receiver)

SanJie 1Button+2Receiver US

SanJie Wireless Doorbell Kit Instruction Manual

Model: 1 Push Button + 2 Receiver

PRODUCT OVERVIEW

This manual provides instructions for the SanJie Wireless Doorbell Kit, designed for home use, including features beneficial for the hearing impaired. The kit includes one push button and two portable receivers, offering multiple alert modes, adjustable volume, and a wide operating range.

Loud Enough & Vibration & Colorful Flash

Catching your ears and eyes



Image: The SanJie Wireless Doorbell Kit, showing one push button and two receivers.

PRODUCT FEATURES

- **Upgraded Ringtones:** Features 20 selectable ringtones.
- **Low Battery Reminder:** Informs you about the doorbell's power status.
- **Battery Operated & Portable:** Receivers use 3 AAA batteries (included) and have a back clip for portability.
- **Hearing Impaired Support:** Includes colorful flashing LED lights and a vibration function for visual and tactile alerts.
- **Multiple Working Modes:** Offers 4 modes (Ringtone+Vibration, Ringtone+Flash, Ringtone+Vibration+Flash, Ringtone only).
- **Adjustable Volume:** 5 levels of volume adjustment from 0-110dB, including a mute mode.
- **Extended Range:** Up to 1000 ft (300m) wireless receiving range. Additional receivers can extend coverage.
- **Easy Installation:** Push button can be installed with double-sided tape or screws.
- **Durable Push Button:** IP55 waterproof rating, suitable for temperatures from -4°F to 140°F, with low power consumption for long lifespan.

SETUP INSTRUCTIONS

1. Powering the Receivers

Each receiver requires 3 AAA batteries. Open the battery compartment on the back of each receiver and insert the batteries, ensuring correct polarity. The receivers are pre-paired from the factory.



Image: Rear view of the receiver showing the battery compartment for 3 AAA batteries.

2. Installing the Push Button

The push button can be installed using either the provided double-sided adhesive tape or screws. Choose a suitable location near your door. Ensure the surface is clean and dry before applying adhesive.



IP55
WATERPROOF & HEAT RESISTANCE

 ↔ 

-4°F - 140°F
Operating Temperature



3-YEAR
Battery Lifespan

Image: A white wireless doorbell push button mounted on a wall next to a door.

The push button is IP55 waterproof and designed to withstand various weather conditions, operating effectively between -4°F and 140°F.

3. Pairing Additional Transmitters (if needed)

If you need to pair additional push buttons or re-pair existing ones, follow these steps:

1. On the receiver, press the music button to select your desired ringtone.
2. Press and hold the volume button on the receiver until the LED light flashes and emits a "ding" sound to enter pairing mode.
3. Press the push button to send a signal. The receiver will make a "ding-ding" sound and flash, indicating successful pairing.
4. Press the push button again to confirm the receiver sounds.



Image: Step-by-step visual guide for pairing the doorbell push button with the receiver.

OPERATING INSTRUCTIONS

1. Turning On/Off the Receiver

Press the large central button on the receiver to turn it on or off.

Your browser does not support the video tag.

Video: Demonstrates how to turn the receiver on and off by pressing the central button.

2. Changing Working Modes

The receiver has a side button to cycle through 4 alert modes:

- **Mode A:** Ringtone + Vibration
- **Mode B:** Ringtone + Flash
- **Mode C:** Ringtone + Vibration + Flash
- **Mode D:** Ringtone only

Your browser does not support the video tag.

Video: Shows how to cycle through the 4 alert modes (Ringtone+Vibration, Ringtone+Flash, Ringtone+Vibration+Flash, Ringtone only) using the side button.

3. Adjusting Volume

Use the volume buttons on the side of the receiver to adjust the sound level. There are 5 volume levels,

ranging from 0dB (mute) to 110dB.

Your browser does not support the video tag.

Video: Demonstrates adjusting the volume levels on the receiver.

4. Changing Ringtones

Press the music button on the receiver to cycle through the 20 available ringtones. You can set different ringtones for different push buttons if you have multiple transmitters.

Your browser does not support the video tag.

Video: Illustrates how to change the ringtone on the receiver.

MAINTENANCE

1. Battery Replacement

The receivers are powered by 3 AAA batteries. When the low battery reminder activates, replace the batteries promptly to ensure continuous operation. The push button uses a 12V 23A battery with an estimated 3-year lifespan.



Image: Diagram indicating the 3-year battery lifespan for the push button.

2. Cleaning

Wipe the doorbell units with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------------|--|---|
| Receiver does not ring/flash. | Low or dead batteries in receiver or push button. Receiver is off. Out of range. Not paired correctly. | Replace batteries in both units. Ensure receiver is turned on. Move receiver closer to the push button. Re-pair the units following the setup instructions. |
| Short receiving range. | Obstructions (thick walls, metal structures). Interference from other wireless devices. | Relocate receiver or push button to minimize obstructions. Avoid placing near large metal objects or other strong wireless signals. Consider adding more SanJie receivers to extend coverage. |
| Ringtone changes unexpectedly. | Accidental press of the music button. | Press the music button again to select your preferred ringtone. |

SPECIFICATIONS

- **Manufacturer:** SanJie
- **Model Number:** 1Button+2Receiver US
- **Item Weight:** 11.3 ounces
- **Product Dimensions:** 3.54 x 2.56 x 0.98 inches
- **Receiver Batteries:** 3 AAA batteries (included)
- **Push Button Battery:** 1* 12V 23A battery (included)
- **Color:** White
- **Material:** ABS
- **Installation Method:** Self-Adhesive
- **Waterproof Rating (Push Button):** IP55
- **Operating Temperature (Push Button):** -4°F to 140°F
- **Wireless Range:** Up to 1000 ft / 300m
- **Ringtones:** 20 options
- **Volume Levels:** 5 (0-110dB)
- **Alert Modes:** Ringtone+Vibration, Ringtone+Flash, Ringtone+Vibration+Flash, Ringtone

WARRANTY AND SUPPORT

SanJie offers a 100% guarantee and service. If you have any questions or issues regarding the product, please contact us anytime via Amazon mail for a satisfactory solution.

For additional support or to explore other SanJie products, visit the official SanJie Store on Amazon:

[SanJie Store](#).