

[Manuals.plus](#) /

› [COREEDGE](#) /

› COREEDGE Heated Vest for Women: Instruction Manual

COREEDGE B0BCP2TMRV

COREEDGE Heated Vest for Women with Detachable Heated Hood

Model: B0BCP2TMRV

INTRODUCTION

The COREEDGE Heated Vest for Women is designed to provide consistent warmth in cold weather conditions. Featuring advanced carbon fiber heating elements, a smart 5-in-1 control switch, and a detachable heated hood, this vest offers customizable comfort for various outdoor activities or daily wear. This manual provides essential information for the safe and effective use of your heated vest.



Figure 1: COREEDGE Heated Vest for Women

PACKAGE CONTENTS

- COREEDGE Heated Vest
- Detachable Heated Hood
- 14400 mAh Rechargeable Battery Pack
- USB/Type-C Charging Cable
- Mesh Laundry Bag
- User Manual



Figure 2: Included 14400 mAh Rechargeable Battery Pack and Charging Cable

PRODUCT OVERVIEW

The COREEDGE Heated Vest features 8 heating zones strategically placed across the neck, back, abdomen, waist, shoulders, and ears (via the detachable hood). The integrated 5-in-1 smart controller allows for independent control of heating areas and temperature levels.

5-in-1 Switch Control

3 Independent Heating Area



(Blue)Low
120°F
10Hours



(White)Med
135°F
8Hours



(Red)High
150°F
6Hours

Figure 3: Heating Zones and Control Switch Overview



SETUP

1. Charging the Battery

1. Connect the provided USB/Type-C charging cable to the 14400 mAh battery pack.
2. Plug the other end of the cable into a compatible USB power adapter (not included) or a power source.
3. The LED display on the battery pack will show the charging progress. Charge until it reaches 100%.

2. Connecting the Battery to the Vest

1. Locate the dedicated battery pocket inside the vest.
2. Connect the USB cable from the vest to the USB/Type-C port on the charged battery pack.
3. Place the battery pack securely into the pocket and zip it closed.

Video 1: Demonstrates connecting the battery pack to the vest and operating the control switch.

OPERATING INSTRUCTIONS

1. Powering On/Off and Pre-Heat Mode

1. Press and hold the middle button on the 5-in-1 control switch (located on the chest) for 2 seconds to turn on all heating zones. The indicator light will blink red, signifying pre-heat mode (high temperature for approximately 5 minutes).
2. To turn off all heating zones, press and hold the middle button for 2 seconds again.

2. Adjusting Heat Levels and Zone Control

Each heating zone and heat mode can be controlled separately using the independent control switch buttons:

- **Top Button:** Controls the indicator light (turn on/off).
- **Left Button:** Controls the hood heating zone.
- **Right Button:** Controls the chest and shoulder heating zones.
- **Bottom Button:** Controls the back heating area.

To adjust the heat level for a specific zone, press the corresponding button repeatedly to cycle through the settings:

- **Red Light:** High (150°F)
- **White Light:** Medium (135°F)
- **Blue Light:** Low (120°F)

Adjusting the heat level for any zone will cancel the pre-heat mode.



Figure 5: Detailed View of Control Switch and Features

Video 2: Detailed demonstration of the heated vest's features and operation.

3. Detachable Heated Hood

The hood can be attached or detached using the snaps and zipper around the collar. Ensure the wireless connection for hat heating is properly fastened if you wish to use the heated hood feature.

MAINTENANCE

To maintain the quality and extend the service life of your electric heated vest, please follow these instructions:

- **Before Washing:** Always remove the battery pack from the vest.
- **Washing:** Hand wash or place the electric heated vest into the provided mesh laundry bag for machine washing. Use cold water and a gentle cycle.
- **Drying:** AVOID dry-cleaning. DO NOT put the vest into a dryer. Air dry only.
- **Ironing:** DO NOT iron the vest.
- **Bleaching:** DO NOT bleach the vest.

TROUBLESHOOTING

- **Vest not heating:** Ensure the battery pack is fully charged and properly connected to the vest's USB cable. Check if the control switch is powered on and the desired heating zones are activated.
- **Indicator light not working:** Press the top button on the 5-in-1 control switch to turn the indicator light on or off. This does not affect the heating function.
- **Battery not charging:** Verify that the charging cable is securely connected to both the battery and the power source. Ensure the power source is active.
- **Hood not heating:** Confirm the detachable hood is correctly attached and its wireless connection is fastened. Ensure the hood heating zone is activated via the control switch.

SPECIFICATIONS

- **Item Weight:** 1 Pound
- **Department:** Women
- **Fabric Type:** 100% Nylon
- **Care Instructions:** Hand Wash Only (remove battery)
- **Battery Capacity:** 14400 mAh
- **Heat Levels & Duration:**
 - Low (120°F): Up to 9.5 hours
 - Medium (135°F): Up to 6 hours
 - High (150°F): Up to 4.5 hours
- **Certifications:** CE/FCC/PSE/RoHS (for battery)

Size Chart (US Regular)

Brand Size	Bust (in)	Waist (in)	Hip (in)	Length (in)
S	39.4	35.4	40.9	24.8
M	42.5	38.6	44.1	25.6
L	45.7	41.7	47.2	26.4
XL	48.8	44.9	50.4	27.2
2XL	52	48	53.5	27.9

Figure 6: COREEDGE Heated Vest Size Chart (Allow 0.5 inch deviations due to manual measurement)

WARRANTY & SUPPORT

COREEDGE provides a one-year warranty for this product. For any support inquiries or warranty claims, please refer to the contact information provided in your product packaging or visit the official COREEDGE website.

