

[Manuals.plus](#) /

› [TopWit](#) /

› Topwit Hot Pot Electric Instruction Manual

TopWit 10B-1

Topwit Hot Pot Electric Instruction Manual

Model: 10B-1

Brand: TopWit

1. INTRODUCTION

The Topwit Hot Pot Electric is a versatile and portable cooking appliance designed for convenience and efficiency. Ideal for small spaces, dorm rooms, offices, or travel, it allows you to prepare a variety of meals with ease.

Key Features:

- Dual Power Setting (250W and 600W) for varied cooking needs.
- 1.5L Ideal Capacity, suitable for 1-2 people.
- Healthy Non-Stick Coating for easy cooking and cleaning.
- Portable and Convenient design for small spaces and travel.
- Dual Safety Protection: Over-heating and Boil Dry Protection.



Figure 1: Topwit Hot Pot Electric, showcasing its compact design and capacity.

2. SAFETY PRECAUTIONS

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- Do not immerse the main unit (pot with electrical components) in water or other liquids.
- Ensure the power cord is fully inserted and securely connected before use.
- Always use the appliance on a stable, flat, and heat-resistant surface.
- Keep out of reach of children and pets.
- Do not touch hot surfaces. Use the cool-touch handle.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- The appliance is equipped with Over-Heating Protection and Boil Dry Protection to automatically shut off if it overheats or runs out of water.



1.5L Electric cooker

Figure 2: Illustration of the dual safety protection mechanisms.


3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Topwit Hot Pot Electric.

- Main Pot Unit with Non-Stick Interior
- Cool-Touch Handle with Integrated Power Control Dial
- Visible Glass Cover
- Detachable Power Cord
- Bottom Heat Dissipation Vents

ADJUSTABLE POWER CONTROL

Suitable for various cooking methods

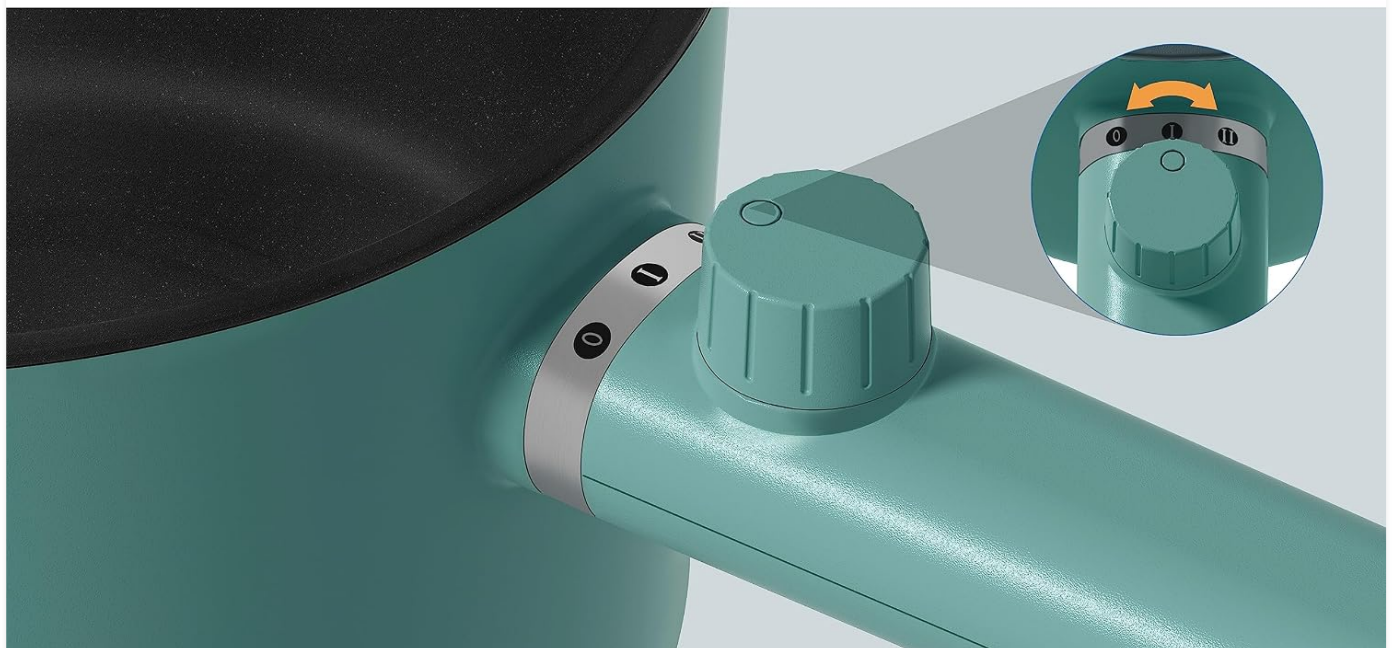

LOW (250W)



Pancake



Spaghetti



Egg



HIGH (600W)



Steak



Shabu Shabu



Soup

Figure 3: Exploded view of the Topwit Hot Pot Electric components.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Initial Cleaning:** Before first use, wipe the non-stick interior with a soft, damp cloth. Clean the glass lid with warm soapy water and rinse thoroughly. Ensure all parts are completely dry before assembly and use. Do not immerse the main pot unit in water.
3. **Connect Power Cord:** Insert the detachable power cord firmly into the port at the base of the handle. Ensure it is fully inserted for proper operation.
4. **Placement:** Place the hot pot on a stable, flat, and heat-resistant surface, away from flammable materials.

01

**VISIBLE GLASS
COVER**



02

**BOTTOM HEAT
DISSIPATION**



03

**COOL TOUCH
HANDLE**



Figure 4: Connecting the detachable power cord.

5. OPERATING INSTRUCTIONS

Power Settings:

The hot pot features a dual power setting controlled by a dial on the handle:

- **Setting I (250W):** Low power for gentle cooking, such as simmering sauces, cooking oatmeal, spaghetti, or eggs.
- **Setting II (600W):** High power for rapid heating, boiling water, cooking ramen, hot pot, steak, or sautéing.

General Usage:

1. Add desired ingredients and liquid (if required) to the non-stick pot.

2. Place the glass lid on top.
3. Plug the power cord into a standard electrical outlet.
4. Turn the power control dial to your desired setting (I or II). The indicator light will illuminate.
5. Monitor your cooking through the visible glass lid.
6. Once cooking is complete, turn the dial to "0" (Off) and unplug the appliance.

Cooking Examples:

- **Ramen/Pasta:** Add water and noodles. Use Setting II for quick boiling. Once boiling, you may reduce to Setting I to simmer until cooked.
- **Steak/Sauté:** Add a small amount of oil to the non-stick surface. Use Setting II to heat the pan, then add ingredients.
- **Porridge/Oatmeal:** Add ingredients and liquid. Use Setting I for a slow, consistent cook to prevent burning.



Figure 5: Dual Power Settings for various cooking methods.

MULTI-USE ELECTRIC COOKER

Suitable for outdoor cooking



Figure 6: The 1.5L capacity is ideal for 1-2 people.

Official Product Video:

Your browser does not support the video tag.

Video 1: Official demonstration of the Topwit 1.5L Electric Hot Pot, highlighting its portable non-stick frying pan features and various uses.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your hot pot.

- **Always Unplug:** Before cleaning, ensure the appliance is unplugged and has cooled down completely.
- **Non-Stick Coating:** The food-grade non-stick coating prevents food from sticking and makes cleaning easy. Use a soft sponge or cloth with mild dish soap and warm water. Avoid abrasive cleaners, scouring pads, or metal utensils.

that can damage the non-stick surface.

- **Exterior:** Wipe the exterior of the pot and handle with a damp cloth. Do not immerse the main unit in water.
- **Glass Lid:** The glass lid can be washed with warm soapy water or placed in the dishwasher.
- **Drying:** Ensure all parts are thoroughly dry before storing or next use.



Figure 7: Easy cleaning of the non-stick surface.

7. TROUBLESHOOTING

If you encounter any issues with your Topwit Hot Pot Electric, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Power cord not fully inserted or unplugged. No power from outlet.	Ensure the power cord is securely plugged into both the appliance and the wall outlet. Check if the outlet is working by plugging in another device.
Food is burning or sticking.	Incorrect power setting. Insufficient liquid or oil.	Adjust the power setting to a lower level (Setting I) for simmering. Add more liquid or a small amount of oil as needed.
Appliance suddenly stops heating.	Over-heating protection or boil dry protection activated.	Unplug the appliance and allow it to cool down for at least 15-20 minutes. If boil dry protection was activated, add more liquid before restarting.
Water boils over.	Too much water or ingredients.	Reduce the amount of water or ingredients. Ensure the lid is properly placed.

If the problem persists after trying these solutions, please contact TopWit customer support.

8. SPECIFICATIONS

Brand:	TopWit
Model Number:	10B-1
Capacity:	1.5 Liters
Material:	Metal with Non-Stick Finish
Color:	Green
Product Dimensions:	6.7"D x 12.4"W x 6.6"H
Wattage:	600 watts (Dual Power: 250W/600W)
Voltage:	110 Volts
Item Weight:	2.29 pounds
Country of Origin:	China

9. WARRANTY AND SUPPORT

TopWit offers a 90-day warranty for this product, as indicated by customer reviews. For any product-related inquiries, technical support, or warranty claims, please visit the official TopWit Store on Amazon or contact their customer service

directly.

[Visit the TopWit Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BCNXHHRS>

More documents and user manuals: <https://manuals.plus/>