

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Lexibook](#) /

> [Lexibook Miraculous Ladybug Alarm Clock with Nightlight - Model RL800MI Instruction Manual](#)

Lexibook RL800MI

Lexibook Miraculous Ladybug Alarm Clock with Nightlight - Model RL800MI Instruction Manual

Model: RL800MI | Brand: Lexibook

INTRODUCTION

This manual provides comprehensive instructions for the Lexibook Miraculous Ladybug Alarm Clock with Nightlight, model RL800MI. This device features a digital LCD display, a luminous Ladybug character that acts as a nightlight, an alarm with adjustable volume and sound effects, and a snooze function. Please read all instructions carefully before use and keep this manual for future reference.



Image: Front view of the Lexibook Miraculous Ladybug Alarm Clock, showing the Ladybug figure on top and the digital display.

SAFETY WARNINGS

- This product is not suitable for children under 2 years of age.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the product is not used for an extended period.
- Dispose of used batteries responsibly.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- 1 x Lexibook Miraculous Ladybug Alarm Clock (Model RL800MI)

- 1 x Instruction Manual



Image: The Lexibook Miraculous Ladybug Alarm Clock shown in its original retail packaging.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the alarm clock.
2. Open the battery compartment cover using a small screwdriver (not included).

3. Insert 3 new AA/LR6 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

The digital display should now light up, indicating the device is powered on. A low battery indicator will appear on the screen when batteries need to be replaced.



Image: Rear view of the alarm clock, highlighting the location of the battery compartment and control buttons.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **TIME SET** button (often marked with a clock icon) located on the back or bottom of the unit until the hour digits flash.
2. Use the **+** and **-** buttons to adjust the hour. Press the **TIME SET** button again to confirm the hour and move to minutes.

3. Use the **+** and **-** buttons to adjust the minutes. Press the **TIME SET** button one more time to confirm and exit time setting mode.

Setting the Alarm

1. Press and hold the **ALARM SET** button (often marked with a bell icon) until the alarm hour digits flash.
2. Use the **+** and **-** buttons to adjust the alarm hour. Press the **ALARM SET** button again to confirm the hour and move to minutes.
3. Use the **+** and **-** buttons to adjust the alarm minutes. Press the **ALARM SET** button one more time to confirm and exit alarm setting mode.
4. To activate/deactivate the alarm, press the **ALARM SET** button briefly. An alarm icon will appear/disappear on the display.

Adjusting Alarm Volume and Ringtones

While in alarm setting mode (after setting the time), you may be able to cycle through ringtone options and adjust volume using the **+** and **-** buttons or a dedicated button (refer to specific button labels on your device).

Nightlight Function

The Ladybug figure on top of the alarm clock functions as a nightlight. Press down on the Ladybug figure to activate the nightlight. It will illuminate for a few minutes before automatically turning off.



Image: A child observing the illuminated Ladybug nightlight in a dimly lit room.

Sound Effects

Press the dedicated **SOUND EFFECT** button (often marked with a musical note or character icon) to play various sound effects inspired by the Miraculous Ladybug universe.

Snooze Function

When the alarm sounds, press down on the Ladybug figure or the top of the alarm clock to activate the snooze function. The

alarm will temporarily stop and sound again after a few minutes (typically 5-10 minutes).

To turn off the alarm completely, press the **ALARM OFF** button (if available) or the **ALARM SET** button briefly.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the alarm clock. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the low battery indicator appears or when the display becomes dim. Always replace all three batteries at once.
- **Storage:** If the alarm clock will not be used for an extended period, remove the batteries to prevent leakage and store the device in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new AA/LR6 batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm is set and activated (alarm icon visible on display). Check alarm volume settings.
Nightlight does not turn on.	Batteries are low or the Ladybug figure was not pressed firmly.	Replace batteries. Press the Ladybug figure firmly.
Sound effects do not play.	Batteries are low or the sound effect button was not pressed correctly.	Replace batteries. Ensure the sound effect button is pressed firmly.

SPECIFICATIONS

Model Number: RL800MI

Brand: Lexibook

Product Dimensions: 13.5 cm (L) x 18.2 cm (H)

Weight: 201 grams

Power Source: 3 x AA/LR6 batteries (not included)

Display Type: Digital LCD with temporary backlight

Special Features: Alarm, Nightlight, Sound Effects, Snooze

Color: Red

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: A 30-second product rotation showcasing the Lexibook Miraculous Ladybug Alarm Clock from various angles. This video provides a visual overview of the product's design and features.

WARRANTY

This Lexibook product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging. You may also visit the official Lexibook website or contact their customer support for more information.

SUPPORT

For technical assistance, troubleshooting, or any questions regarding your Lexibook Miraculous Ladybug Alarm Clock, please contact Lexibook customer support. You can find contact information and frequently asked questions on the official Lexibook website:

www.lexibook.com

© 2023 Lexibook. All rights reserved.