

## Easytry Easytry14361

# Easytry Replacement Remote Control User Manual

Model: Easytry14361

## INTRODUCTION

This manual provides instructions for the Easytry replacement remote control, designed for use with various car stereo radio MP5 players. This infrared (IR) remote control offers basic functionality for compatible units. Please ensure your device model is listed as compatible before use.

## SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Keep the remote control away from water and other liquids.
- Do not attempt to disassemble or modify the remote control.
- Dispose of used batteries according to local regulations.

## PACKAGE CONTENTS

The package includes:

- 1 x Easytry Replacement Remote Control (Model: Easytry14361)
- 1 x Mounting Clip (for certain car stereo models)

*Note: Batteries are not included and must be purchased separately.*

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover open in the direction indicated by the arrow or notch.
3. Insert two (2) CR2 batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the

compartment.

4. Close the battery cover securely until it clicks into place.



Figure 1: Back of the remote control with battery compartment. The image shows the rear of the black remote control, with a small, black plastic mounting clip positioned to its left. The battery compartment is visible on the remote's back, along with an arrow indicating the direction to slide for battery access.

Initial Use

This remote control is an infrared (IR) device and does not require pairing. Once batteries are installed, point the remote directly at the IR receiver of your compatible car stereo radio MP5 player and press the desired function button.

OPERATING INSTRUCTIONS

The remote control features 10 buttons for various functions. Refer to the diagram below for button identification and their general functions.



Figure 2: Front view of the remote control with button layout. The image displays the black remote control with a grid of white circular and rectangular buttons. Key buttons include Power (red), Mode, Menu, Volume Up/Down, Track Skip, Play/Pause, and a numeric keypad (0-9).

Remote Control Button Functions

| Button      | Function                                                        |
|-------------|-----------------------------------------------------------------|
| Power (Red) | Turns the car stereo unit On/Off.                               |
| MODE        | Switches between input modes (e.g., Radio, USB, SD, Bluetooth). |

| Button               | Function                                                                          |
|----------------------|-----------------------------------------------------------------------------------|
| MENU                 | Accesses the main menu or settings.                                               |
| VOL+ / VOL-          | Adjusts the volume level up or down.                                              |
| SEL                  | Selects an option or confirms a setting.                                          |
| ENT / ►►             | Enter / Play/Pause.                                                               |
| ◀◀ / ►►              | Previous Track / Next Track.                                                      |
| USB/SD               | Switches to USB or SD card input.                                                 |
| BAND/AMS             | Changes radio bands or performs auto memory scan.                                 |
| Numeric Keypad (0-9) | Direct input for radio frequencies, track numbers, or other numerical selections. |
| Call Answer (Green)  | Answers an incoming call (if supported by the car stereo).                        |
| Call End (Red)       | Ends a call or rejects an incoming call (if supported by the car stereo).         |

*Note: Specific button functions may vary slightly depending on the car stereo model. This remote is a replacement and may not support all original functions of your unit.*

## MAINTENANCE

### Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface or internal components.

### Battery Replacement

If the remote control becomes unresponsive or its range decreases, the batteries may need to be replaced. Follow the battery installation steps outlined in the 'Setup' section.

## TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with new CR2 batteries.
  - Ensure there are no obstructions between the remote control and the car stereo's IR receiver.
  - Make sure you are within the effective operating range (typically 5-7 meters) and pointing directly at the unit.
- **Some functions not working:**
  - This replacement remote may not support all functions of your original unit. Refer to your car stereo's manual for specific remote compatibility.
  - Verify that your car stereo model is listed as compatible with this remote control.

## SPECIFICATIONS

- **Brand:** Easytry
- **Model Number:** Easytry14361

- **Connectivity Technology:** Infrared (IR)
- **Number of Buttons:** 10
- **Compatible Devices:** Stereo System (specifically various car stereo radio MP5 players)
- **Battery Type:** 2 x CR2 batteries (not included)
- **Special Feature:** IR remote, cannot be programmed. Designed as a replacement.

## WARRANTY

This product comes with a 90-day warranty. For any doubts or issues, please contact the seller directly for assistance.

## SUPPORT

For further assistance or troubleshooting not covered in this manual, please refer to the user manual of your specific car stereo radio MP5 player or contact the product seller.

© 2023 Easytry. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Submit question