

RM-C3127, RM-C3212, LT-48N785A, LT-24N370A, LT-32N370A, LT-40N551A, LT-50N551A, LT-32N350A, LT-48N530A, LT-65N550A, LT-5

JVC Smart TV Replacement Remote Control Instruction Manual

For Models: RM-C3127, RM-C3212, LT-48N785A, LT-24N370A, LT-32N370A, LT-40N551A, LT-50N551A, LT-32N350A, LT-48N530A, LT-65N550A, LT-50N550A, LT-39N370A

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your replacement remote control for various JVC Smart TV models. Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control.

1. SETUP

1.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 1.1: Back of the remote control with the battery cover open, illustrating the correct orientation for AAA battery insertion.

Note: Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

2. OPERATING THE REMOTE CONTROL

This section provides an overview of the remote control's buttons and their primary functions. The remote control is designed to be an infrared (IR) replacement and does not require programming for compatible JVC Smart TV models.



Image 2.1: Front view of the remote control, displaying the layout of all functional buttons.

2.1 Basic Functions

- **POWER (Red Button):** Turns the television on or off.
- **P.MODE:** Cycles through picture modes (e.g., Standard, Dynamic, Movie).
- **S.MODE:** Cycles through sound modes (e.g., Standard, Music, Movie).
- **SLEEP:** Sets a timer for the television to automatically turn off.
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **SOURCE:** Selects the input source (e.g., HDMI 1, AV, TV).
- **Navigation Buttons (Up, Down, Left, Right Arrows):** Navigate through menus and options.
- **OK:** Confirms selections in menus.
- **MENU:** Opens the main menu of the television.
- **EXIT:** Closes the current menu or on-screen display.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **DISPLAY:** Shows current channel information or other on-screen details.
- **ASPECT:** Changes the screen aspect ratio.

2.2 Advanced Functions

- **Color Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the current menu or application on your Smart TV. Refer to your TV's on-screen prompts.
- **TEXT:** Activates or deactivates Teletext (if supported by your TV and broadcast).
- **SIZE:** Adjusts Teletext display size.

- **HOLD:** Holds the current Teletext page.
- **Media Playback Controls (REW, PLAY, FWD, PREV, NEXT, STOP, PAUSE):** Controls playback of media content (e.g., from USB, streaming apps).
- **LANG:** Changes audio language or subtitle language.
- **EPG:** Opens the Electronic Program Guide.
- **REC:** Initiates recording (if your TV supports PVR functionality and a recording device is connected).
- **TV/RADIO:** Switches between TV and Radio modes.
- **FAV:** Accesses favorite channels list.
- **T.SHIFT:** Activates Time Shift function (if supported).
- **REC.M:** Accesses recorded media.

3. MAINTENANCE

3.1 Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is time to replace the batteries. Follow the battery installation steps outlined in Section 1.1.

3.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners or immerse the remote control in water.

3.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

4. TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Ensure the batteries are correctly installed with the proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Limited Functionality:**
 - This is a replacement remote control. Some advanced or specific functions of your original TV remote may not be supported.
 - Verify that your TV model is listed as compatible in the introduction of this manual.
- **Buttons Are Sticky or Unresponsive:**
 - Clean the remote control as described in Section 3.2.
 - If cleaning does not resolve the issue, the remote control may be damaged and require replacement.

5. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Compatibility	JVC Smart TV models including RM-C3127, RM-C3212, LT-48N785A, LT-24N370A, LT-32N370A, LT-40N551A, LT-50N551A, LT-32N350A, LT-48N530A, LT-65N550A, LT-50N550A, LT-39N370A
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Replacement remote, no programming required

6. IMPORTANT NOTES & SUPPORT

This remote control is a replacement unit. While it is designed to be compatible with the listed JVC Smart TV models, it may not offer all the exact functions or features of your original remote control. No additional instruction manual is provided with the product packaging.

For specific TV functions or advanced settings not covered by this replacement remote, please refer to the original user manual for your JVC Smart TV model.

Warranty Information: No specific warranty information is provided for this replacement remote control. Please refer to the retailer's return policy for details on returns or exchanges.