

Manuals.plus /

› Wesfuner /

› Wesfuner Foam Airplane Launcher Toys Instruction Manual

Wesfuner T918-1

Wesfuner 3 Pack Foam Airplane Launcher Toys

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Wesfuner 3 Pack Foam Airplane Launcher Toys. This manual provides essential information for the safe and effective use of your new toy. Designed for children aged 3 to 12 years, these foam airplanes offer an engaging outdoor play experience, promoting coordination and critical thinking skills.

The set includes durable, lightweight foam airplanes with two flight modes and LED lights for night play, along with an improved launcher for enhanced performance.

What's in the Box

- 1 x Plastic Launcher
- 3 x Foam Airplanes (Blue, Orange, Green)
- 3 x Beauty Stickers
- 1 x Instruction on Airplane Installation and Launcher Installation

Setup

Assembly of the foam airplanes is straightforward. Follow these steps:

1. **Insert the Wing:** Gently slide the main wing into the designated slot on the airplane body. Ensure it is securely seated.

2. **Attach the Tail:** Insert the tail fin into its slot at the rear of the airplane body.
3. **Apply Stickers:** Personalize your airplanes by applying the provided beauty stickers to the wings and body as desired.
4. **Activate LED Lights:** Each airplane is equipped with LED lights. Locate the small button or tab on the underside of the airplane's nose to activate the lights for night play. Remove any battery protector tabs if present.

For a visual guide on assembly, please refer to the video below:

Video: Wesfuner Airplane Launcher Toys - Demonstrates assembly and basic operation.

Easy To Install & Launch



1 Insert The Wing



2 Paste The Stickers



3 Load The Launcher



4 Launch The Airplane

Image: Easy to Install & Launch - Visual steps for inserting the wing, applying stickers, loading the launcher, and launching the airplane.



Image: Assembly Steps Diagram - Detailed visual instructions for inserting the wing, loading the launcher, and launching the airplane.

Operating Instructions

The Wesfuner Foam Airplane Launcher is designed for easy and effective launching. Follow these steps for optimal flight:

1. **Load the Airplane:** Slide the foam airplane onto the rail of the launcher until it clicks into place. Ensure the airplane is facing forward.
2. **Pull Back:** Pull the red handle at the rear of the launcher back until it locks, arming the launching mechanism.
3. **Aim and Launch:** Aim the launcher towards an open area, preferably outdoors. For best flight distance (33-49 ft), aim at an angle between 45-60 degrees. Press the trigger to release the airplane.

The airplanes feature two flight modes:

- **Horizontal Mode:** For straight, long-distance flights.
- **Rotate Mode:** For circular or acrobatic flights. Adjust the tail fin to switch between modes.

Flying In The Sky

Tips:45-60°
Launch Can Fly Farther

10-15M



33-49ft
Fight Away From Launcher

Image: Flying In The Sky - Demonstrates optimal launch angle for maximum flight distance.

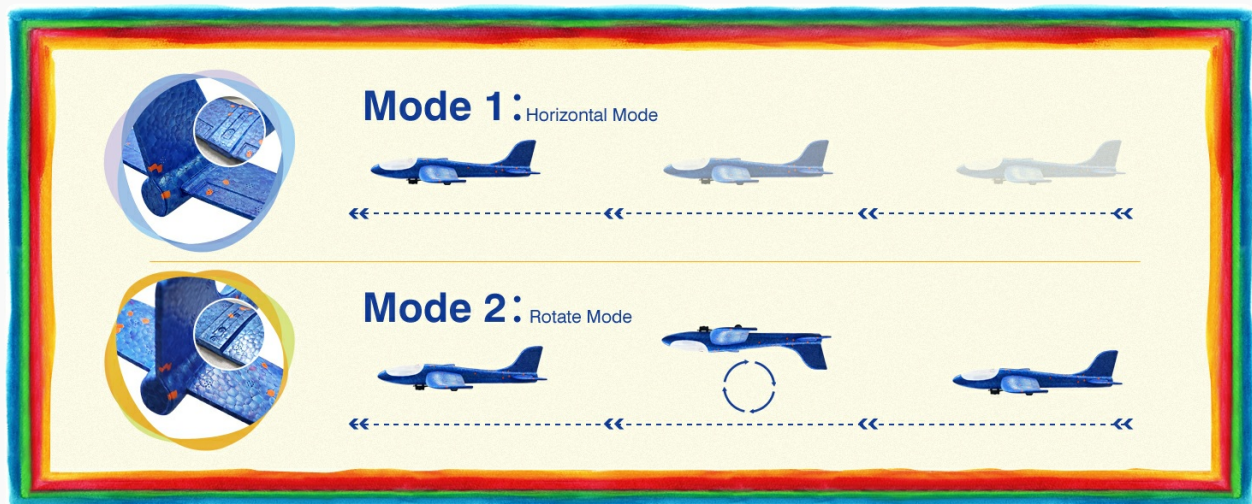


Image: Flight Modes Diagram - Illustrates the two flight modes: Horizontal Mode and Rotate Mode.



Image: Night Play with Lights - Shows children enjoying the airplanes with activated LED lights in the evening.


Maintenance

To ensure the longevity and performance of your Wesfuner Foam Airplane Launcher Toys, please follow these maintenance guidelines:

- **Cleaning:** Wipe the foam airplanes and launcher with a damp cloth to remove dirt and debris. Do not submerge in water.
- **Storage:** Store the toys in a cool, dry place away from direct sunlight when not in use to prevent material degradation.
- **Durability:** The launchers feature improved snaps and elastic connecting strips for enhanced durability. The airplanes are made of tear-resistant EPP foam. While designed to be robust, avoid excessive force or intentional damage.
- **LED Lights:** The LED lights are powered by included batteries. If lights dim or stop working, replace the batteries as needed.

Material

Arc Anti-collision
Design

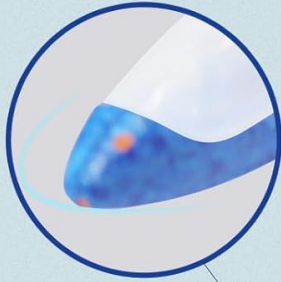

Eco-friendly EPP
high-polymer material



Scratch
Resistant



No Hard, Sharp part,
Soft Enough



Tested Safe
To Kids

Image: Material Information - Highlights the eco-friendly EPP high-polymer material, scratch resistance, soft texture, and tested safety for children.

Troubleshooting

If you encounter any issues with your foam airplane launcher toys, please refer to the following common problems and solutions:

- **Airplane Not Launching Properly:**

- Ensure the airplane is fully seated and clicked into the launcher's rail.
- Verify the red handle is pulled back completely to arm the mechanism.
- Check for any obstructions in the launcher's path or on the airplane itself.

- **Short Flight Distance or Erratic Flight:**

- Confirm the wings and tail are securely inserted and not bent or damaged.

- Adjust the launch angle to between 45-60 degrees for optimal distance.
- Ensure you are launching in an open area free from strong winds or obstacles.
- Check if the flight mode (horizontal vs. rotate) is set correctly for your desired flight path.

- **LED Lights Not Working:**

- Press the activation button firmly.
- Check if any clear plastic battery protector tabs are still present and remove them.
- If the issue persists, the batteries may need to be replaced.

Specifications

Feature	Detail
Product Dimensions	13.38 x 12.59 x 1.5 inches
Item Weight	0.317 ounces
Model Number	T918-1
Manufacturer Recommended Age	36 months - 12 years
Flight Range	33-49 ft (10-15 meters)
Material	Environmental ABS plastic and EPP foam

Warranty & Support

For any warranty claims or product support, please contact Wesfuner directly through their official channels or the retailer from whom the product was purchased. Keep your proof of purchase for any claims.

Wesfuner is committed to building up quality improvement and after-sales service.