

Mondaine 85015G0MVNP2

Mondaine 85015G0MVNP2 Digital Watch User Manual

Model: 85015G0MVNP2

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Mondaine 85015G0MVNP2 Digital Watch. Please read this manual carefully to ensure proper use and to maximize the lifespan of your timepiece.

PRODUCT OVERVIEW

The Mondaine 85015G0MVNP2 is a robust digital watch designed for daily use, featuring a durable PU strap and case, and water resistance up to 5 ATM. It includes essential functions such as time display, date, day of week, chronograph, and backlight.



Figure 1: Mondaine 85015G0MVNP2 Digital Watch. The watch features four buttons: LIGHT (top left), MODE (bottom left), START (top right), and RESET (bottom right). The digital display shows time, day of week, and function indicators like "CHRONOGRAPH". The brand "mondaine" and "5ATM" water resistance are visible on the watch face.

Button Functions:

- **LIGHT:** Activates the backlight for illumination of the display.
- **MODE:** Cycles through different modes (Time, Alarm, Chronograph, Date).
- **START:** Used to start/stop functions or adjust settings in setting mode.
- **RESET:** Used to reset functions or confirm settings in setting mode.

SETUP: SETTING TIME AND DATE

1. **Enter Time Setting Mode:** Press the **MODE** button repeatedly until the time digits begin to flash. This indicates you are in time setting mode.
2. **Adjust Seconds:** The seconds display will typically flash first. Press the **RESET** button to reset the seconds to 00.
3. **Adjust Hours:** Press the **START** button to advance the hour. Pay attention to the AM/PM indicator if your watch uses a 12-hour format.

4. **Adjust Minutes:** Press the **MODE** button once to move to the minute setting. Press the **START** button to advance the minutes.
5. **Set Date and Day:** Continue pressing the **MODE** button to cycle through setting the month, day, and year. Use the **START** button to adjust each value. The day of the week will automatically update based on the date.
6. **Exit Setting Mode:** Once all settings are correct, press the **MODE** button again to return to the normal time display.

OPERATING FUNCTIONS

1. Using the Chronograph (Stopwatch)

1. **Enter Chronograph Mode:** Press the **MODE** button until "CHRONOGRAPH" or "STW" appears on the display. The display will show "00:00:00".
2. **Start/Stop:** Press the **START** button to begin timing. Press **START** again to pause/stop the chronograph.
3. **Reset:** While the chronograph is stopped, press the **RESET** button to clear the time to "00:00:00".

2. Setting and Using the Alarm

1. **Enter Alarm Mode:** Press the **MODE** button until "ALARM" or "AL" appears on the display. The alarm time will be shown.
2. **Set Alarm Time:** Press the **RESET** button to make the hour digits flash. Use the **START** button to adjust the hour.
3. **Adjust Minutes:** Press the **MODE** button to move to the minute setting. Use the **START** button to adjust the minutes.
4. **Activate/Deactivate Alarm:** In alarm mode, press the **START** button to toggle the alarm ON/OFF. An alarm icon will appear when activated.
5. **Exit Alarm Mode:** Press the **MODE** button to return to the normal time display.

3. Using the Backlight

Press the **LIGHT** button (top left) to illuminate the display for a few seconds, allowing visibility in low-light conditions.

MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid harsh chemicals.
- **Water Resistance (5 ATM):** This watch is resistant to splashes, rain, and brief immersion in water. It is suitable for showering but not for swimming, diving, or prolonged water activities. Do not operate buttons underwater.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect its accuracy and lifespan.
- **Battery Replacement:** When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or depleted battery.	Replace the battery. Consult a professional watch technician.
Time is incorrect.	Time was not set correctly or was accidentally reset.	Refer to the "Setup: Setting Time and Date" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons to see if any mode changes. If unresponsive, a battery replacement might resolve it. If not, seek professional service.
Water condensation inside the watch.	Seal compromised or extreme temperature change.	Immediately take the watch to a professional watch repair service to prevent further damage.

SPECIFICATIONS

- **Model Number:** 85015G0MVNP2
- **Brand:** Mondaine
- **Movement:** Digital
- **Case Material:** PU
- **Strap Material:** PU
- **Water Resistance:** 5 ATM (50 meters) - Suitable for showering, not for swimming or diving.
- **Battery Type:** 1 Lithium Ion battery (included)
- **Package Dimensions:** 10.2 x 10 x 9.2 cm
- **Weight:** 240 g


WARRANTY AND SUPPORT






For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Mondaine website. For technical support or service inquiries, please contact Mondaine customer service through their official channels.

You can visit the [Mondaine Store on Amazon](#) for more product information.



Related Documents - 85015G0MVNP2

<div><div>MONDAINE® TRAVEL ALARM CLOCK</div><div> Mondaine Watch Ltd</div></div>	<div>Mondaine Travel Alarm Clock: User Manual and Features</div> <div>Comprehensive guide to the Mondaine Travel Alarm Clock. Learn how to set the time, use the alarm function, replace the battery, and understand its features. Includes multilingual instructions translated to English.</div>
---	--

	<p>Mondaine Cushion Watch Instruction Manual - Setting Time, Date, and Chronograph Functions</p> <p>This comprehensive instruction manual provides detailed guidance for operating the Mondaine Cushion watch, featuring Ronda startech movements (Cal. 5030.D & 5021.D). It covers setting the time and date, understanding display elements, and mastering all chronograph functions including start, stop, reset, accumulated timing, intermediate timing, and zero position adjustment for chronograph hands. Includes manufacturer information and website.</p>
	<p>Mondaine Cushion Watch Instruction Manual</p> <p>This manual provides instructions for operating and maintaining the Mondaine Cushion watch, featuring Ronda Startech movements Cal. 5030.D and 5021.D. Learn how to set the time, date, and use the chronograph functions.</p>
	<p>Mondaine stop2go Instruction Manual - GGM.D046</p> <p>Official instruction manual for the Mondaine stop2go watch (Model GGM.D046), detailing its unique electronic switch, time setting, second-hand reset, and care instructions. Learn about Mondaine's commitment to climate neutrality.</p>
	<p>Mondaine Automatic Watch Instruction Manual</p> <p>Instruction manual for the Mondaine Automatic watch, detailing how to set the date, weekday, and time, along with information on its mechanical movement and care.</p>
	<p>Mondaine Pocket Watch Instruction Manual</p> <p>Official instruction manual for the Mondaine Pocket Watch, detailing features, time setting, battery replacement, and safety warnings. Includes technical specifications and manufacturer information.</p>