

## Coby CWM-115-BLK

# Coby Dynamic Vocal Wired Microphone User Manual

Model: CWM-115-BLK

## INTRODUCTION

---

Thank you for choosing the Coby Dynamic Vocal Wired Microphone. This microphone is designed to deliver clear, dynamic sound for various applications, including singing, karaoke, public speaking, and recording. Its robust construction, user-friendly features, and versatile connectivity make it an ideal choice for both casual users and aspiring performers. Please read this manual thoroughly to ensure proper setup, operation, and maintenance of your new microphone.

## SAFETY INFORMATION

---

- Do not expose the microphone to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the microphone to strong impacts.
- Do not attempt to disassemble or modify the microphone. This will void the warranty.
- Keep the microphone and its cable away from water or other liquids.
- Ensure the cable is not a tripping hazard.
- Always turn off the microphone and disconnect it from the audio system when not in use or before cleaning.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- Coby Dynamic Vocal Wired Microphone (Model: CWM-115-BLK)
- Detachable 10-foot (3-meter) Audio Cable with 1/4" Aux Plug

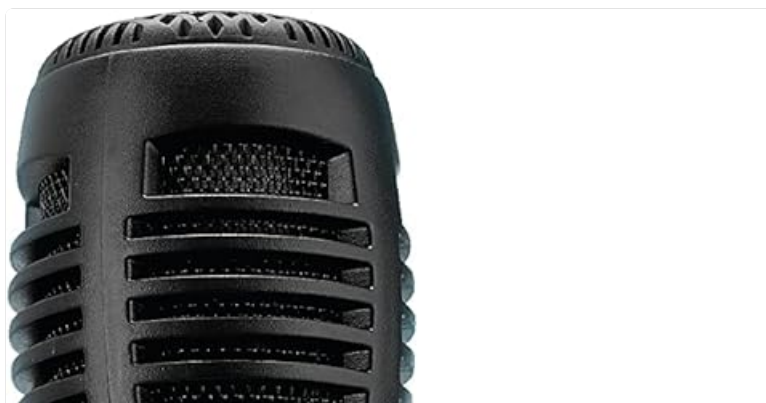




Image: The Coby Dynamic Vocal Wired Microphone shown alongside its included 10-foot detachable audio cable with a 1/4" auxiliary plug.

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Coby Dynamic Vocal Wired Microphone:

1. **Microphone Head (Grille):** Protects the microphone capsule and helps reduce plosive sounds.
2. **Microphone Body:** The main housing of the microphone.
3. **On/Off Switch:** Allows for quick muting or activation of the microphone.
4. **Cable Release Button:** Used to detach the audio cable from the microphone.
5. **XLR Connector (on microphone):** The port where the detachable cable connects to the microphone.
6. **1/4" Aux Plug (on cable):** The connector at the end of the cable that plugs into your audio system.



Image: A visual representation highlighting the microphone's on/off switch, 1/4" Aux input, and the easy-release button for the detachable cable.

## SETUP

---

Follow these steps to set up your Coby Dynamic Vocal Wired Microphone:

1. **Connect the Cable:** Align the XLR end of the 10-foot audio cable with the connector at the base of the microphone. Push firmly until it clicks into place, ensuring a secure connection.
2. **Connect to Audio System:** Insert the 1/4" Aux plug of the cable into the microphone input jack of your compatible audio system (e.g., karaoke machine, PA system, amplifier, mixer). Ensure the audio system is turned off or its volume is set to minimum before connecting.
3. **Position the Microphone:** Hold the microphone comfortably or place it on a compatible microphone stand (not included).



Image: A close-up view demonstrating the connection point for the detachable 10-foot cable to the microphone body.



Image: A detailed view of the 1/4-inch auxiliary plug, which connects to your audio system's input.

## OPERATING INSTRUCTIONS

---

Using your Coby Dynamic Vocal Wired Microphone is straightforward:

1. **Power On Audio System:** Turn on your connected audio system and gradually increase the volume to a comfortable listening level.
2. **Activate Microphone:** Slide the ON/OFF switch on the microphone body to the "ON" position.
3. **Speak/Sing into Microphone:** Hold the microphone approximately 2-6 inches (5-15 cm) from your mouth for optimal sound capture. Experiment with distance to find the best sound for your voice and environment.
4. **Adjust Volume:** Use the volume controls on your audio system to adjust the microphone's output level.
5. **Deactivate Microphone:** When finished, slide the ON/OFF switch to the "OFF" position to mute the microphone.
6. **Disconnect Cable:** To detach the cable from the microphone, press the cable release button on the microphone's base and gently pull the cable away.



Image: A hand demonstrating the location of the easy-to-use ON/OFF switch on the microphone body.





Image: Individuals enjoying a karaoke session, illustrating the microphone in active use for singing.

## MAINTENANCE

---

Proper care will extend the life and performance of your microphone:

- **Cleaning:** Wipe the microphone body with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals. For the grille, a soft brush can be used to gently remove dust or debris.
- **Storage:** Store the microphone in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to detach the cable for storage to prevent strain on the connection points.
- **Cable Care:** Avoid sharp bends or kinks in the cable. Coil it loosely when storing to prevent damage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from microphone.	Microphone switch is OFF. Cable not properly connected. Audio system volume too low or muted. Incorrect input selected on audio system. Faulty cable or audio system input.	Slide the ON/OFF switch to "ON". Ensure cable is securely connected to both microphone and audio system. Increase volume on audio system; check for mute function. Verify the correct input source is selected on your audio system. Try a different cable or test with another audio system if possible.
Sound is distorted or unclear.	Microphone too close to mouth. Audio system volume too high. Interference from other electronics.	Increase distance between mouth and microphone (2-6 inches recommended). Reduce volume on audio system. Move microphone away from other electronic devices.
Microphone produces feedback (squealing sound).	Microphone too close to speakers. Volume too high.	Move microphone further away from speakers. Reduce the microphone volume on your audio system. Point the microphone away from speakers.

## SPECIFICATIONS

Brand	Coby
Model Name	Dynamic Vocal Microphone
Item Model Number	CWM-115-BLK
Connectivity Technology	Auxiliary (Wired)
Compatible Devices	Speaker, Karaoke Machine, PA Systems
Microphone Form Factor	Handheld
Polar Pattern	Unidirectional
Frequency Response	15 KHz
Included Components	Microphone, 10-foot Cable with 1/4" Aux Plug
Product Dimensions (L x W x H)	1.61 x 6.5 x 1.61 inches (4.09 x 16.51 x 4.09 cm)
Item Weight	6.4 ounces (0.4 lbs / 181 grams)
Color	Black
Power Source	Corded Electric (via connected audio system)

## WARRANTY AND SUPPORT

---

Coby products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided with your product packaging or visit the official Coby website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may visit the Coby Store on Amazon:[Coby Official Store](#)