

[Manuals.plus](#) /

› [ELEMARA](#) /

› ELEMARA Bumper Car for Toddlers User Manual

ELEMARA JQ6055

ELEMARA Bumper Car for Toddlers User Manual

Model: JQ6055

Brand: ELEMARA

IMPORTANT SAFETY INFORMATION

Please read all safety warnings and instructions carefully before operating the ELEMARA Bumper Car. Failure to follow these instructions may result in serious injury.

- **PREVENT INJURIES AND DEATH:** Direct adult supervision is REQUIRED.
- NEVER use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- ONLY 1 rider at a time.
- Do not charge the battery for more than 20 hours to prevent damage.
- Batteries can fall out and injure if vehicle tips over. Always ensure the battery bracket is properly assembled over the battery.
- NEVER modify the electrical system. Alterations could cause a fire or explosion.
- Use of the wrong type of battery or charger could cause a fire or explosion.

PRODUCT OVERVIEW

The ELEMARA Bumper Car for Toddlers is an electric ride-on toy designed for children aged 3-8 years. It features two driving modes, a 360-degree spin function, LED lights, and a safety belt for secure operation. The car is powered by a rechargeable 12V battery and has a maximum speed of 1.9 MPH.



Image: The ELEMARA Bumper Car in purple, showcasing its compact design and the included red remote control.



Image: A collection of ELEMARA Bumper Cars in various colors (blue, purple, pink, green) lined up in a living room setting,

highlighting the range of available options.

SETUP AND ASSEMBLY

The ELEMARA Bumper Car comes mostly pre-assembled. Follow these steps for initial setup:

1. **Initial Connection:** Locate the battery connector inside the seat compartment. Connect the battery terminal to the car's power input. Ensure a secure connection.

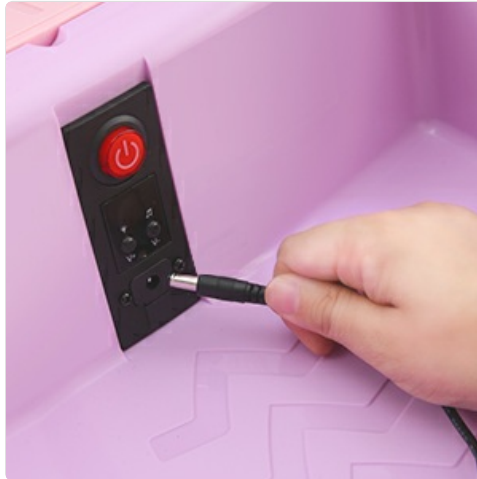


Image: A hand connecting the charging cable to the input port located on the bumper car's control panel, indicating the charging process.

2. **Charging the Battery:** Before first use, fully charge the 12V battery. Plug the charger into a standard wall outlet and then into the car's charging port. Do not charge for more than 20 hours.

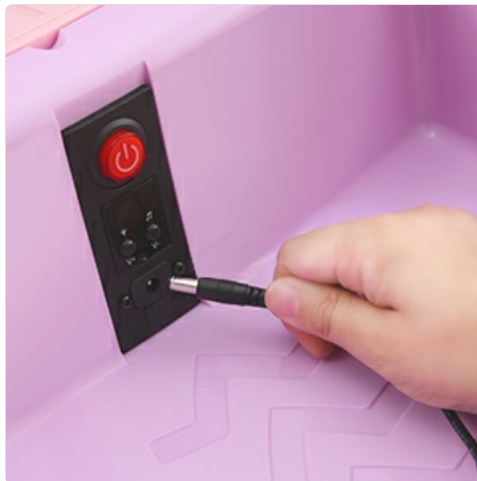


Image: A hand plugging the charger into a wall outlet, demonstrating how to initiate the battery charging process for the bumper car.

3. **Applying DIY Stickers:** Personalize your bumper car with the included DIY stickers. Clean the surface of the car before applying for best adhesion.



Image: An adult and a child are shown applying decorative stickers to the side of the purple bumper car, illustrating the DIY customization feature.

OPERATING INSTRUCTIONS

The ELEMARA Bumper Car offers two primary driving modes for versatile play.

1. Manual Driving Mode (Joystick Control)

Children can operate the bumper car independently using the two joysticks located on either side of the seat.

- **Power On:** Press the red power button on the control panel to turn on the car.
- **Forward/Backward:** Push both joysticks forward to move forward, pull both backward to move backward.
- **Turning:** Push one joystick forward and pull the other backward to turn.
- **360-Degree Spin:** Push one joystick forward and the other backward simultaneously to initiate a 360-degree spin.



Image: A child seated in the purple bumper car, demonstrating its ability to perform a 360-degree spin, with arrows indicating the rotational movement and illuminated LED lights.



Image: A detailed diagram showing the bumper car's internal control panel with power, music, and light buttons, along with the two joysticks. Also pictured is the remote control with its corresponding directional and emergency brake buttons.

2. Remote Control Mode (Parental Control)

Parents can take full control of the bumper car using the included remote control for added safety and guidance,

especially for younger children.

- **Pairing:** Ensure the car is powered on. Press and hold the "M" (Connect) button on the remote control until the car responds.
- **Driving:** Use the directional buttons on the remote to move the car forward, backward, left, or right.
- **Emergency Brake:** Press the "P" (Emergency Brake) button to stop the car immediately.



Image: A parent is seated on a couch, holding a red remote control, while a child rides in a purple bumper car in the foreground, illustrating the remote control driving mode.

Safety Features

- **Safety Belt:** Always ensure the child is securely fastened with the safety belt before operation.
- **Soft Anti-Flat Tires:** The car is equipped with soft anti-flat tires for enhanced protection and a smoother ride.
- **Maximum Speed:** The car operates at a safe maximum speed of 1.9 MPH.

SAFETY BELT AND ANTI FLAT TIRES

for your child safe



Image: A child is shown buckling the safety belt inside the bumper car, with an inset close-up of the buckle mechanism, emphasizing the importance of safety.

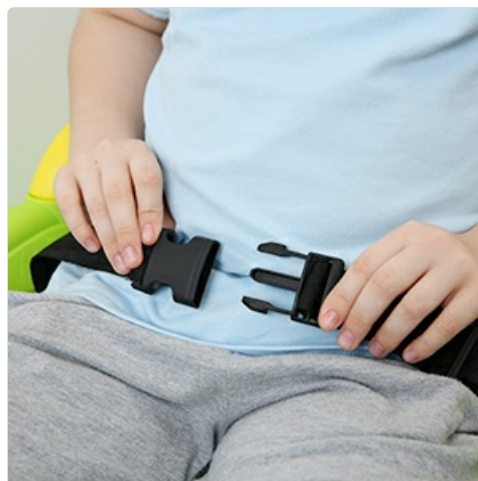


Image: A close-up view of a child's hands fastening the safety belt, reinforcing the safety-first message for operating the bumper car.

Product Video

Your browser does not support the video tag.

Video: An official product video from ELEMARA showcasing the 12V Bumper Car for Toddlers, highlighting its features and children enjoying the ride. This video demonstrates the car's functionality, including DIY stickers, safety features, and both manual and remote control driving modes.

MAINTENANCE

- **Battery Care:** Recharge the battery after each use. Do not overcharge (maximum 20 hours). If storing for extended periods, charge the battery fully every 3 months to prolong its lifespan.
- **Cleaning:** Wipe the car with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Avoid direct water spray.
- **Storage:** Store the bumper car in a dry, cool place away from direct sunlight and moisture.
- **Inspection:** Regularly check for loose screws, damaged wires, or worn parts. Replace any damaged components immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Car does not move or has low power.	Battery is low or not connected properly.	Ensure battery is fully charged (up to 20 hours). Check all battery connections are secure.
Remote control not working or car not responding to remote.	Remote not paired or remote battery is low.	Re-pair the remote control with the car (refer to "Remote Control Mode" section). Replace remote control batteries if needed.
Car moves in only one direction or glitches.	Possible internal wiring issue or joystick malfunction.	Turn off the car and restart. If the problem persists, contact customer support.
LED lights not working.	Lights button not pressed or electrical fault.	Press the lights button on the control panel. If still not working, contact customer support.

SPECIFICATIONS

Product Dimensions: 25 x 17.3 x 30 inches

Item Weight: 24.1 pounds

Model Number: JQ6055

Manufacturer Recommended Age: 3 - 8 years

Battery: 12V Rechargeable

Maximum Speed: 1.9 MPH

Features: 360-degree spin, LED lights, Safety belt, DIY stickers, 2 Driving Modes (Manual & Remote Control)

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product packaging or visit the official ELEMARA website. If you encounter any issues or require assistance, please contact ELEMARA customer support. You can find more information about ELEMARA products and potentially contact details at their official store:

[Visit the ELEMARA Store on Amazon](#)