

[Manuals.plus](#) /

> [NEEWER](#) /

> NEEWER Teleprompter X14 PRO Instruction Manual

NEEWER X14 PRO

NEEWER Teleprompter X14 PRO Instruction Manual

Model: X14 PRO

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your NEEWER Teleprompter X14 PRO. Please read this manual thoroughly before operating the device and retain it for future reference.



Image 1.1: The NEEWER Teleprompter X14 PRO, including the RT-110 remote control and aluminum carrying case.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x X14 Pro Teleprompter
- 1 x RT-110 Remote Control
- 1 x Aluminum Case
- 1 x Glass Cleaning Cloth

Wide Compatibility

Compatible with most iPads and Android tablets.



Compatible with

- Galaxy Tab Surface Pro Tablets



Compatible with

- iPad Pro 12.9" iPad Pro 11" iPad Air iPad mini

Image 2.1: Visual representation of the package contents, including the teleprompter, remote, case, and cleaning cloth, along with key dimensions.

3. SETUP INSTRUCTIONS

The NEEWER X14 Pro Teleprompter features a foldable design that requires no assembly for initial use. Follow these steps to set up your teleprompter:

1. **Unpack the Teleprompter:** Carefully remove the teleprompter from its aluminum carrying case.
2. **Mount on a Tripod:** Attach the teleprompter to a tripod using the 1/4" or 3/8" threads located on the bottom of the unit. Ensure it is securely fastened for stability during recording.
3. **Unfold the Camera Hood:** Gently unfold the camera hood and adjust the beam splitter glass to the desired viewing angle (up to 135°).
4. **Attach Camera and Tablet/Smartphone:** Mount your DSLR, mirrorless camera, or camcorder to the teleprompter via the standard 1/4" mounting screw. Place your tablet or smartphone (up to 8.7" / 22.1cm wide) into the expandable holder.

Remote Control with App

Use RT-110 Bluetooth Remote to fully control your scripts displayed by NEEWER Teleprompter App.



*App supports doc, docx, and txt files.

Note: To pair the remote with your tablet or smartphone, please enable the Bluetooth function, then complete the pairing in the NEEWER Teleprompter App.

Image 3.1: Step-by-step guide illustrating the quick and easy setup process of the X14 Pro Teleprompter, from unboxing to final deployment on a tripod.

3.1 Important Considerations

- The teleprompter is not compatible with wide-angle lenses.
- The focal length of your camera lens must be greater than 28mm to avoid vignetting.

3.2 Stable Tripod Mounting

The base of the teleprompter includes multiple mounting points for secure attachment to a tripod, ensuring stability during video recording.



Convenient Gear Attachment

Cold shoes and 1/4" threads at side can connect LED lights and microphones for enhanced video quality.

1/4" Female Thread

Cold Shoe Mount



Image 3.2: Detail of the teleprompter's base, highlighting the 1/4" and 3/8" threads for tripod mounting.

3.3 Convenient Gear Attachment

The teleprompter is designed with expandability in mind. It features dual cold shoe mounts and 1/4" threads on both sides, allowing you to attach additional accessories such as microphones or LED lights to enhance your video quality.

No Assembly Required

X14 Pro features an all in one structure that requires no assembly at all.



Step 1 Take it out of the box.



Step 2 Mount it on a tripod.



Step 3 Unfold the camera hood.



Step 4 Finished.

Image 3.3: Illustration of the cold shoe mounts and 1/4" threads on the teleprompter, designed for attaching external gear like microphones and LED lights.

4. OPERATION

4.1 NEEWER Teleprompter App and RT-110 Remote Control

The NEEWER Teleprompter X14 PRO is controlled via the dedicated NEEWER Teleprompter App and the included RT-110 Bluetooth remote control. The app is compatible with iOS 11.0/Android 6.0 or later.

- Download the NEEWER Teleprompter App:
 - For iOS devices: [NEEWER Teleprompter App \(iOS\)](#)
 - For Android devices: [NEEWER Teleprompter App \(Android\)](#)
- **Bluetooth Connection:** To use the RT-110 remote, ensure Bluetooth is enabled on your smartphone or tablet. Pair the remote within the NEEWER Teleprompter App, not directly through your device's Bluetooth settings.
- **Remote Functions:** The RT-110 remote allows you to pause, adjust scrolling speed (speed up/slow down), and turn pages of your script with ease. It also features controls for font size adjustment.

Stable Tripod Mounting

Mount X14 Pro to a tripod via 1/4" or 3/8" threads for stable video recording.

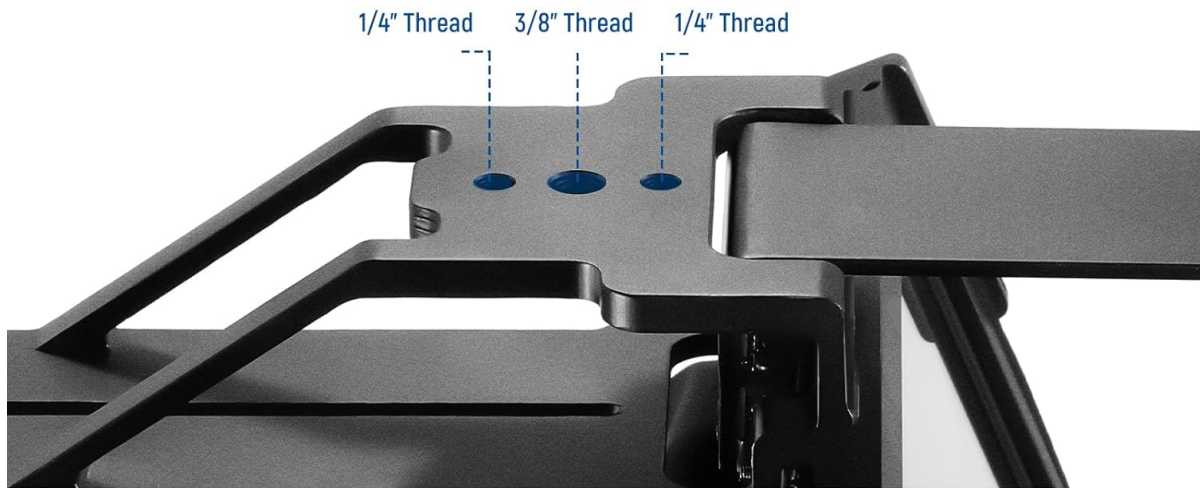


Image 4.1: Overview of the NEEWER Teleprompter App and the RT-110 remote control, detailing button functions for script management.



EASY TO OPERATE

Easily control the scrolling speed, play, pause, and turn pages with the remote



Note:

The remote control must be linked in the App and not directly to your smart phone or tablet via Bluetooth.

Image 4.2: Detailed view of the RT-110 remote control, highlighting its intuitive buttons for controlling script playback and display.

4.2 HD Clear Beam Splitter

The 14-inch high-definition beam splitter glass features 75% light transmission, ensuring clear script reflection. This allows for confident reading within a 10-foot (3-meter) range without affecting camera image quality.

Clear Beam Splitter

14" clear beam splitter makes sure the script is easy to read.



Image 4.3: Illustration of the clear beam splitter technology, demonstrating its high light transmittance and effective reading range.

4.3 Wide Compatibility

The teleprompter is compatible with a variety of devices:

- **Cameras:** DSLR cameras, mirrorless cameras, and camcorders.
- **Tablets/Smartphones:** Designed for devices up to 8.7 inches (22.1 cm) wide, including 12.9" iPad Pro, 11" iPad Pro, iPad mini, and various Android tablets and smartphones.

Package Contents



Image 4.4: Visual guide to the wide range of tablet and smartphone compatibility, highlighting the maximum device width.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your teleprompter.

- **Cleaning the Beam Splitter Glass:** Use the provided glass cleaning cloth to gently wipe the beam splitter glass. Avoid abrasive materials or harsh chemicals that could damage the coating.
- **General Cleaning:** Wipe the exterior of the teleprompter with a soft, dry cloth. Do not use liquid cleaners directly on the device.
- **Storage:** When not in use, store the teleprompter in its aluminum carrying case to protect it from dust, moisture, and physical damage.

6. TROUBLESHOOTING

If you encounter issues with your NEEWER Teleprompter X14 PRO, refer to the following common solutions:

- **Remote Control Not Connecting:** Ensure the RT-110 remote control is paired within the NEEWER

Teleprompter App, not directly through your device's Bluetooth settings. Verify Bluetooth is enabled on your tablet/smartphone.

- **Vignetting or Dark Edges in Camera Feed:** This teleprompter is not compatible with wide-angle lenses. Ensure your camera lens has a focal length greater than 28mm. Adjust the camera position if necessary.
- **Script Not Visible/Clear:** Check that your tablet/smartphone is correctly positioned in the holder and that the screen brightness is adequate. Ensure the beam splitter glass is clean.
- **App Functionality Issues:** Ensure your NEEWER Teleprompter App is updated to the latest version. Restart the app or your device if problems persist.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	14.96 x 14.25 x 5.04 inches
Item Weight	5.59 pounds
Model Number	10101983
Beam Splitter Size	14 inches
Light Transmittance	75%
Reading Range	10 feet / 3 meters
Compatible Tablet/Phone Width	Up to 8.7 inches (22.1 cm)
Minimum Camera Lens Focal Length	28mm
Tripod Mounting Threads	1/4", 3/8"
Accessory Mounts	Dual cold shoe mounts, 1/4" threads
App Compatibility	iOS 11.0/Android 6.0 or later

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official NEEWER website. For technical support or further assistance, please contact NEEWER customer service through their official channels.

You can find more information and contact details on the [NEEWER Brand Store](#).