

LeTkingok UFR 705

LeTkingok Mini Electric Household Sewing Machine UFR-705 User Manual

Model: UFR-705

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your LeTkingok Mini Electric Household Sewing Machine, Model UFR-705. Please read this manual thoroughly before using the machine to ensure proper setup, operation, and maintenance. Retain this manual for future reference.

SAFETY INSTRUCTIONS

- Always unplug the sewing machine from the power outlet when not in use, when changing needles, or when cleaning.
- Keep fingers away from the needle, presser foot, handwheel, and tension dial during operation.
- Do not allow children to operate the machine without adult supervision.
- Use only the specified power adapter (AC 100-240V) provided with the machine.
- Never operate the machine if the power cord or plug is damaged.
- Ensure the machine is placed on a stable, flat surface during use.
- Do not store or operate the machine in damp or wet conditions.

PACKAGE CONTENTS

Upon opening the package, verify that all items listed below are present and in good condition:

- 1 x LeTkingok Multifunctional Sewing Machine (Model UFR-705)
- 1 x Foot Pedal
- 1 x AC Power Adapter
- 2 x Thread Spools (typically white and black)
- 2 x Bobbins
- 1 x Needle Threader
- 1 x Spare Needle
- 1 x User Manual



Image: The LeTkingok Mini Electric Household Sewing Machine shown with its complete set of accessories, including the foot pedal, power adapter, thread spools, and bobbins.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your sewing machine:

- **Handwheel:** Manually raises and lowers the needle.
- **Thread Tension Dial:** Adjusts the tension of the upper thread.
- **Stitch Selector Dial:** Choose from 12 different stitch patterns.
- **Reverse Stitch Button:** For reinforcing stitches.
- **Speed Control Switch:** Selects low (L) or high (H) sewing speed.
- **Foot Pedal Jack:** Connects the foot pedal for hands-free operation.
- **Power Input Jack:** Connects the AC power adapter.
- **Bobbin Winder Spindle:** Used for winding thread onto bobbins.
- **Presser Foot Lifter:** Raises and lowers the presser foot.
- **Needle Clamp Screw:** Secures the needle in place.
- **Work Light:** Illuminates the sewing area.



Image: A detailed front view of the sewing machine, highlighting the stitch selector dial and speed control switch.



Image: An angled view of the sewing machine, showing the handwheel and various controls.

SETUP

1. Power Supply

The machine can be powered by either the included AC adapter or 4 x AA batteries (not included).

- **AC Adapter:** Insert the small end of the AC adapter into the power input jack on the back of the machine. Plug the other end into a standard AC 100-240V wall outlet.
- **Batteries:** Open the battery compartment cover on the bottom of the machine. Insert 4 x AA batteries, ensuring

correct polarity (+/-). Close the cover securely.



Image: The underside of the sewing machine, illustrating the battery compartment for optional battery power.

2. Foot Pedal Connection

For hands-free speed control, connect the foot pedal. Insert the foot pedal plug into the foot pedal jack on the back of the machine.

3. Threading the Machine

Proper threading is crucial for good stitch quality. Follow these steps carefully:

a. Winding the Bobbin

1. Place an empty bobbin onto the bobbin winder spindle.
2. Place a spool of thread on the spool pin.
3. Guide the thread through the bobbin winding tension disc.
4. Wrap the thread around the bobbin a few times clockwise.
5. Push the bobbin winder spindle to the right.
6. Turn on the machine (or press the foot pedal) to start winding. Stop when the bobbin is full.
7. Cut the thread and push the spindle back to the left. Remove the wound bobbin.

b. Inserting the Bobbin (Lower Thread)

1. Slide open the bobbin cover plate located on the needle plate.
2. Insert the wound bobbin into the bobbin case, ensuring the thread unwinds counter-clockwise.
3. Guide the thread through the tension spring slot.
4. Leave about 10-15 cm of thread hanging out. Close the bobbin cover.

c. Threading the Upper Thread

1. Raise the presser foot lifter.
2. Place a spool of thread on the spool pin.
3. Guide the thread through the first thread guide (usually at the top).
4. Bring the thread down through the tension discs.
5. Guide the thread up and through the take-up lever (from right to left).
6. Bring the thread down through the remaining thread guides.
7. Thread the needle from front to back. Use the needle threader if needed.
8. Pull about 15 cm of thread through the needle eye.



Image: A side view of the sewing machine, illustrating the area where the bobbin is inserted and the general path for the upper thread.

d. Bringing Up the Bobbin Thread

1. Hold the upper thread gently with your left hand.
2. Turn the handwheel towards you (counter-clockwise) to lower the needle into the needle plate and then raise it back up.
3. As the needle rises, it will catch the bobbin thread, forming a loop.
4. Pull the loop up with your fingers or a pair of tweezers.
5. Pull both the upper and lower threads under the presser foot and towards the back of the machine, leaving about 10-15 cm of thread.

OPERATING THE MACHINE

1. Stitch Selection

Your machine offers 12 different stitch patterns. Rotate the stitch selector dial to choose the desired stitch. Refer to the stitch guide on the machine body for visual representation of each stitch.

2. Starting to Sew

1. Place the fabric under the presser foot.
2. Lower the presser foot using the presser foot lifter.
3. Ensure the needle is in the highest position by turning the handwheel towards you.
4. Select your desired speed using the L/H speed control switch.
5. To start sewing, either press the foot pedal or slide the ON/OFF switch to the ON position.



Image: A user demonstrating the operation of the sewing machine, with fabric positioned under the needle.



Image: A side view of a user sewing with the machine, showing the fabric moving smoothly.

3. Stopping and Finishing a Seam

1. To stop sewing, release the foot pedal or slide the ON/OFF switch to the OFF position.
2. Turn the handwheel towards you to raise the needle to its highest position.
3. Raise the presser foot lifter.
4. Pull the fabric gently towards the back of the machine.
5. Cut the threads using the thread cutter located on the side of the machine or with scissors, leaving about 10 cm of thread.

4. Reverse Stitch

To reinforce the beginning and end of a seam, press and hold the reverse stitch button while sewing. Release the button to sew forward again.

5. Thread Tension Adjustment

The thread tension dial controls the balance between the upper and lower threads. Adjust as needed for different fabrics and threads. A balanced stitch will have both threads meeting evenly between the fabric layers.

- If the upper thread lies flat on the fabric surface, increase the upper thread tension (turn dial to a higher number).
- If the lower thread lies flat on the fabric surface, decrease the upper thread tension (turn dial to a lower number).



Image: A close-up of the sewing machine's needle area, with a piece of fabric demonstrating a completed stitch pattern.



Image: The sewing machine displaying a stitched fabric sample, with an inset showing the machine's bottom for stability features.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your sewing machine.

- **Cleaning:** Use a soft brush or lint brush to remove lint and dust from the bobbin area and feed dogs after each use. Do not use liquid cleaners or solvents.
- **Needle Replacement:** Replace the needle regularly, especially if it becomes bent, dull, or if you experience skipped stitches. Loosen the needle clamp screw, remove the old needle, insert a new one with the flat side facing the back, and tighten the screw.
- **Storage:** When not in use, unplug the machine and store it in a dry, dust-free environment. It is recommended to cover the machine to protect it from dust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine not starting	Power cord not plugged in; ON/OFF switch off; Foot pedal not connected; Batteries dead/incorrectly inserted.	Check power connection; Turn ON/OFF switch to ON; Connect foot pedal; Replace/reinsert batteries.
Skipped stitches	Improper threading; Bent or dull needle; Incorrect needle size for fabric.	Re-thread the machine correctly; Replace needle; Use appropriate needle for fabric type.
Thread breaking	Too much tension; Poor quality thread; Improper threading; Burrs on needle plate.	Adjust tension dial; Use good quality thread; Re-thread machine; Check for burrs and clean.
Fabric not feeding	Presser foot not lowered; Lint buildup in feed dogs.	Lower presser foot; Clean feed dogs.
Uneven stitches	Incorrect thread tension; Improper threading.	Adjust tension; Re-thread both upper and lower threads.

SPECIFICATIONS

Feature	Detail
Product Name	Multifunctional Sewing Machine
Model	UFR-705
Input Voltage	AC 100-240V

Feature	Detail
Applicable Object	Fabric, Cotton, Canvas, Denim
Applicable Thickness Range	Up to 6 layers of denim
Stitches	12 types
Weight	2.5 KG (approx. 5.5 lbs)
Product Dimensions (L x W x H)	275 x 121 x 260 MM (10.83" x 4.76" x 10.2")
Power Source	Electric (AC adapter) or Battery (4 x AA)



Image: A diagram illustrating the key dimensions of the sewing machine: 10.83 inches in length, 4.76 inches in width, and 10.2 inches in height.

For warranty information or technical support, please refer to the contact details provided by your retailer or visit the official LeTkingok website. Keep your purchase receipt as proof of purchase.

© 2023 LeTkingok. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question