

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [PERFASCIN](#) /

> [PERFASCIN RC-682M Replacement Remote Control for Onkyo AV Receiver TX-SR605 Series User Manual](#)

PERFASCIN RC-682M

PERFASCIN RC-682M Replacement Remote Control User Manual

For Onkyo AV Receiver Models: TX-SR605, TX-SR605S, TX-SA605, TX-SA8560, HT-S3100



INTRODUCTION

This manual provides instructions for the PERFASCIN RC-682M replacement remote control. This remote is designed to function as a direct replacement for the original Onkyo AV Receiver remote, offering seamless operation without the need for complex programming or pairing. Simply install the batteries, and it is ready for use.

Compatible Onkyo AV Receiver Models:

- TXSR605, TXSR605S, TX-SR605, TX-SR605S
- TX-SA605, TX-SA8560, TXSA605, TXSA8560
- HT-S3100, HTS3100
- 24140682

SETUP

Battery Installation

The PERFASCIN RC-682M remote control requires two (2) 1.5V AA Alkaline batteries (not included). No programming or pairing is necessary; the remote will function immediately after battery installation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.







Figure 1: Back view of the remote control with the battery compartment open for installation.

After installing the batteries, the remote control is ready to operate your compatible Onkyo AV Receiver.

OPERATING THE REMOTE CONTROL

The PERFASCIN RC-682M remote control provides full functionality for your Onkyo AV Receiver. Point the remote directly at your receiver when operating.



Figure 2: Front view of the remote control, displaying all function buttons.

Key Functions:

- **STANDBY/ON (I/O):** Powers the receiver on or off.
- **INPUT SELECTOR:** Buttons labeled 1-9, 0, +10, and specific source buttons (VCR/DVR, CBL/SAT, GAME/TV, AUX, TAPE, TUNER, CD, DVD, VCR, CABLE, SAT, MD/CDR, DOCK) allow you to select the desired input source.

- **VOLUME (+/-)**: Adjusts the master volume level of the receiver.
- **MUTING**: Mutes or unmutes the audio output.
- **NAVIGATION (Up, Down, Left, Right, ENTER)**: Used to navigate menus and confirm selections on the receiver's display.
- **SETUP**: Accesses the receiver's setup menu.
- **RETURN**: Returns to the previous menu or screen.
- **PLAYBACK CONTROLS (Play, Pause, Stop, Fast Forward, Rewind, Skip)**: Controls playback for connected audio/video devices.
- **LISTENING MODE**: Selects various audio listening modes (e.g., STEREO, SURROUND).
- **DISPLAY**: Changes the information displayed on the receiver's front panel or connected TV.

For detailed operation of specific receiver functions, please refer to your Onkyo AV Receiver's original instruction manual.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AA Alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are correctly installed with the correct polarity.
 - Replace the batteries with fresh ones.
 - Check for any obstructions between the remote control and the AV receiver. Ensure you are within operating range and pointing the remote directly at the receiver's IR sensor.
 - Verify that the AV receiver is powered on.
- **Specific buttons not working:**
 - This often indicates low battery power. Try replacing the batteries.
 - Ensure the remote is in the correct mode if your receiver supports multiple zones or device control (though this remote is primarily for the main receiver functions).
- **Interference:**
 - Bright light sources, such as direct sunlight or fluorescent lights, can interfere with the remote's infrared signal. Try operating the remote in a different lighting condition.

If issues persist after following these steps, please refer to the Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	RC-682M
Brand	PERFASCIN
Compatible Devices	Onkyo AV Receivers (Home Theater)
Power Supply	2 x 1.5V AA Alkaline Batteries (Not Included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2.3 ounces
Max Number of Supported Devices	1
Color	Black

WARRANTY

Specific warranty information for this replacement remote control is not provided in this manual. For details regarding warranty coverage, returns, or replacements, please refer to the seller's policy on the purchase platform or contact the seller directly.

SUPPORT

If you encounter any issues or have questions regarding the PERFASCIN RC-682M replacement remote control that are not addressed in this manual, please do not hesitate to contact our customer service. They will provide professional assistance and suggestions.

For customer service inquiries, please refer to the contact information provided by your retailer or on the product packaging.

