

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux LFG337S Built-in Hood User Manual

Electrolux LFG337S

Electrolux LFG337S Built-in Hood User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Electrolux LFG337S built-in kitchen hood. Please read these instructions carefully before using the appliance and keep them for future reference.

The Electrolux LFG337S is a 70x28 cm built-in extractor hood designed for kitchen ventilation, featuring stainless steel construction, automatic fan operation, and LED lighting.

2. SAFETY INFORMATION

Important Safety Instructions:

- Ensure the appliance is installed by a qualified person in accordance with local regulations.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not flambé under the hood.
- Do not leave frying pans unattended during use, as overheated oil can ignite.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Regularly clean the grease filters to prevent fire hazards.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your hood. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

Carefully remove the hood from its packaging. Check for any damage during transit. Keep packaging materials away from

children.

3.2 Mounting

The Electrolux LFG337S is a built-in hood designed for integration into a kitchen cabinet. Ensure the cabinet opening dimensions match the hood's specifications (70x28 cm). Secure the hood firmly within the cabinet using appropriate fasteners. Maintain the recommended minimum distance between the cooking surface and the lower part of the hood as specified in the installation template (not provided in this manual, refer to separate installation guide).

3.3 Electrical Connection

Connect the hood to a suitable electrical outlet according to local wiring regulations. Ensure the voltage and frequency match the appliance's rating plate. The appliance must be properly earthed.



Figure 1: Front view of the Electrolux LFG337S built-in hood. This image illustrates the sleek stainless steel design and the location of the control interface, which typically includes buttons for fan speed and lighting.

4. OPERATING INSTRUCTIONS

The Electrolux LFG337S hood is designed for ease of use with intuitive controls.

4.1 Fan Operation

The hood features an automatic fan on/off function. This system detects cooking vapors and adjusts the fan speed accordingly, or activates/deactivates the fan automatically. Manual control options are also available:

- **Power Button:** Press to turn the fan on or off.

- **Speed Selection:** Use the speed control buttons (usually indicated by '+', '-', or numbered settings) to adjust the extraction power. Higher speeds are recommended for intense cooking or frying.

4.2 LED Lighting

The hood is equipped with energy-efficient LED lighting to illuminate your cooking area.

- **Light Button:** Press the dedicated light button to turn the LED lights on or off.

For optimal performance, switch on the hood a few minutes before you start cooking and leave it running for approximately 10-15 minutes after you finish to clear residual odors and steam.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your Electrolux LFG337S hood.

5.1 Cleaning the Exterior

Clean the stainless steel surfaces with a soft cloth and a non-abrasive cleaner specifically designed for stainless steel. Avoid harsh chemicals or abrasive pads that can scratch the finish. Wipe dry immediately to prevent water spots.

5.2 Grease Filters

The metal grease filters trap airborne grease particles. They should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to maintain optimal performance and prevent fire hazards.

- **Removal:** Locate the release latches on the filters. Push or pull the latch to disengage the filter and carefully lower it.
- **Cleaning:** Wash the filters by hand in hot soapy water or in a dishwasher on a low-temperature cycle. Ensure they are completely dry before re-installing.
- **Re-installation:** Insert the dry filters back into their slots and secure them with the latches.

5.3 Carbon Filters (if applicable)

If your hood is used in recirculation mode (without external venting), it will be equipped with activated carbon filters to remove odors. These filters cannot be washed and must be replaced approximately every 3-6 months, depending on usage. Refer to your dealer for replacement filters.

5.4 LED Light Replacement

LED lights are long-lasting and generally do not require frequent replacement. If a light fails, contact a qualified service technician for replacement to ensure proper electrical safety.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Hood does not start.	No power supply. Power cord not properly connected.	Check if the appliance is plugged in. Check the circuit breaker/fuse.

Problem	Possible Cause	Solution
Poor extraction performance.	Grease filters are clogged. Incorrect fan speed selected. Obstruction in the ducting.	Clean the grease filters. Select a higher fan speed. Check for blockages in the exhaust duct.
Lights not working.	Light bulb faulty. Electrical connection issue.	Contact service for LED replacement. Check power supply.
Excessive noise.	Loose components. Obstruction in the fan. Incorrect installation.	Ensure all parts are securely fastened. Check for foreign objects in the fan area (with power off). Consult installation guide or technician.

7. SPECIFICATIONS

Here are the technical specifications for the Electrolux LFG337S built-in hood:

- Brand:** Electrolux
- Model:** LFG337S
- Material:** Stainless Steel
- Airflow Capacity:** 400 Cubic meters per hour
- Special Feature:** Automatic fan on/off, LED lighting
- Color:** Grey (referring to the stainless steel finish)
- Dimensions:** 70x28 cm (approximate, for built-in fit)
- Power Supply:** Refer to rating plate on the appliance for specific voltage and frequency.

8. WARRANTY AND SUPPORT

Your Electrolux LFG337S hood comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty duration and coverage.

For technical assistance, spare parts, or to schedule a service appointment, please contact Electrolux customer support. You can find contact information on the official Electrolux website or in the documentation provided with your appliance.

When contacting support, please have your appliance model number (LFG337S) and serial number ready. The serial number is typically located on a rating plate inside the hood, often visible after removing the grease filters.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BCWS47T4>

More documents and user manuals: <https://manuals.plus/>