

TASVAC MC607B

TASVAC MC607B Corded Stick Vacuum Cleaner User Manual

Model: MC607B | Brand: TASVAC

INTRODUCTION

Thank you for choosing the TASVAC MC607B Corded Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Always unplug the appliance from the electrical outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

PACKAGE CONTENTS

Please check the box for the following components:

- 1 x TASVAC MC607B Corded Stick Vacuum Cleaner
- 1 x Floor Brush
- 1 x Crevice Tool
- 1 x HEPA Filter (pre-installed)
- 1 x User Manual



Image: The TASVAC MC607B vacuum cleaner shown with its main components including the floor brush and crevice tool.

PRODUCT FEATURES

- **Powerful Suction:** Equipped with a 400W motor, providing up to 16 KPa of strong suction for effective cleaning on various surfaces.
- **Extended Reach:** Features a 20-foot (6-meter) power cord for a wide cleaning radius without frequent outlet changes.
- **Lightweight Design:** Weighs only 2.8 pounds (1.3 kg), making it easy to maneuver and carry.
- **High-Efficiency Filtration:** Advanced HEPA filtration system captures fine dust and allergens, exhausting cleaner air.
- **Large Dust Cup:** 1-liter capacity dust cup reduces the frequency of emptying during cleaning tasks.
- **Versatile 3-in-1 Design:** Easily converts between stick vacuum and handheld vacuum for floor, stair, and

above-floor cleaning.

- **Flexible Maneuverability:** The floor brush pivots 90 degrees for easy cleaning under furniture and around obstacles.



The image shows a blue and black TASVAC MC607B stick vacuum cleaner in its full stick configuration, positioned on a light-colored wooden floor. The vacuum is angled towards the right, with its motor unit at the top and the cleaning head at the bottom. The cleaning head is blue and black, with a visible roller and a blue light effect. The floor is covered with a layer of brown and yellow debris, including crumbs and small particles. To the right of the vacuum, there are three circular inset images showing different types of debris: the top one shows a mix of small brown and white particles, the middle one shows a dark, fibrous mass, and the bottom one shows a pile of yellowish-brown crumbs. The background is a blurred view of a white sofa and a person's legs in white sneakers.

16000pa

Starke Saugleistung

Geeignet für Hartböden und Teppiche.
Beseitigen Sie mühelos Haare, Staub,
Snackkrümel, Kaffeebohnen usw.

Image: The TASVAC MC607B vacuum cleaner in its full stick configuration, demonstrating its use on a hard floor.

20Ft Extra Long Cord

✓	✗
Ours	Others
20ft	15ft



Image: A person using the TASVAC MC607B vacuum, highlighting the extended reach provided by its 20-foot power cord.



Image: A composite image illustrating the vacuum's versatility, showing it as a stick vacuum, a handheld vacuum for upholstery, and for cleaning stairs.

SETUP AND ASSEMBLY

Your TASVAC MC607B vacuum cleaner is designed for easy assembly. Follow these steps:

1. **Attach the Floor Brush:** Align the floor brush with the main vacuum body (dust cup and motor unit) and push firmly until it clicks into place.
2. **Attach the Extension Wand (for stick mode):** Insert the extension wand into the main vacuum body. Then, attach the handle to the other end of the extension wand. Ensure all connections are secure.
3. **For Handheld Mode:** Detach the extension wand and floor brush. You can directly attach the crevice tool to the main vacuum body for handheld cleaning.
4. **Cord Management:** Wrap the power cord around the cord hooks on the extension wand for neat storage.



Image: Visual guide demonstrating the assembly of the vacuum into stick mode and its conversion to handheld mode with different attachments.

OPERATING INSTRUCTIONS

Using the Stick Vacuum

1. Ensure the vacuum is fully assembled in stick mode.
2. Unwind the power cord and plug it into a suitable electrical outlet.
3. Press the power button located on the handle to turn on the vacuum.
4. Guide the floor brush over the desired cleaning area. The powerful suction is suitable for hard floors and low-pile carpets.
5. When finished, press the power button again to turn off the vacuum and unplug it from the outlet.
6. Wrap the power cord neatly around the cord hooks for storage.

Using the Handheld Vacuum

1. Detach the extension wand and floor brush from the main vacuum body.
2. Attach the crevice tool directly to the main vacuum body for cleaning tight spaces, upholstery, or car interiors.
3. Plug the vacuum into an electrical outlet and press the power button.
4. Use the handheld unit to clean surfaces as needed.
5. After use, turn off the vacuum, unplug it, and remove the attachment.



3-IN-1 Ultraleicht Stielstaubsauger & Handstaubsauger

 16000Pa Saugleistung	 400W Leistung
 80dB Lautstärke	 HEPA Filtration
 6M Kabellänge	 1L



Image: The vacuum in action, demonstrating its strong suction power on a hard floor, effectively picking up debris.



Image: The vacuum cleaning different types of debris like hair, dust, crumbs, and coffee beans from both hard floors and carpets.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dust Cup

1. Ensure the vacuum is unplugged from the power outlet.
2. Press the dust cup release button to detach the dust cup from the main unit.
3. Hold the dust cup over a trash bin and press the bottom release button to open the lid and empty the contents.
4. Close the dust cup lid securely and reattach the dust cup to the main unit until it clicks.

Größere Staubbehälter

Weniger Fahrten zum Müll können
Zeit und Energie sparen. Beenden Sie Ihre
Hausreinigung schneller.



Unsere **1L**



Andere **0.4L**

Image: The 1-liter dust cup of the TASVAC MC607B being emptied into a waste bin, demonstrating its large capacity.

Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly (after every 2-3 uses or as needed) to maintain suction power.

1. Unplug the vacuum and detach the dust cup.
2. Twist and pull out the HEPA filter assembly from inside the dust cup.
3. Tap the filter gently over a trash bin to remove loose dust.
4. Rinse the HEPA filter under cold running water. Do not use detergent.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use the vacuum with a wet filter.
6. Once dry, reinsert the filter into the dust cup and reattach the dust cup to the vacuum.

Effizienter Filtersystem



Image: A diagram illustrating the multi-stage filtration system, including the HEPA filter and sponge filters, within the TASVAC MC607B vacuum.



Image: A pair of replacement HEPA filters, indicating the removable and replaceable nature of the filtration component.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Not plugged in; power outlet issue; damaged cord/plug.	Ensure plug is securely in outlet. Test outlet with another appliance. Inspect cord and plug for damage; if damaged, do not use.
Loss of suction.	Full dust cup; clogged filter; blockage in nozzle/hose.	Empty dust cup. Clean or replace HEPA filter. Check for and remove any blockages in the floor brush, extension wand, or main unit intake.
Unusual noise.	Blockage; motor issue.	Turn off and unplug the vacuum. Check for and remove any blockages. If noise persists, contact customer support.
Dust escaping from vacuum.	Dust cup not properly closed; filter not installed correctly or damaged.	Ensure dust cup is securely attached and closed. Check that the HEPA filter is correctly installed and not damaged. Replace filter if necessary.

SPECIFICATIONS

Brand	TASVAC
Model Number	MC607B
Color	Sky Blue
Power	400 Watts
Voltage	400 Volts
Suction Power	16 KPa
Dust Cup Capacity	1 Liter
Power Cord Length	20 feet (approx. 6 meters)
Item Weight	1.94 Kilograms (approx. 4.28 lbs)
Product Dimensions (L x W x H)	10.16 x 15.24 x 5.08 cm (approx. 4 x 6 x 2 inches)
Noise Level	70 Decibels
Filtration System	HEPA Filter
Power Source	Corded Electric
Surface Recommendation	Hard floors, low-pile carpets, cars, tables, chairs, etc.

Note: Specifications are subject to change without notice. The listed voltage of 400 Volts is as per the provided product data.

WARRANTY AND SUPPORT

TASVAC products are manufactured to high-quality standards. For warranty information, technical support, or any questions regarding your product, please refer to the warranty card included in your package or contact TASVAC

customer service through the retailer where you purchased the product.

Please have your model number (MC607B) and purchase date ready when contacting support.